 
 
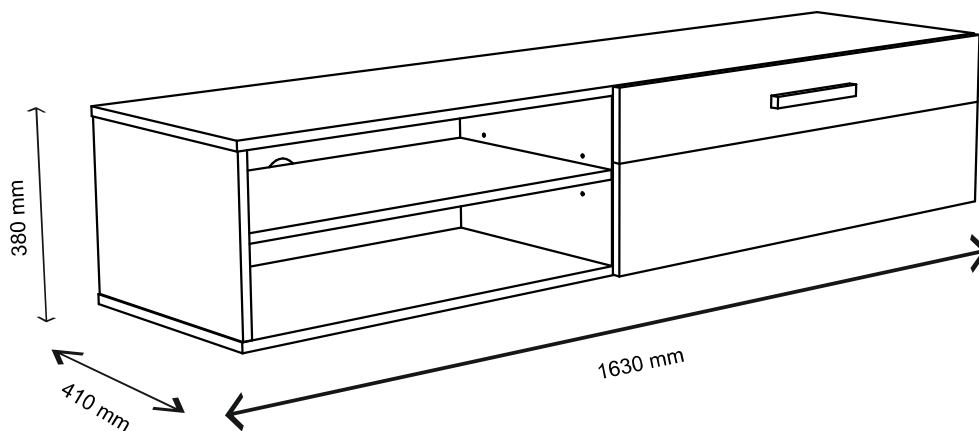 
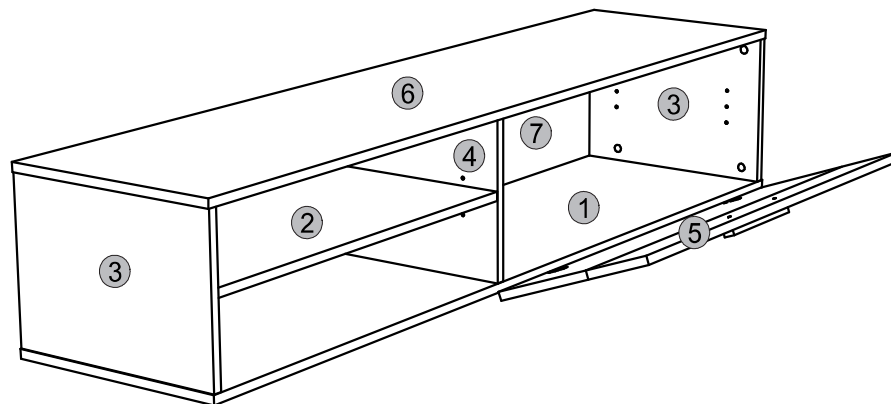 







# ΟΔΗΓΙΕΣ ΑΡΜΟΛΟΓΗΣΗΣ


## SOLO ΕΠΙΠΛΟ TV L OR R

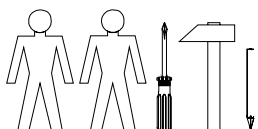

   
						ΠΑΚΕΤΟ
1	1630	397	16	1	S - 201	1/1
2	710	392	16	1	S - 301	1/1
3	283	396	16	2	S - 101	1/1
4	283	393	16	1	S - 103	1/1
5	313	898	16	1	S - 001	1/1
6	1630	397	16	1	S - 202	1/1
7	301	1612	3	1	S - 601	1/1

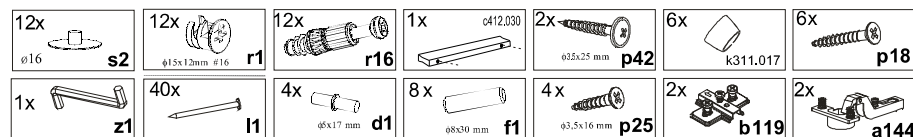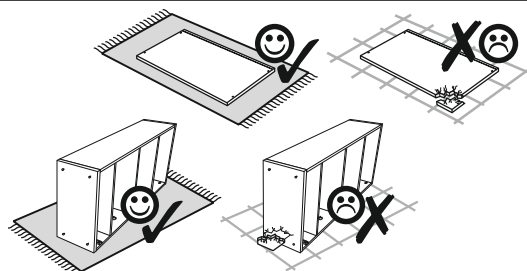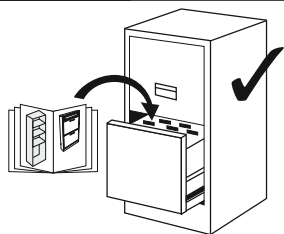


1

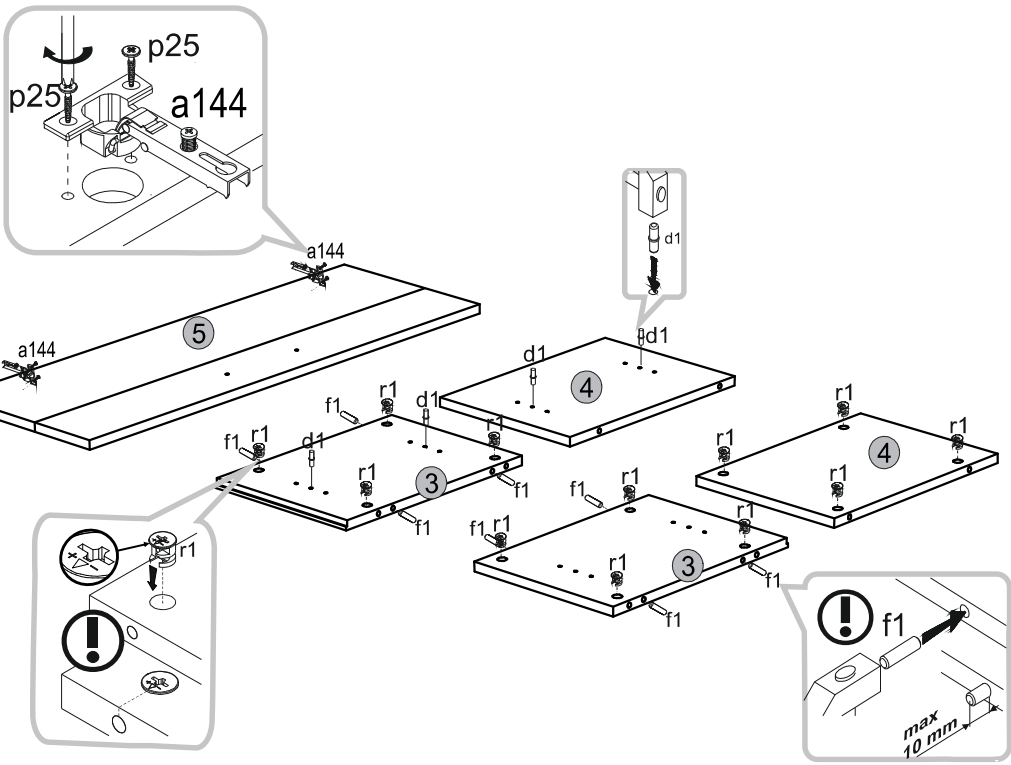 


3

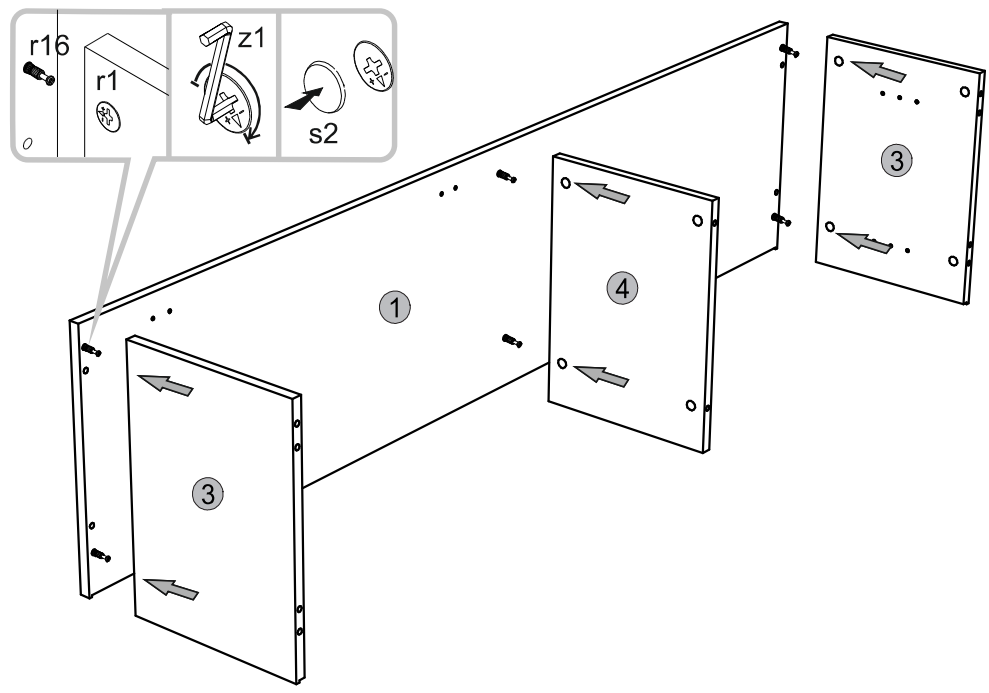 

2

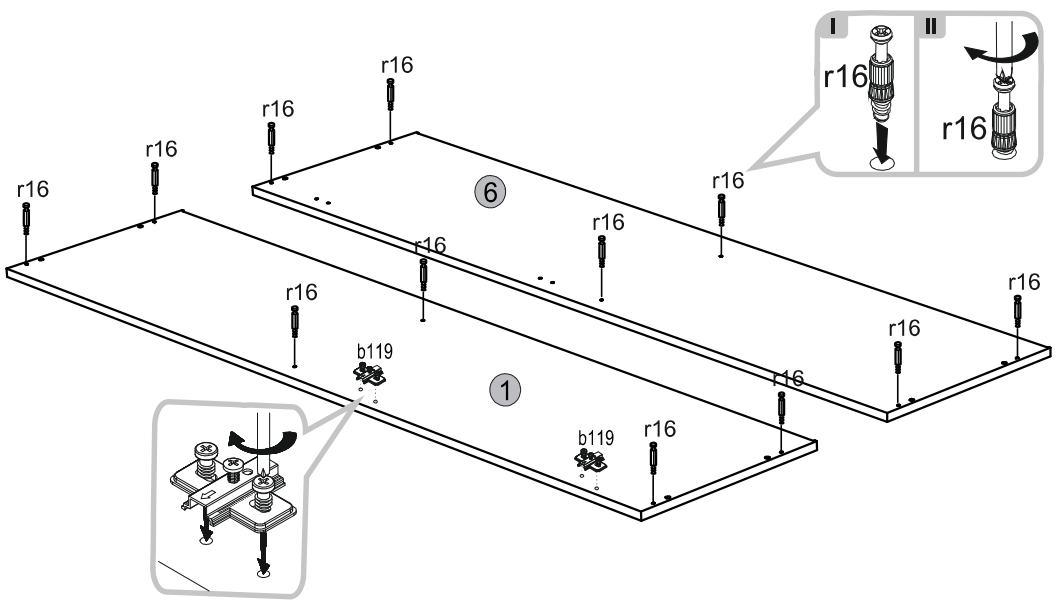 


4



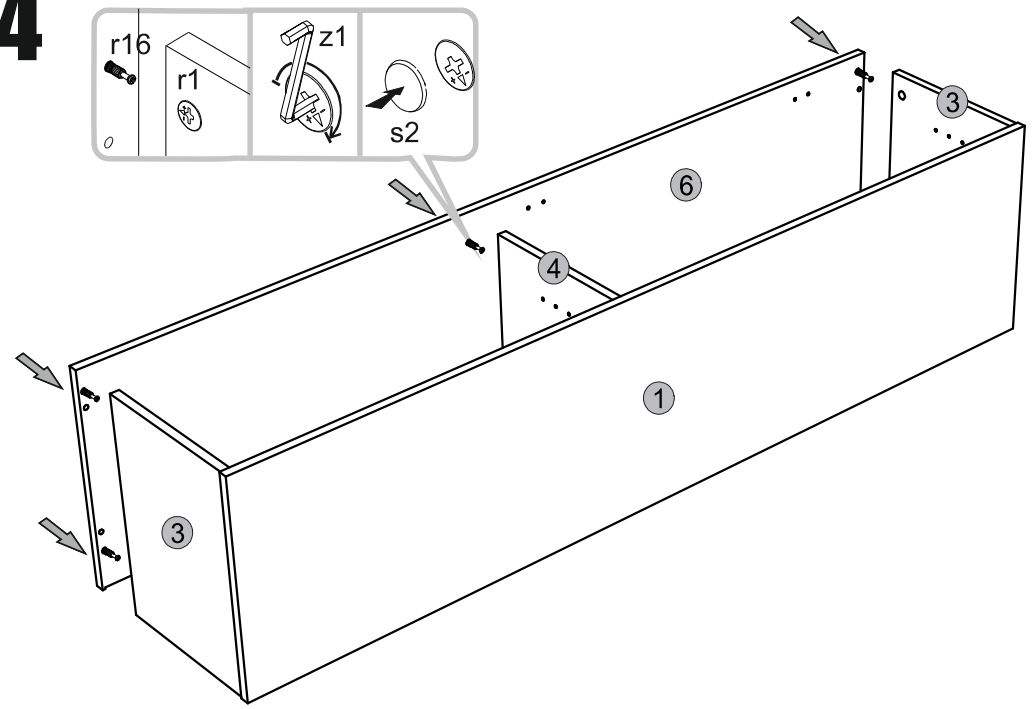 




# 7

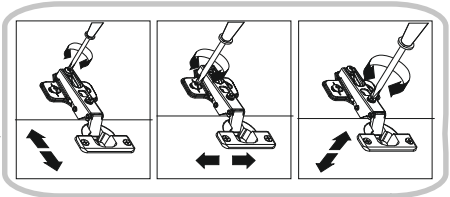 

## I

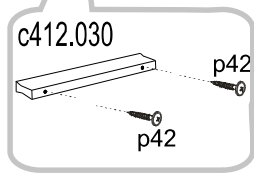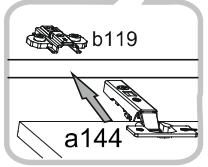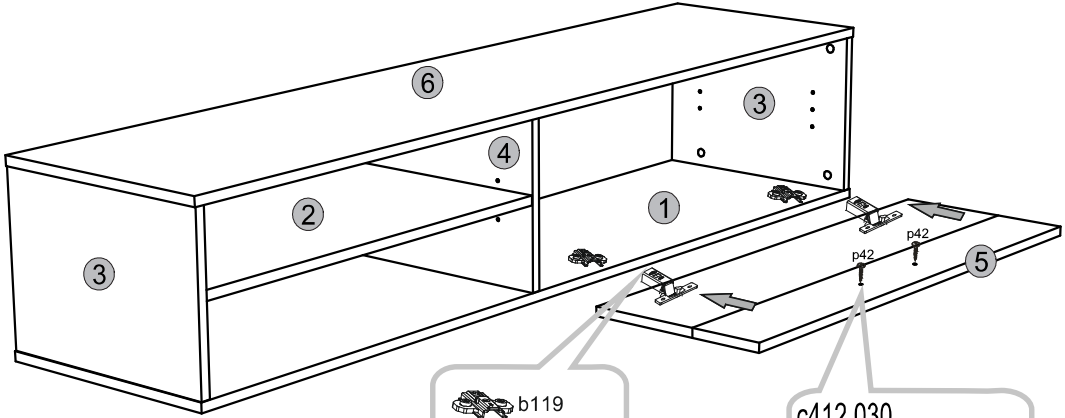   

## II

