 
 
 
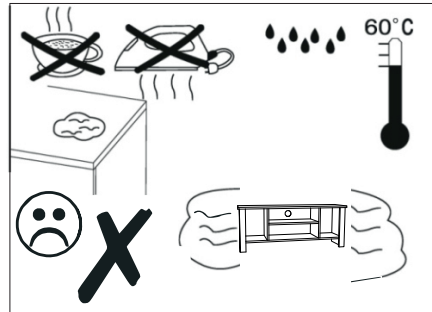 
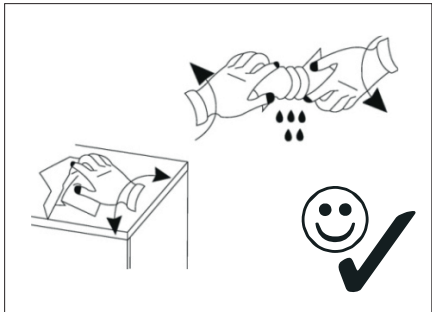 
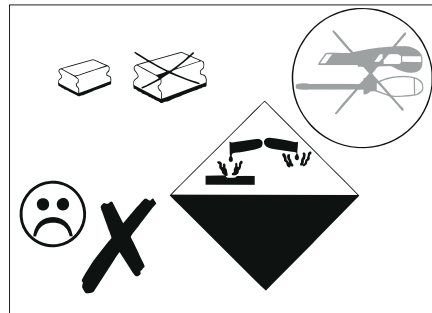 
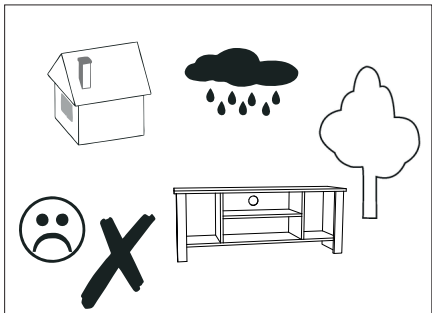 
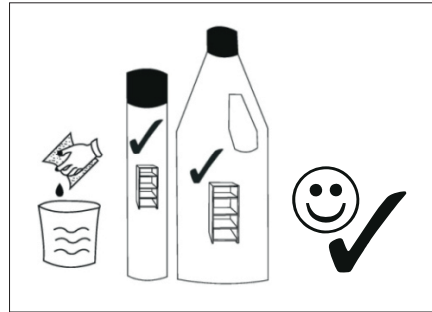 



 

 


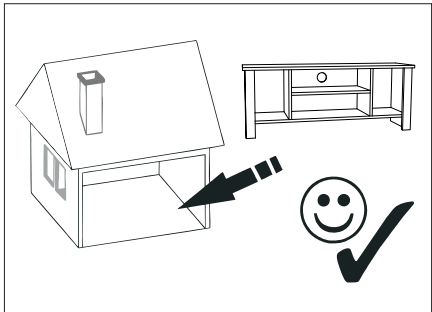

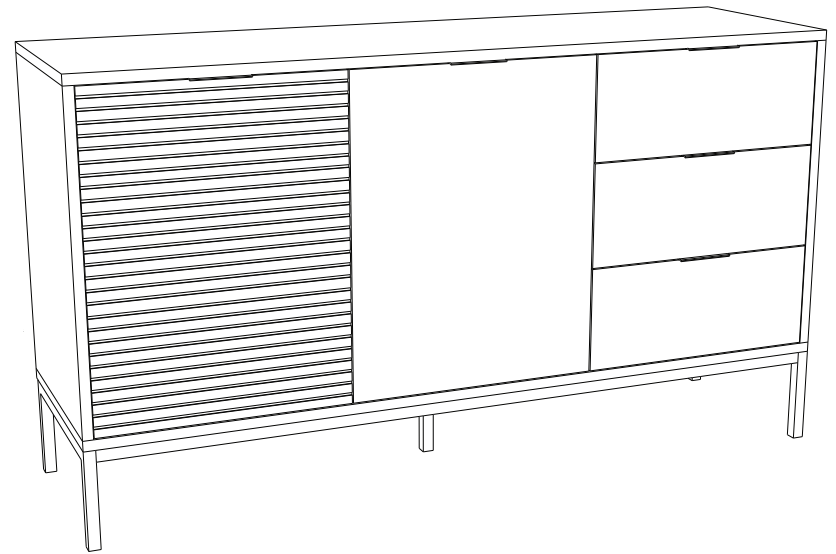

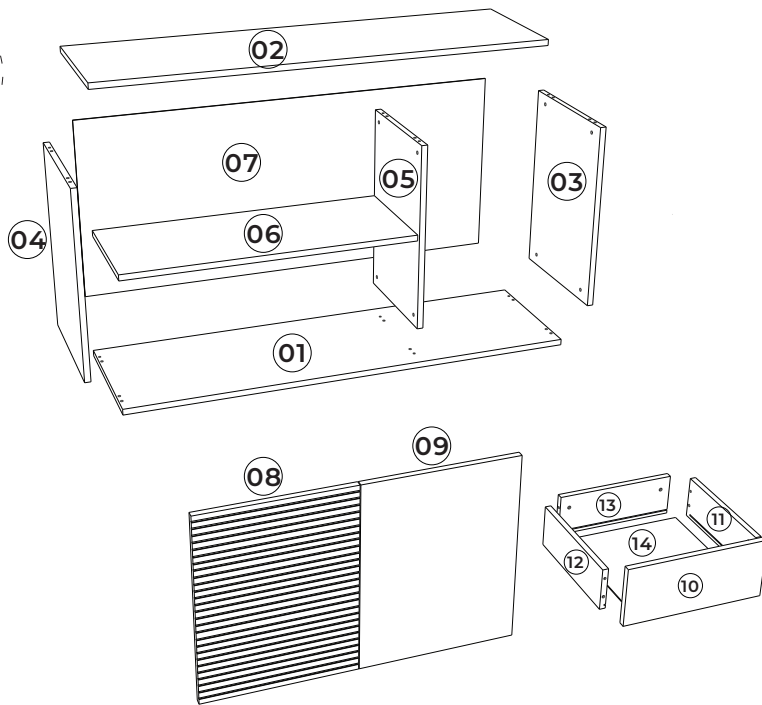

197-000183



Instruction Manual





A01 24x  *14 mm	A02 24x  *5x45 mm	A03 24x  *8x30 mm	A04 24x 
A10 24x  *3.5x18 mm	A13 4x 	A14 4x 	A15 8x 
A16 4x 	A17 14x  *5x35 mm	A18 4x  *6x45 mm	A19 5x 



Important information
Read carefully.
Keep this information for further reference.

 
GB WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.


Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer.

11.


x3

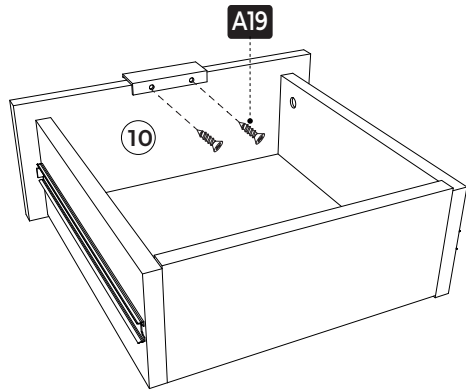

 
12.

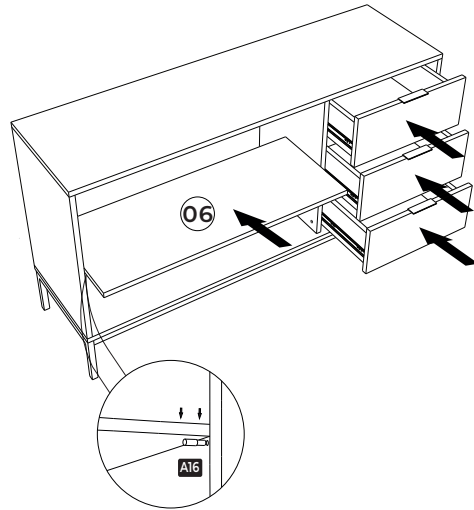

 
13.

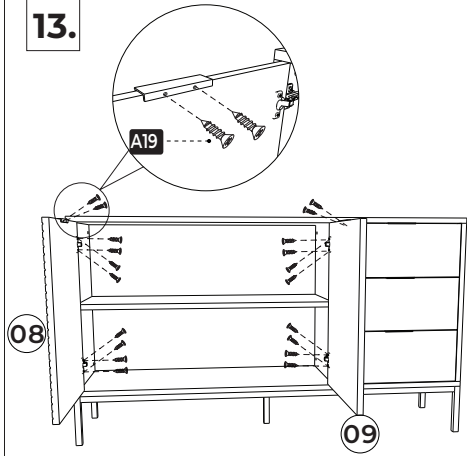

 
14.

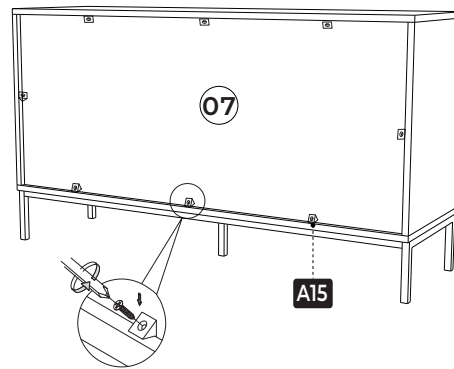

 
1.

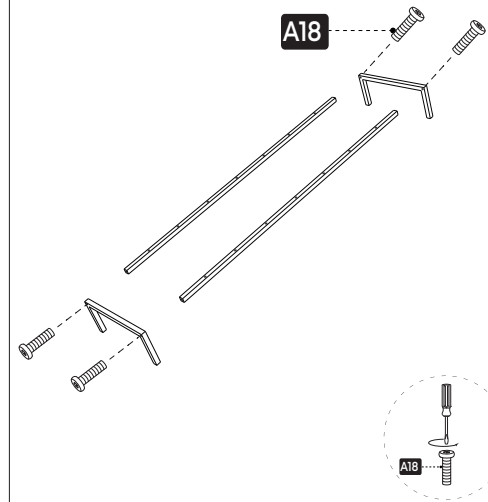


 
2.

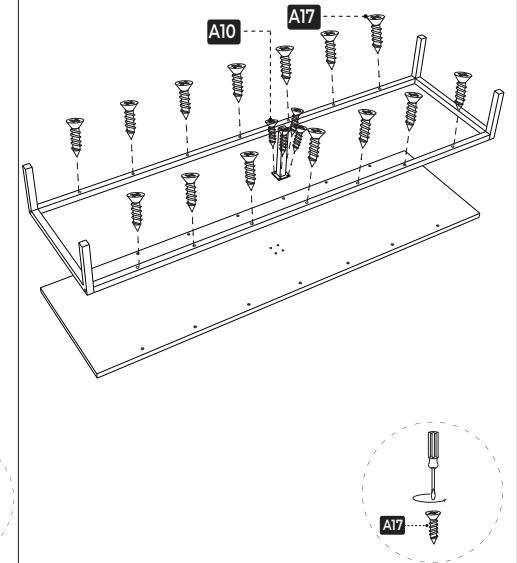

 
3.

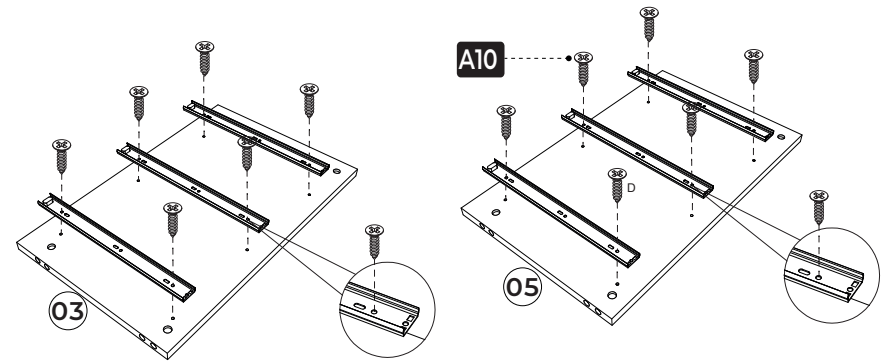

 
 
4.

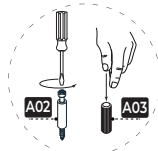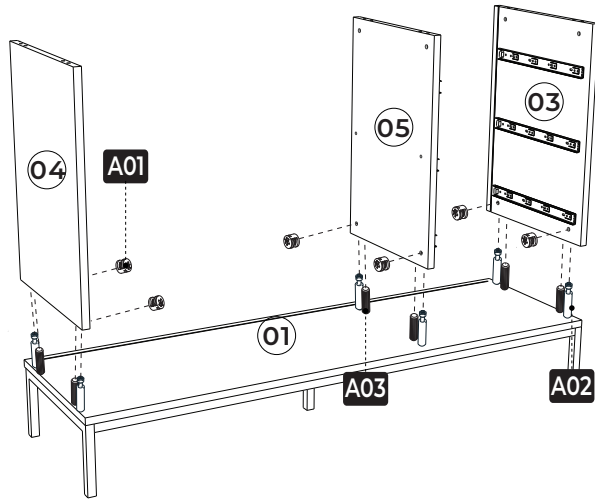

 5.


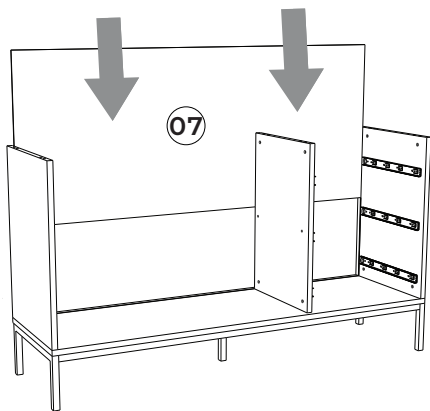


  6.

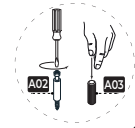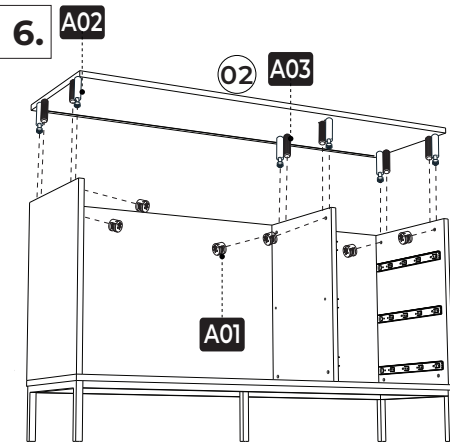



7.

  x3

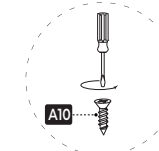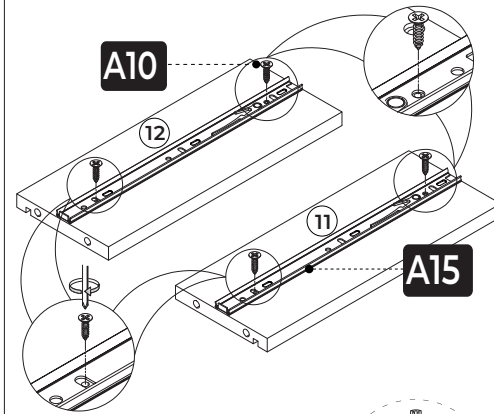


8.

  x3

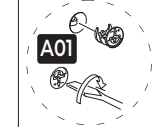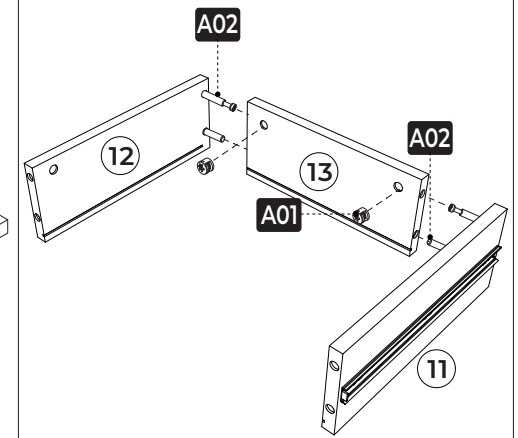

9.

 x3

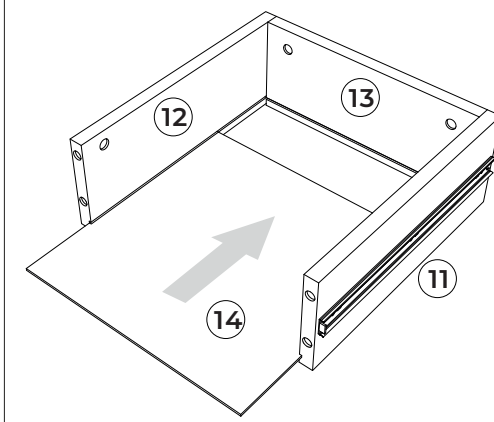

10.

x3

