 
 
 
 
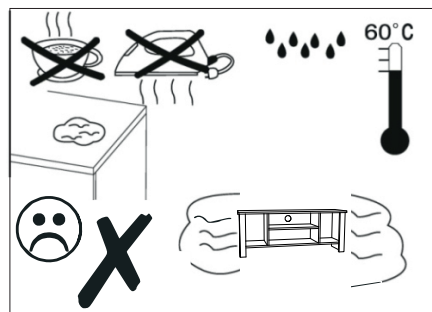 
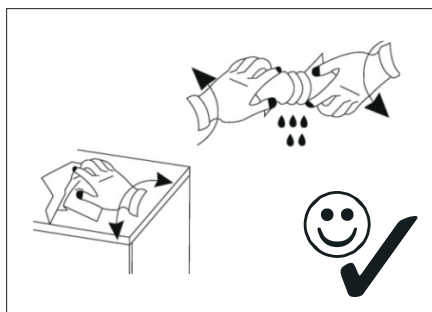 
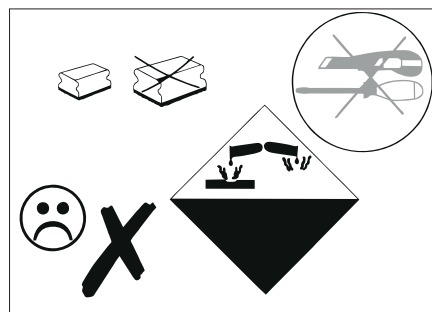 


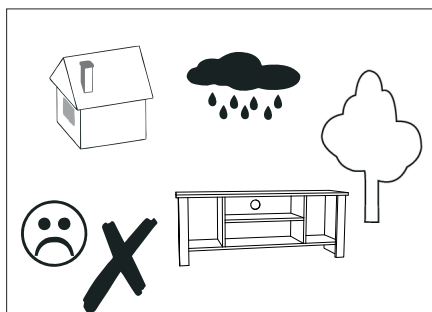

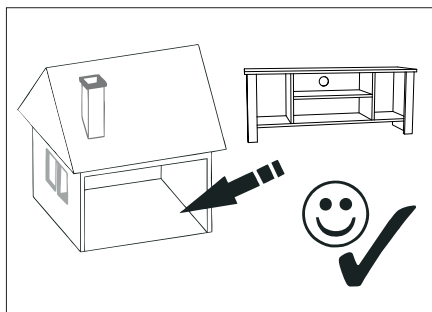

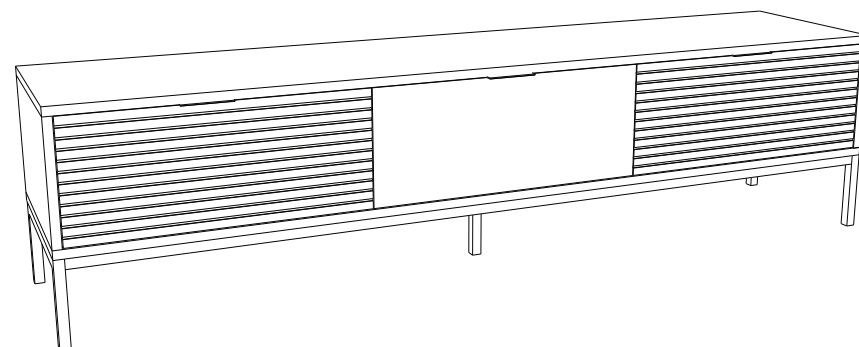

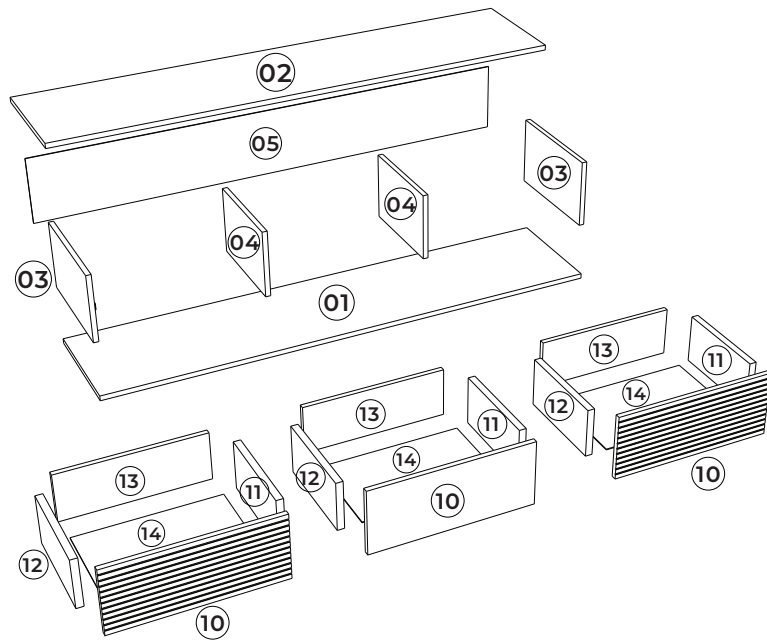


197-000184



 Instruction Manual





A01 28x  *14 mm	A02 28x  *5x45 mm	A03 28x  *8x30 mm	A04 28x 
A10 36x  *3.5x18 mm	A15 8x 	A17 16x  *5x35 mm	A18 4x  *6x45 mm
A19 3x 			

 
 
 
 
 
 
 
 


Important information
Read carefully.
Keep this information for further reference.




GB WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.


Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer.

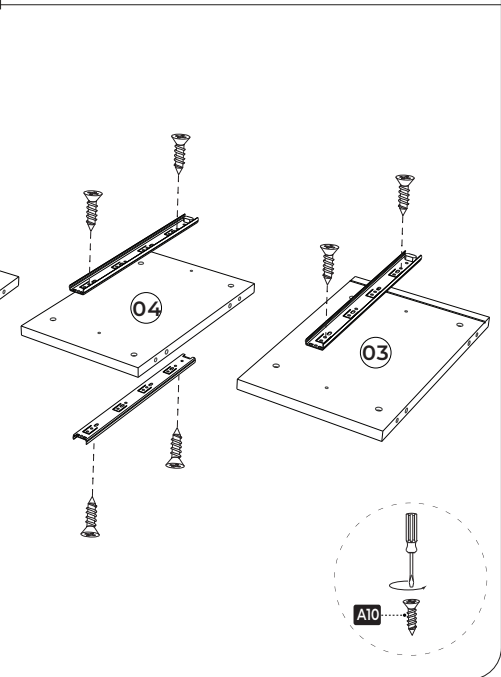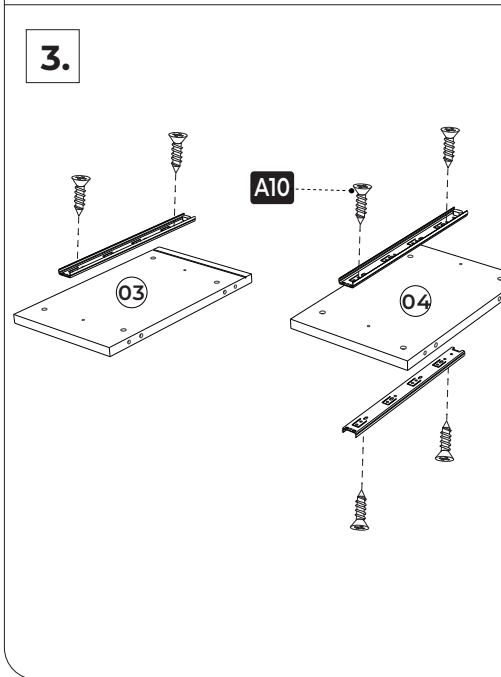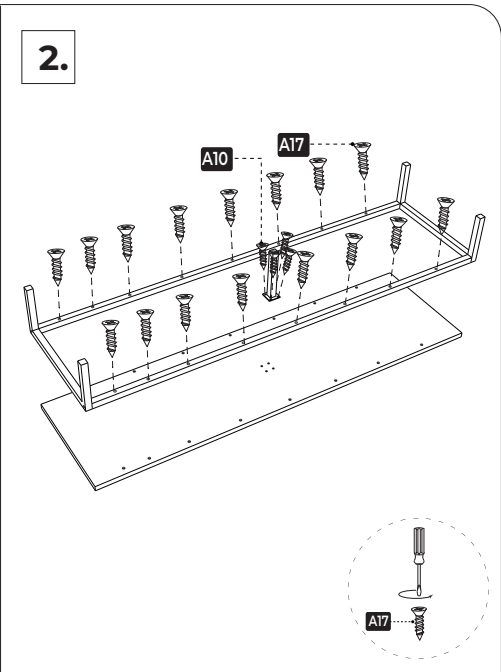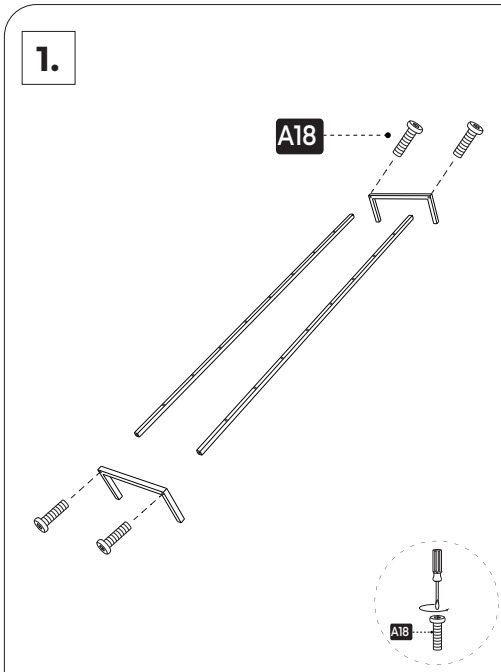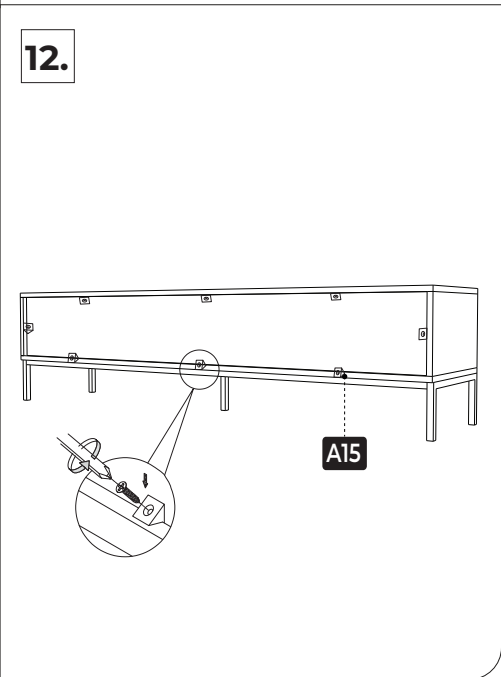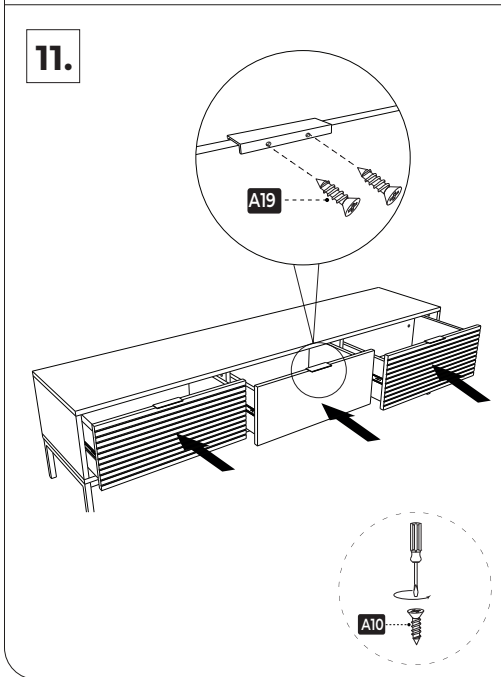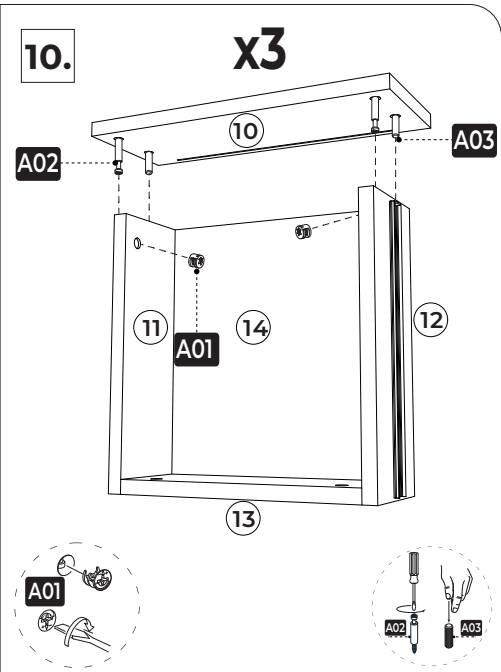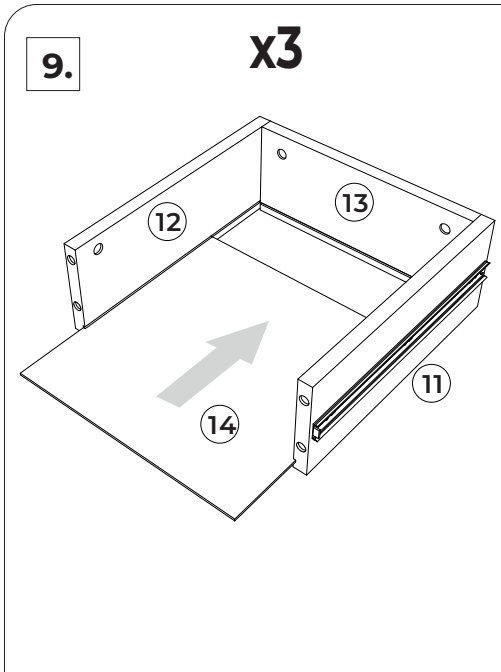

  
 
4.

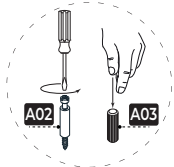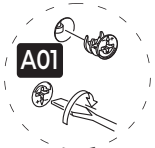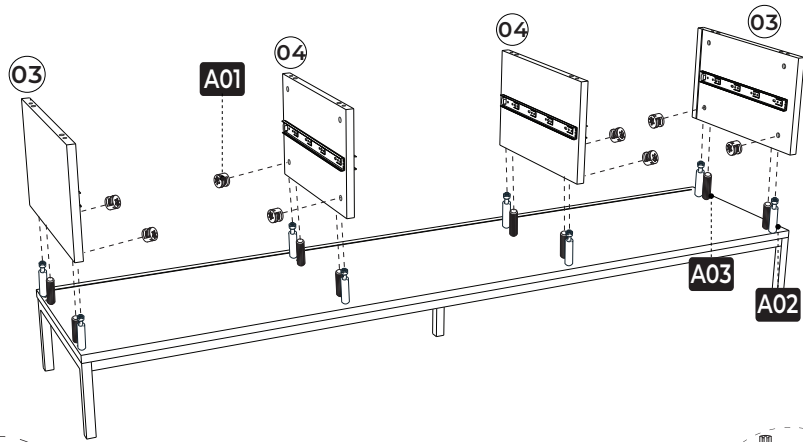

 5.


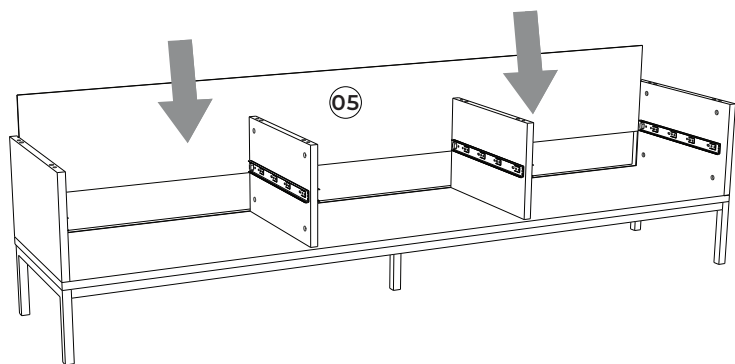


  6.

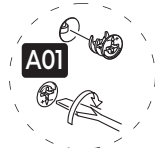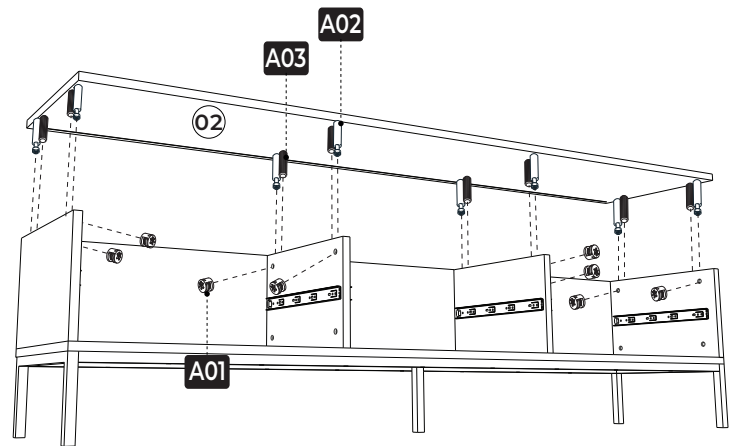

7.

  x3

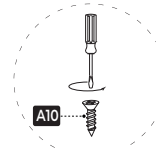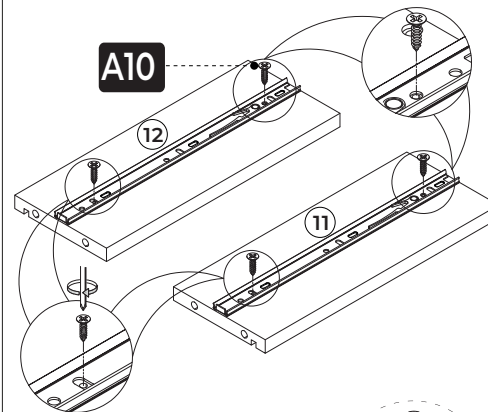

8.

x3

