

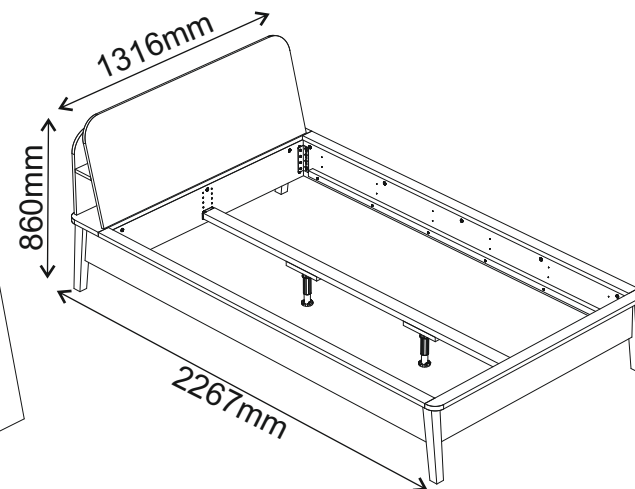
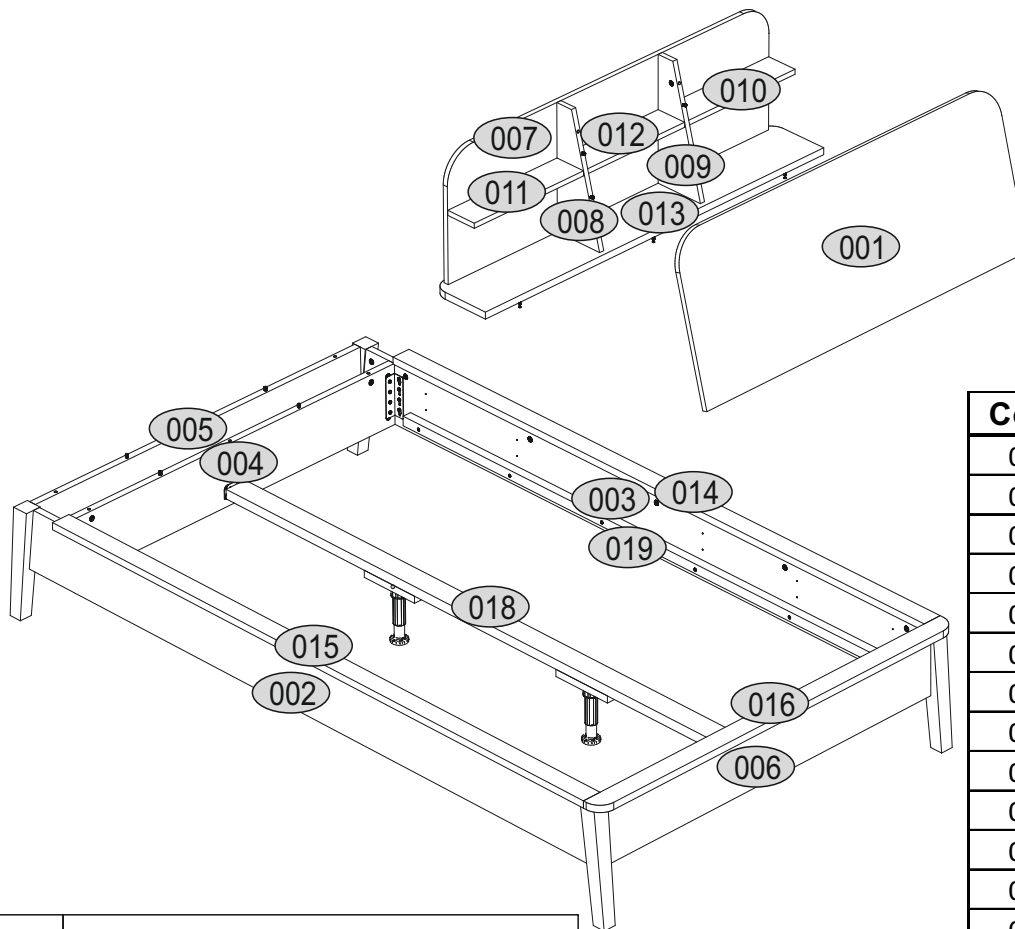



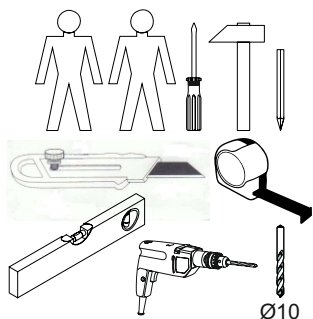


# Installation manual

## Bed 120

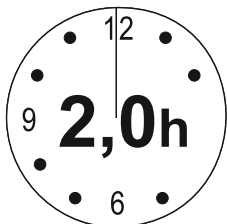


Code	Dimensions			Package	
001	1246	500	16	1	1/2
002	2136	190	22	1	2/2
003	2136	190	22	1	2/2
004	1206	190	22	1	1/2
005	1206	190	22	1	1/2
006	1206	190	22	1	1/2
007	1246	405	16	1	1/2
008	405	165	16	1	2/2
009	405	165	16	1	2/2
010	418	103	16	1	2/2
011	418	103	16	1	2/2
012	376	103	16	1	2/2
013	1316	207	22	1	1/2
014	2000	60	22	1	2/2
015	2000	60	22	1	2/2
016	1316	60	22	1	1/2
017	192	70	22	2	1/2
018	1984	70	30	1	2/2
019	1880	28	30	2	2/2
accessories				1	1/2

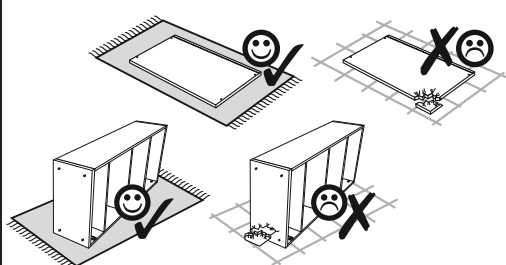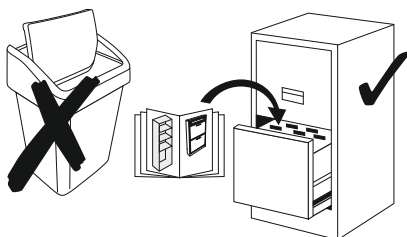


# Accessories:


<p>14x e1 Ø7x50</p> 	<p>51x f1 Ø8x30</p> 	<p>47x r16</p> 	<p>8x r1 Ø15x12</p> 
<p>3x n40</p> 	<p>1x z1</p> 	<p>8x e3 Ø6.3x13</p> 	<p>30x p25 Ø3,5x16</p> 
<p>12x p10 Ø4x40</p> 	<p>18x p21 Ø4x30</p> 	<p>2x n34<sup>1</sup></p> 	<p>2x n34<sup>2</sup></p> 
<p>4x n221</p> 	<p>2x n63</p> 	<p>16x e2 Ø6.3x13</p> 	<p>39x r3</p> 
<p>4x p62 Ø4x45</p> 	<p>2x k8<sup>1</sup></p> 	<p>2x k8<sup>2</sup></p> 	<p>43x s2</p> 
<p>10x s1</p> 			

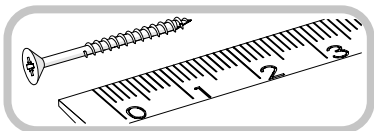


# 1

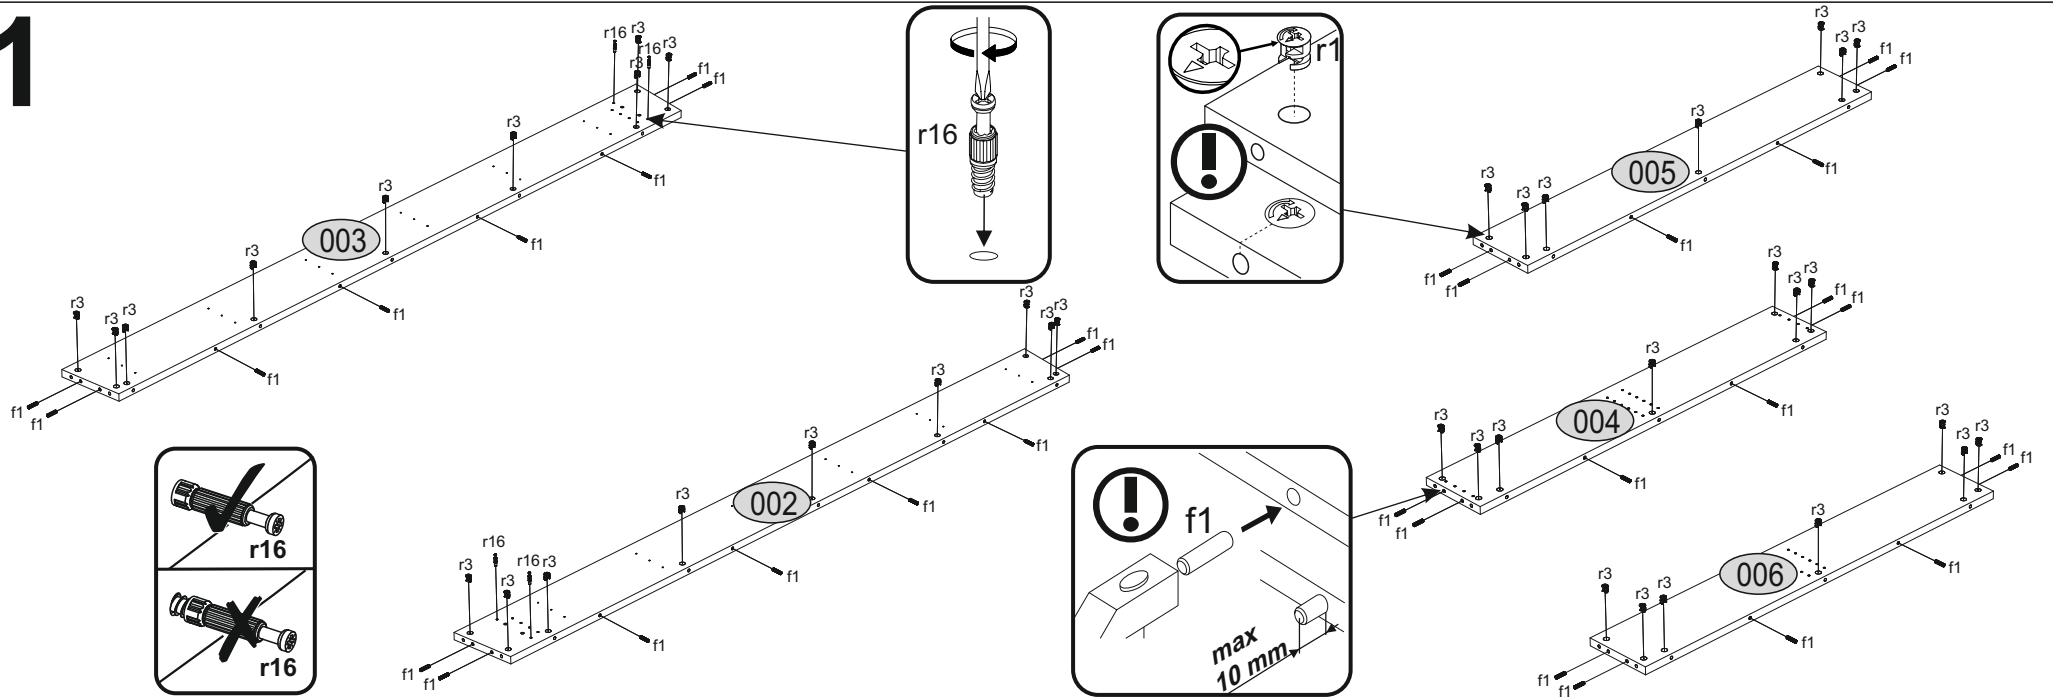


# 2

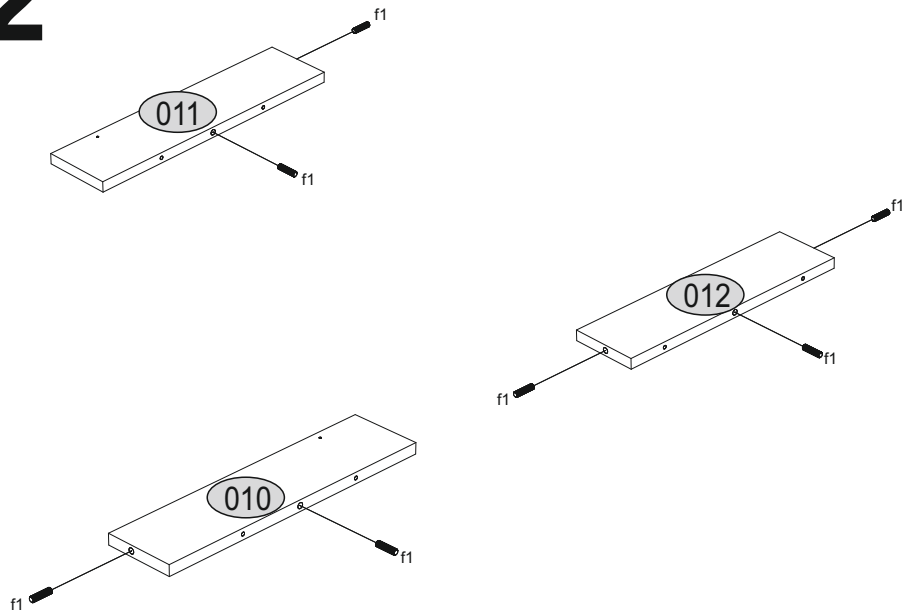


# 3

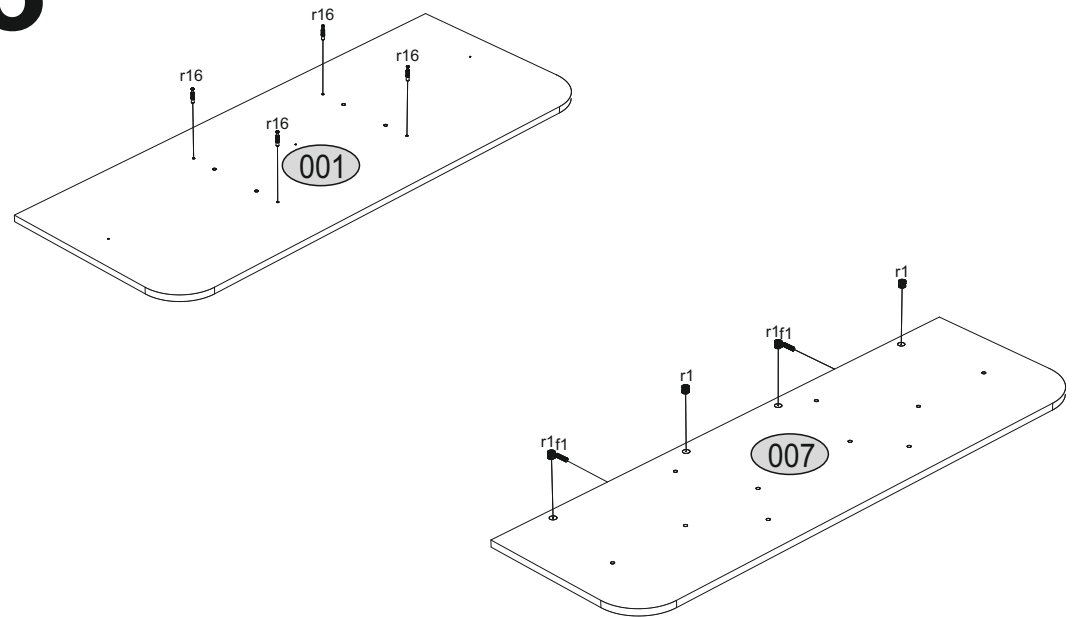


4

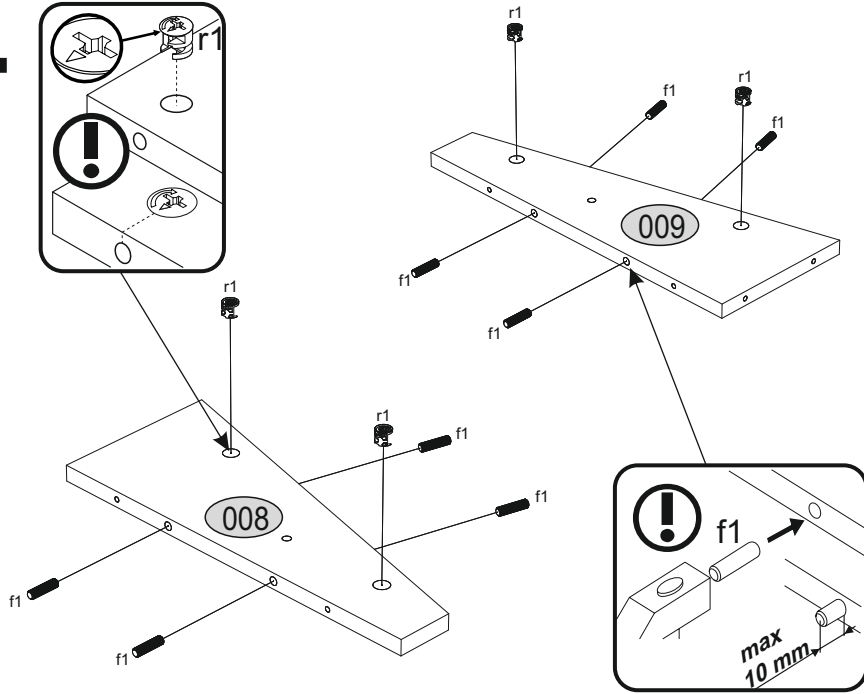


5

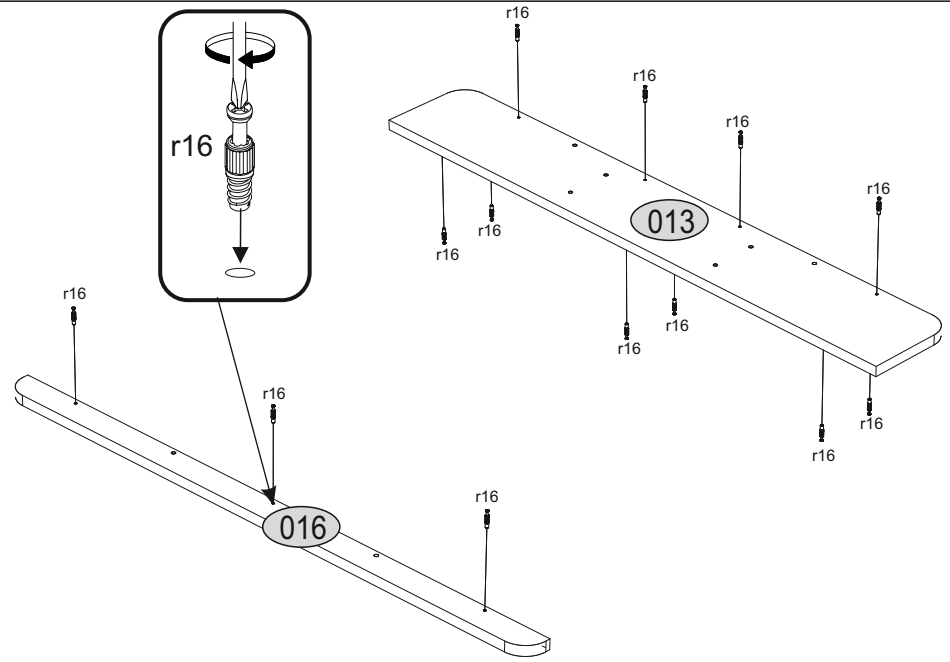


6

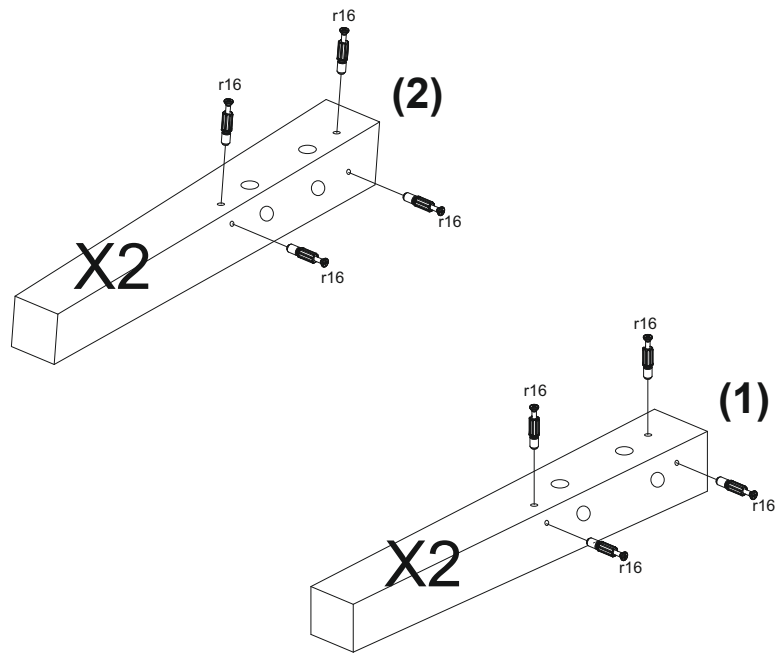


7

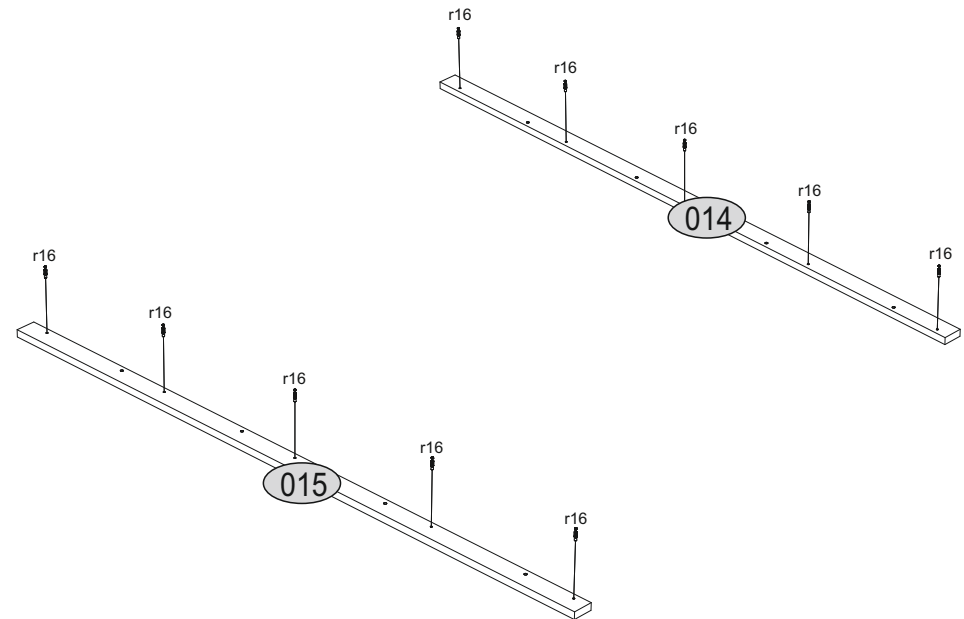


8

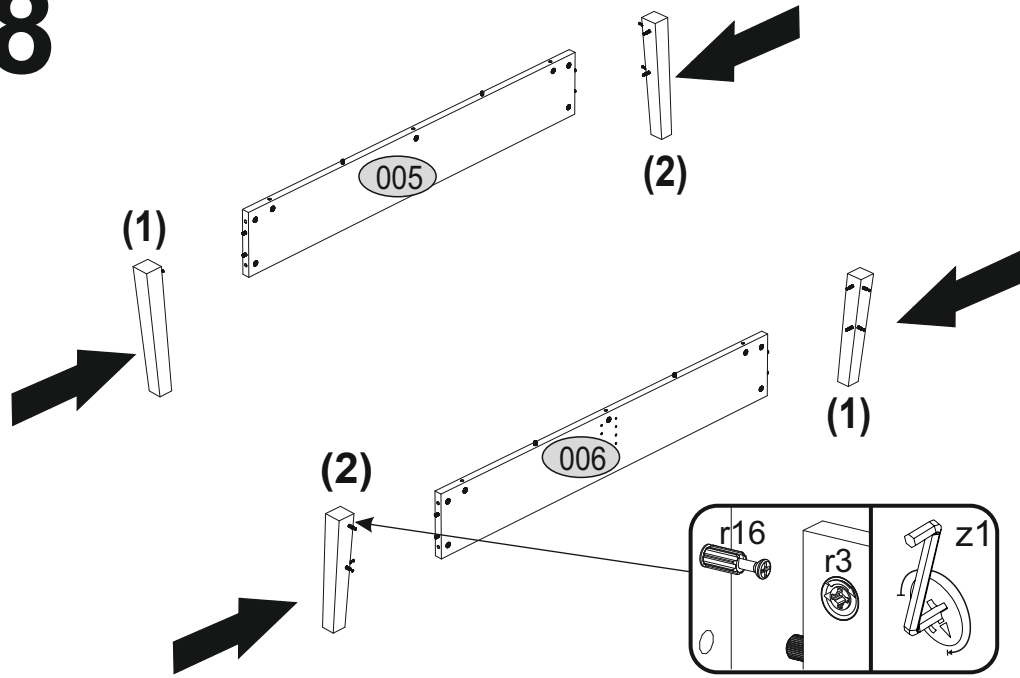


9

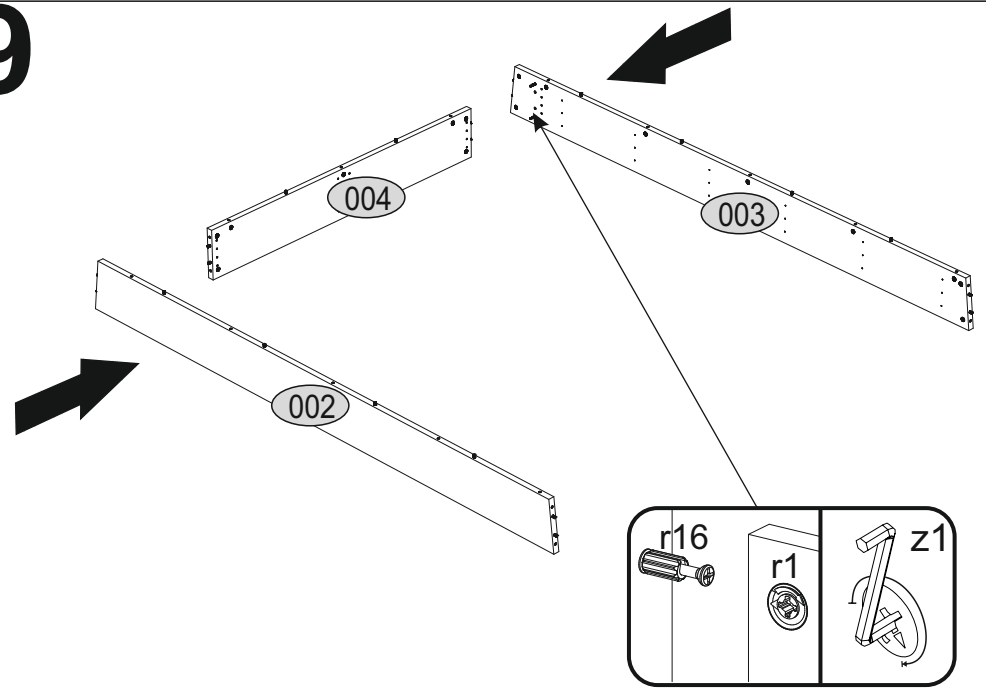


10

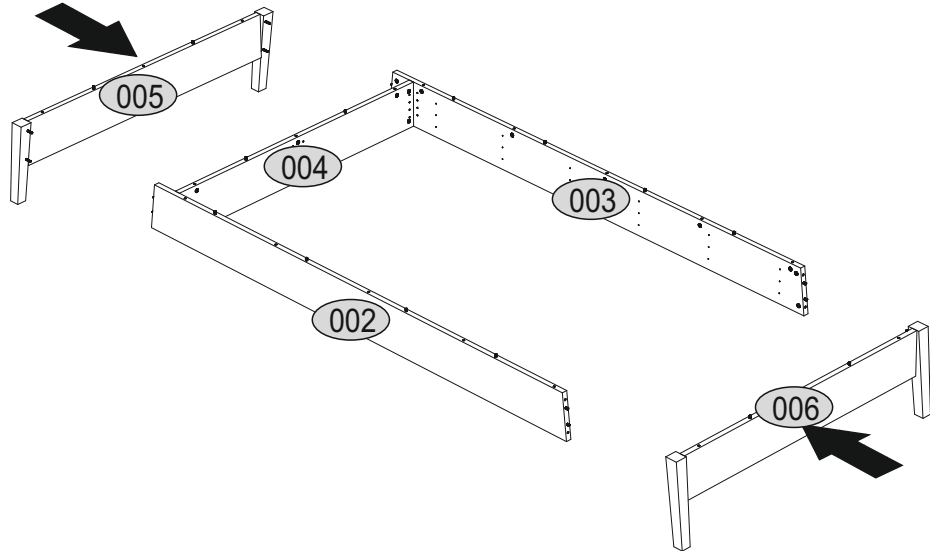


11

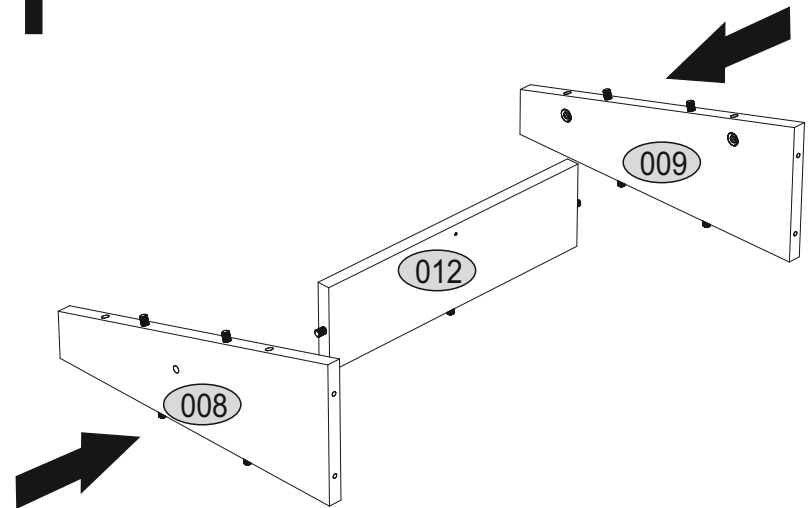


# 12

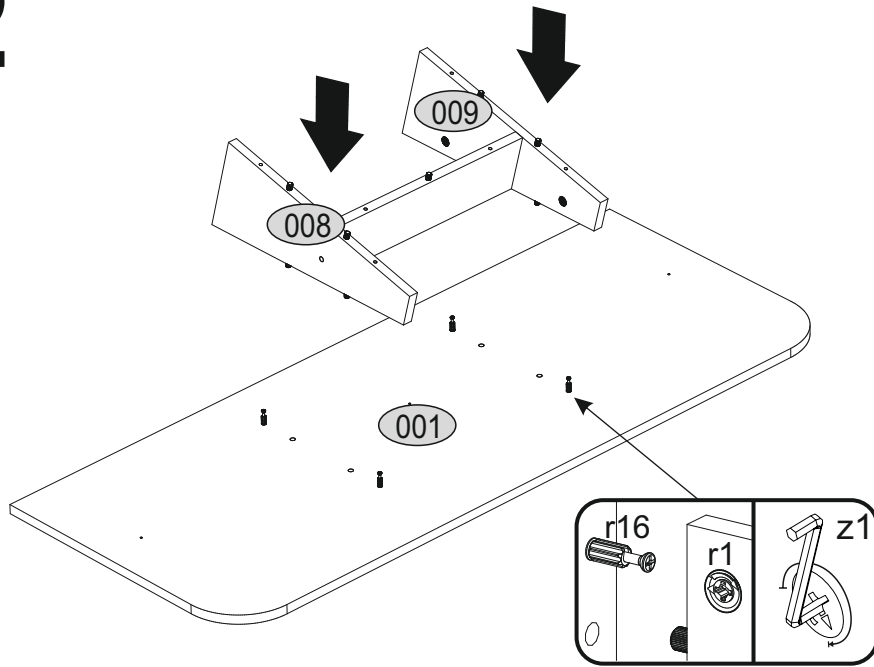


# 13

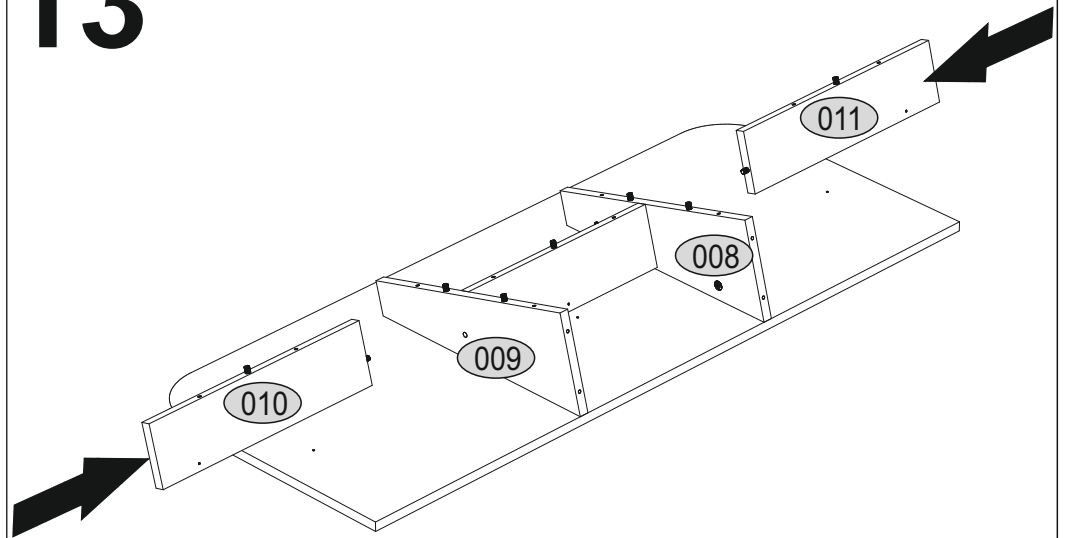


# 14

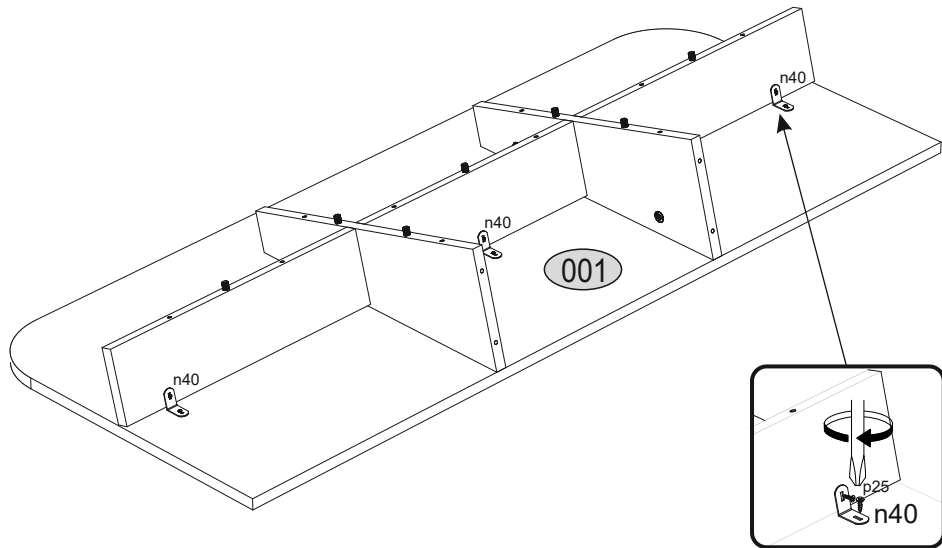


# 15

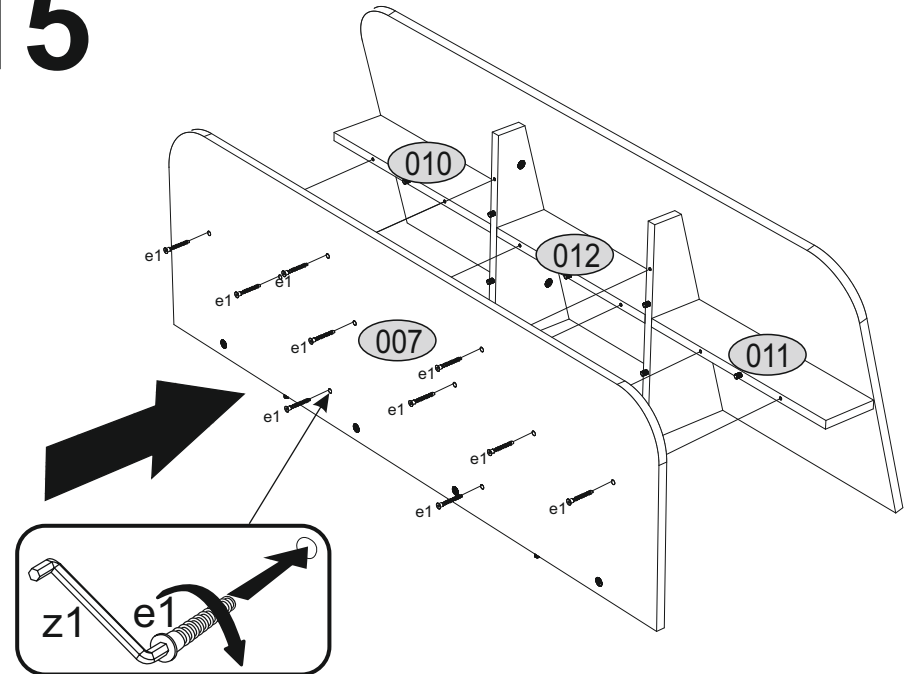


# 16

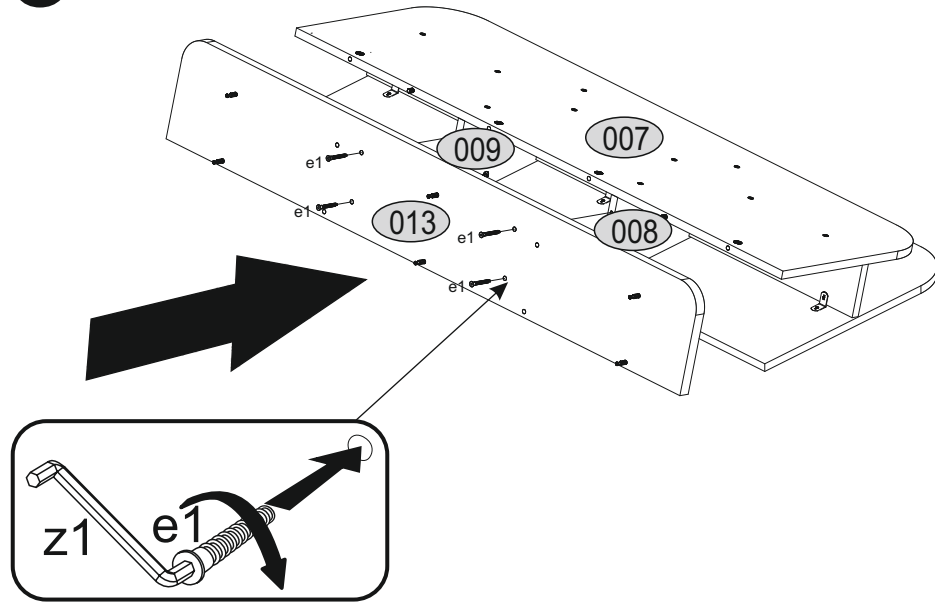


# 17

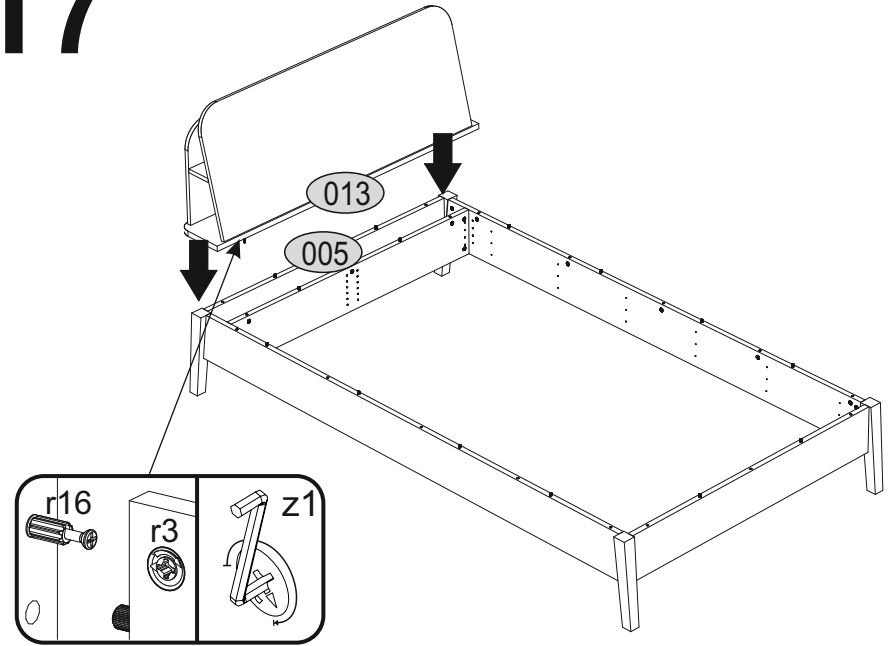


# 18

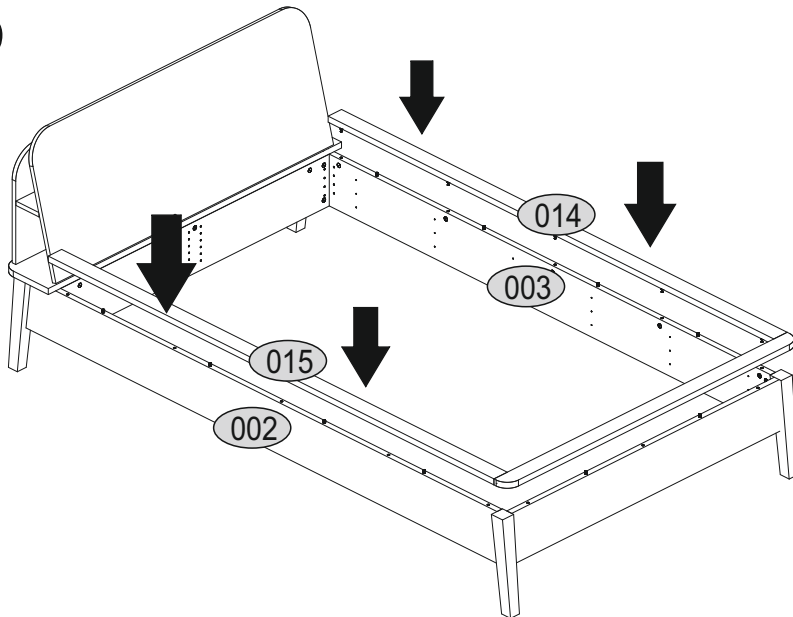


# 19

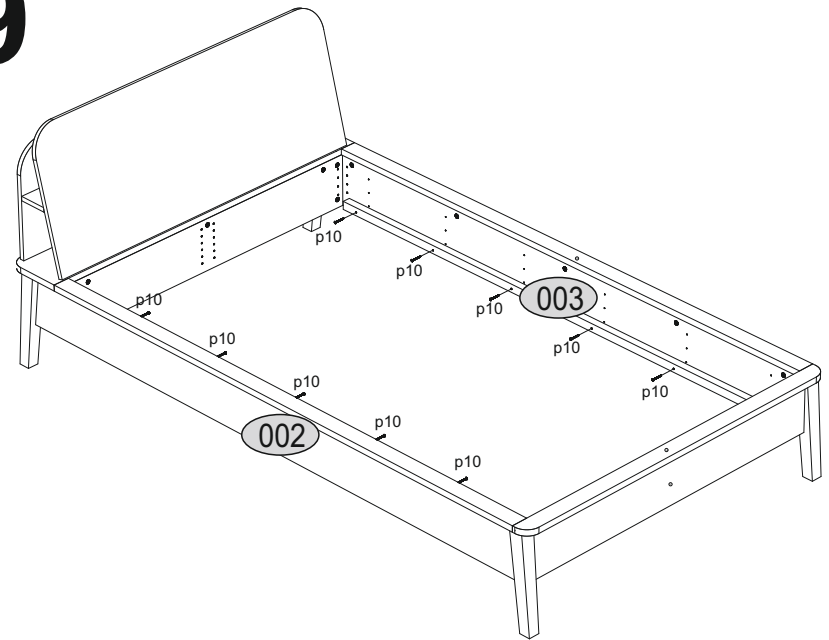





# 20

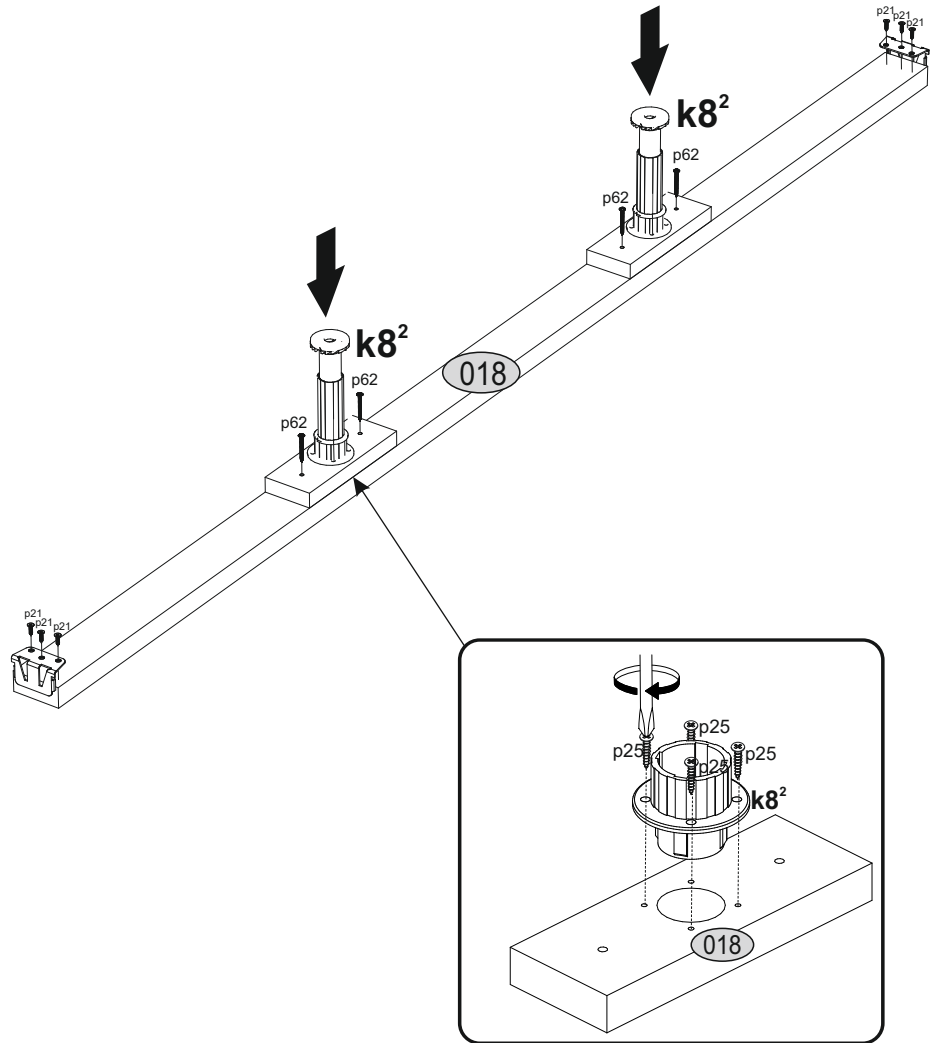

# 21A

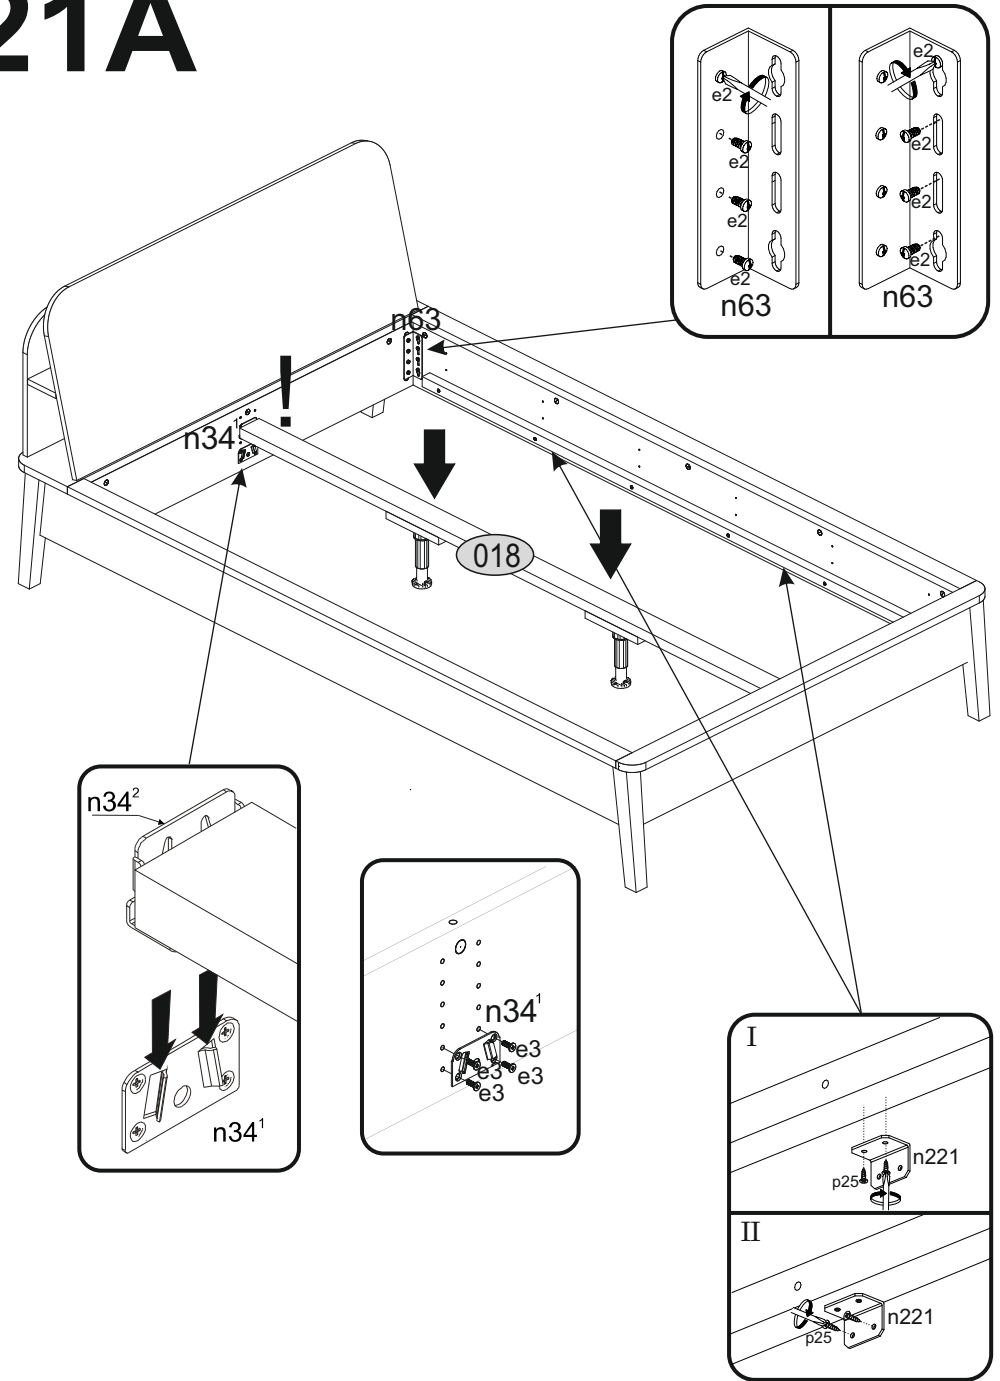

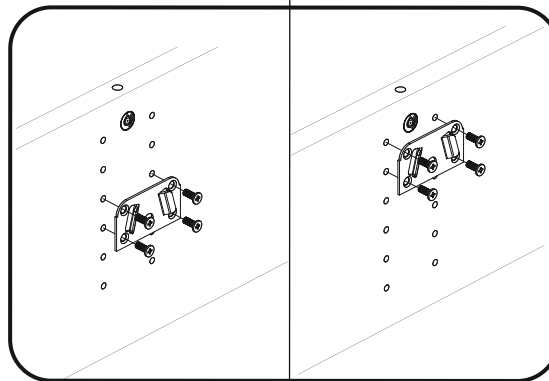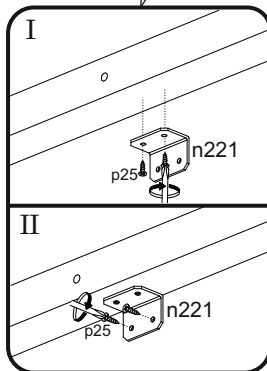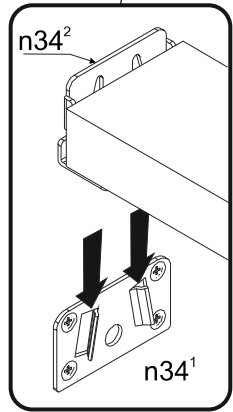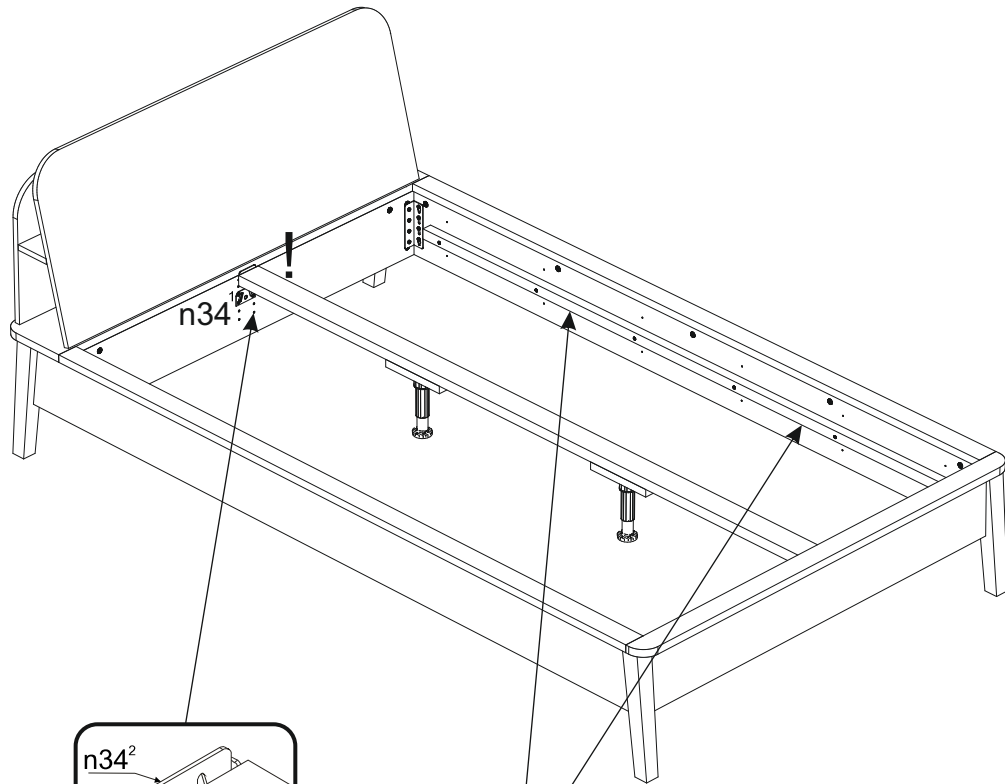

**B****C**