
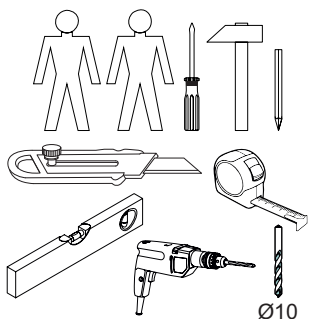
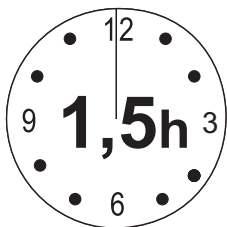
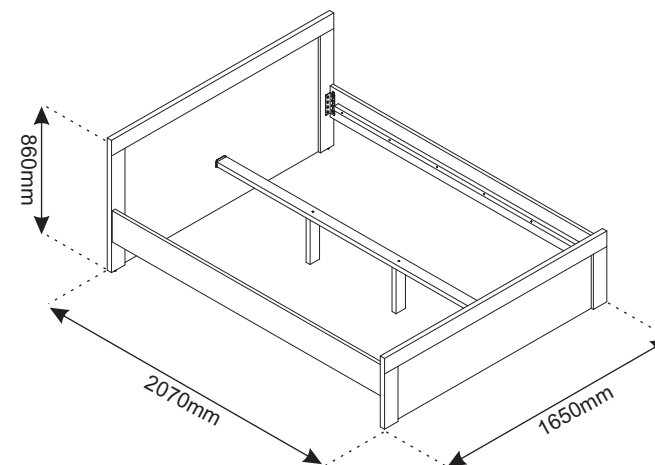


Instrukcja montażowa


KARIN Łoże 160*200

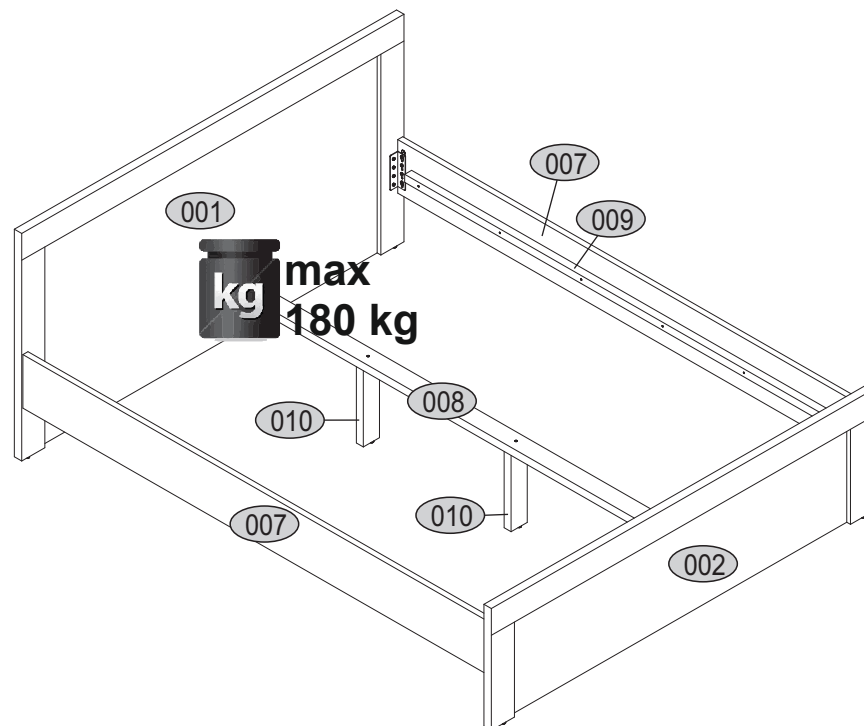

Kod	Wymiary				Pakiet
001	1654	850	16/32	1	2/3
002	1654	455	16/32	1	3/3
007	2000	200	22	2	1/3
008	2000	70	30	1	1/3
009	1880	27	30	2	1/3
010	285	70	30	2	1/3
Akcesoria				1	1/3


Akcesoria:

4x n63 	2x n34¹ 	2x n34² 	6x k1 
2x e27 	8x r3 	12x p10 Ø4x40 	16x p25 Ø3.5x16 
8x e3 Ø6.3x13 	8x r16 	12x f1 Ø8x30 	32x e2 Ø6.3x13 
6x p36 Ø4x25 	4x n221 	1x z1 	12x p21 Ø4x30 

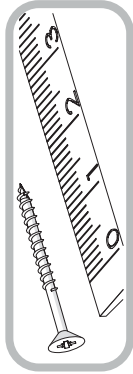



1

r16	n34	e3	k1
x8	x2	x8	x4

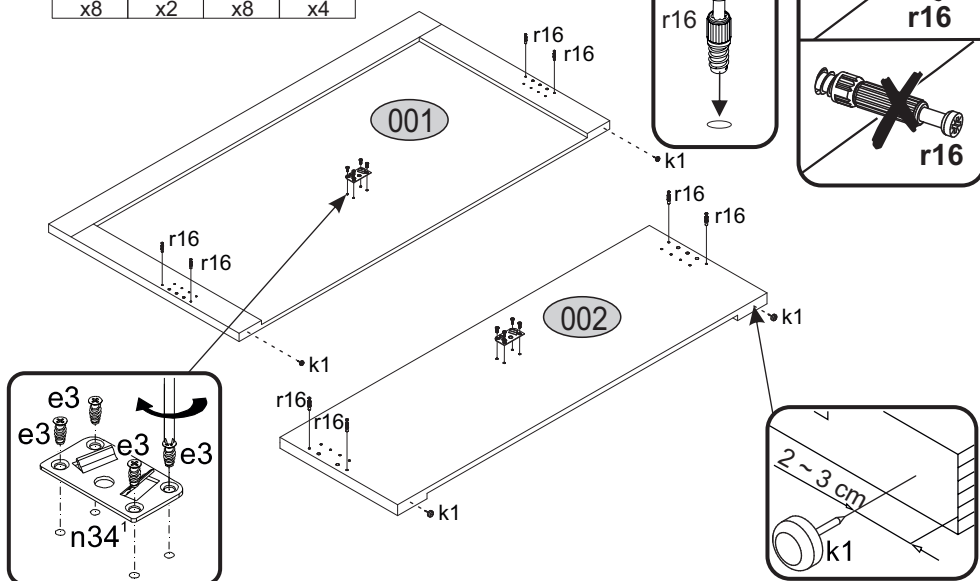


2

r3	f1
x8	x12

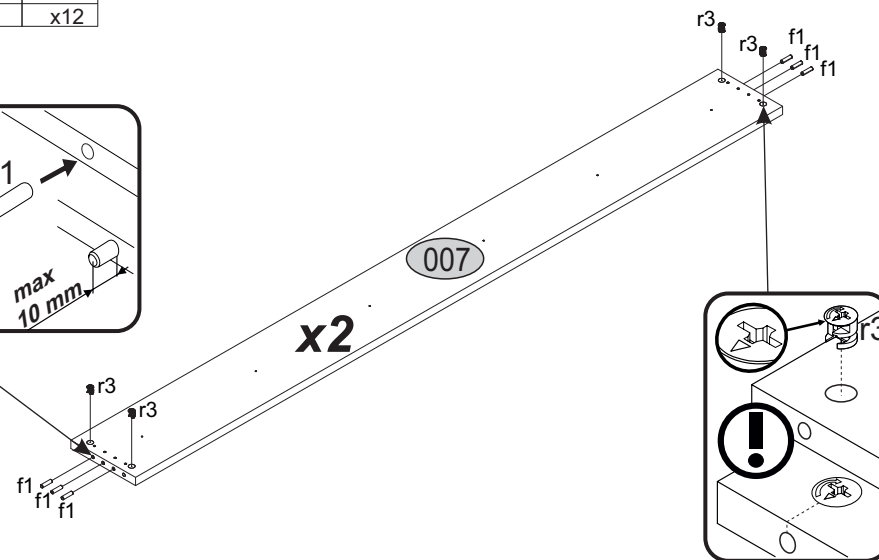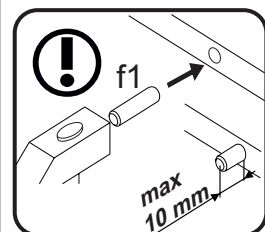


3

p10
x12

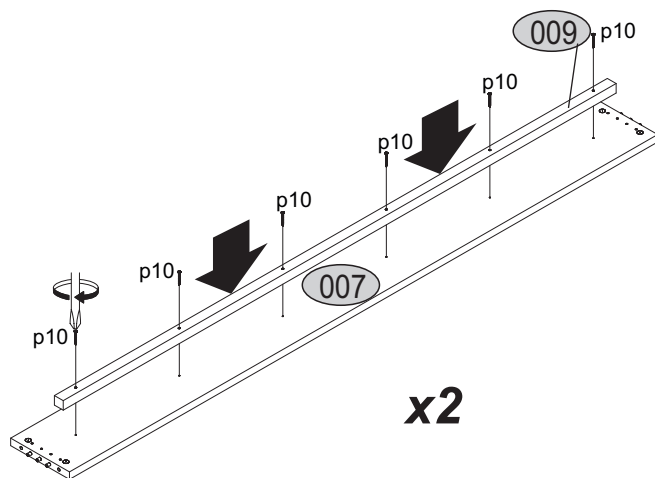


4



n221	p25
x4	x16

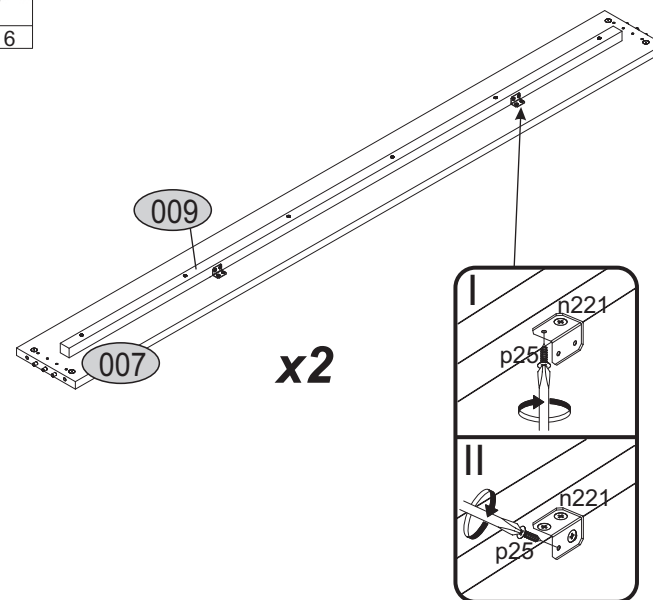



5

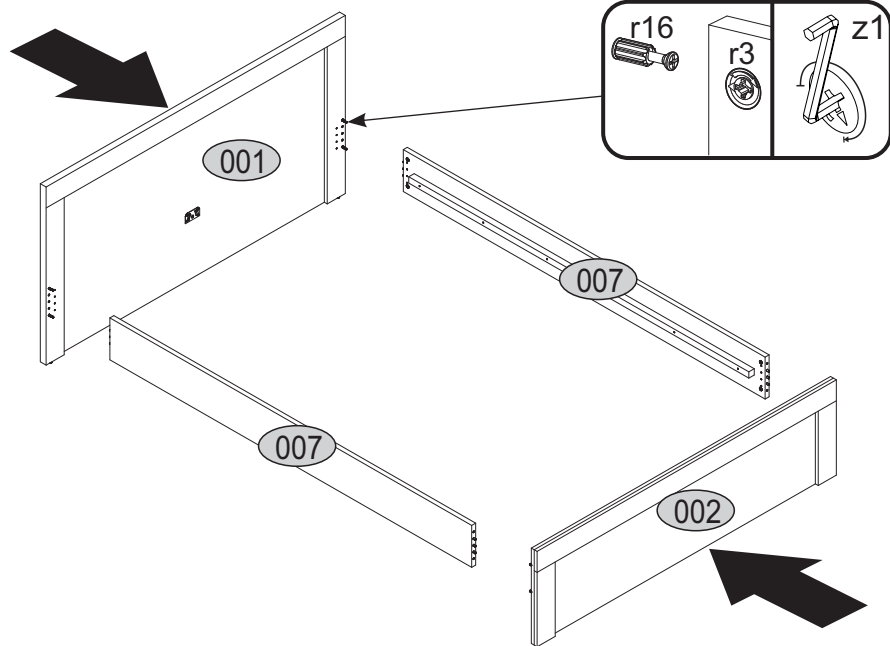

6

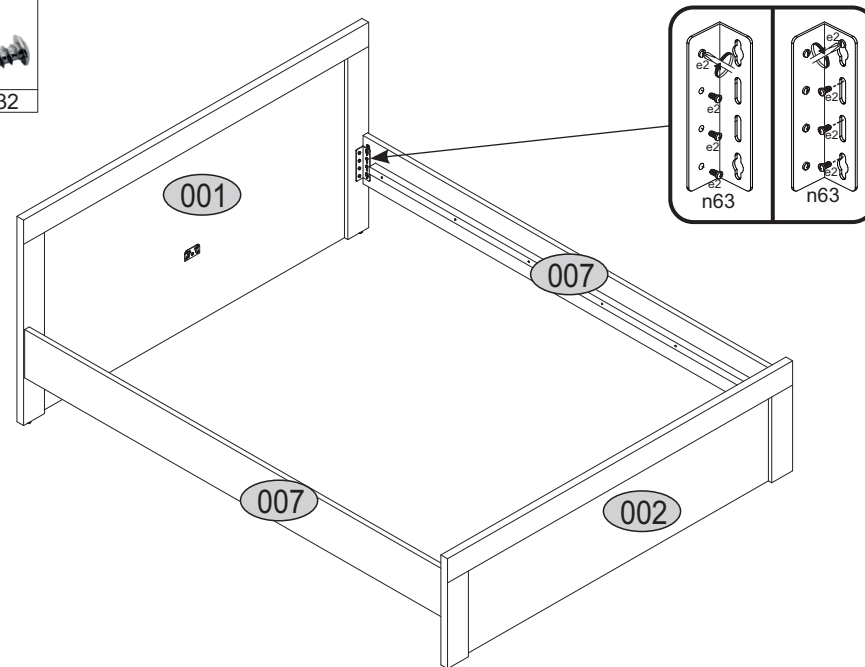

7

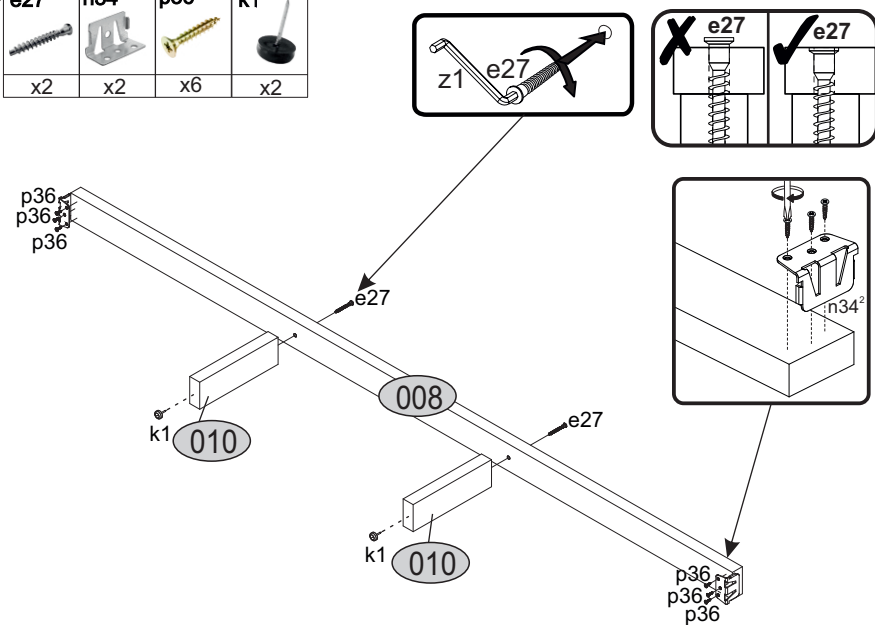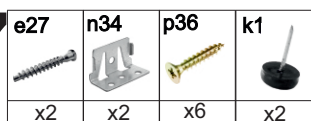

8

