

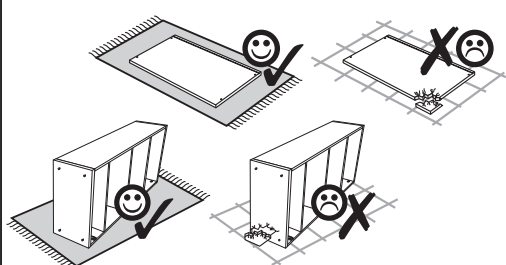
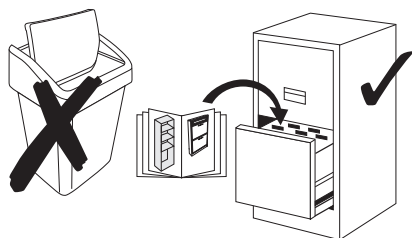
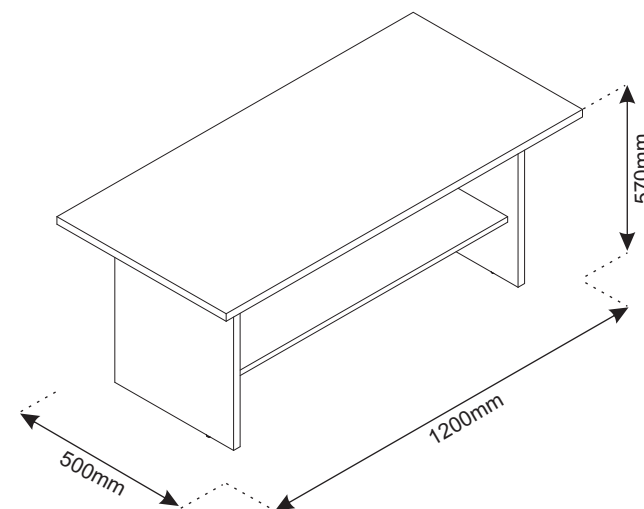
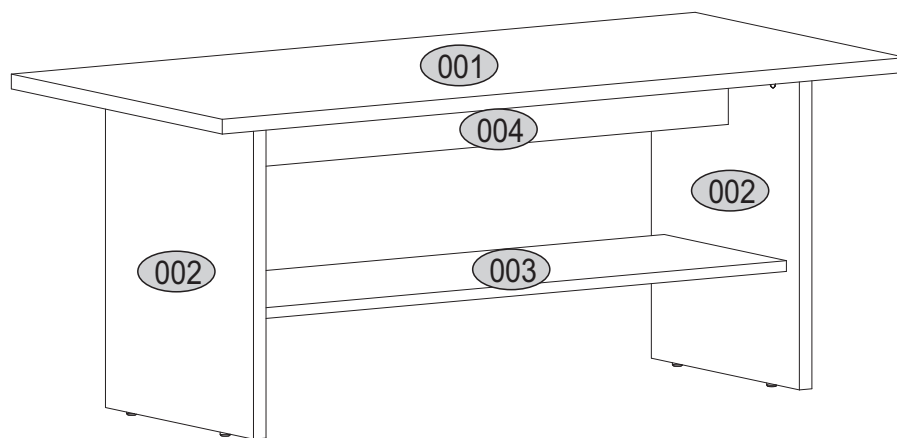


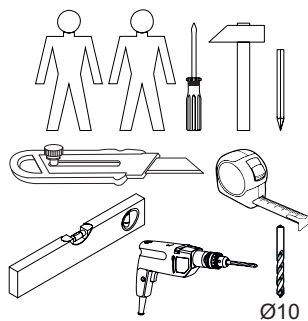

Instrukcja montażowa


KARIN Ława 120




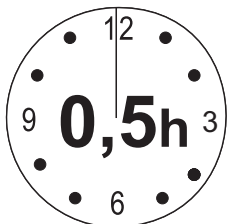


Kod	Wymiary			Pakiet	
001	1200	570	22	1	1/1
002	472	400	22	2	1/1
003	936	330	16	1	1/1
004	936	100	16	1	1/1
Akcesoria				1	1/1

Aksesoria:

10x f1 Ø8x30		8x r1 15x12		12x r16 Ø5x24		4x r3 Ø15x15	
12x s2		1x z1		4x k1			

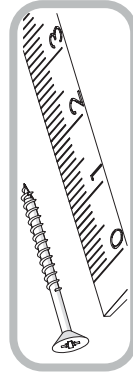

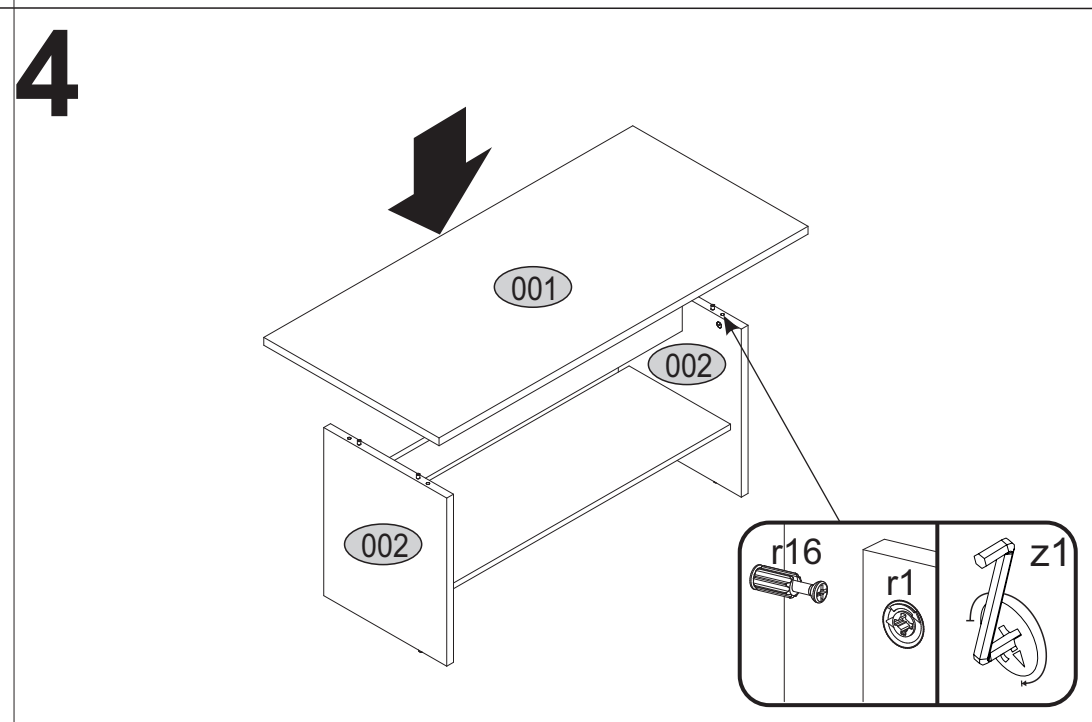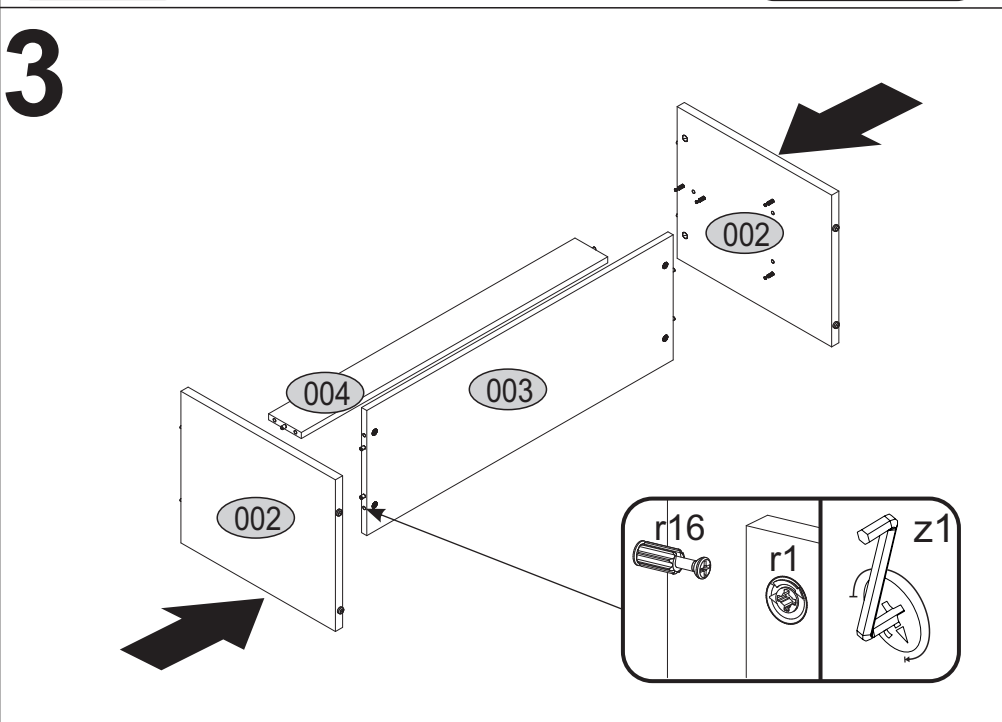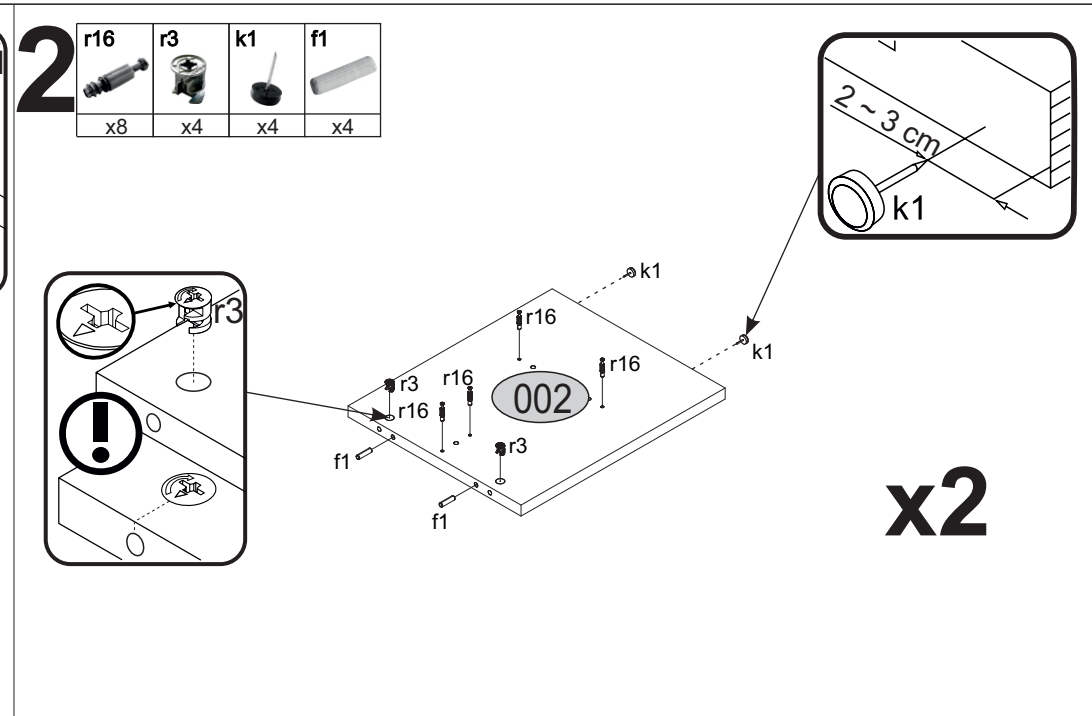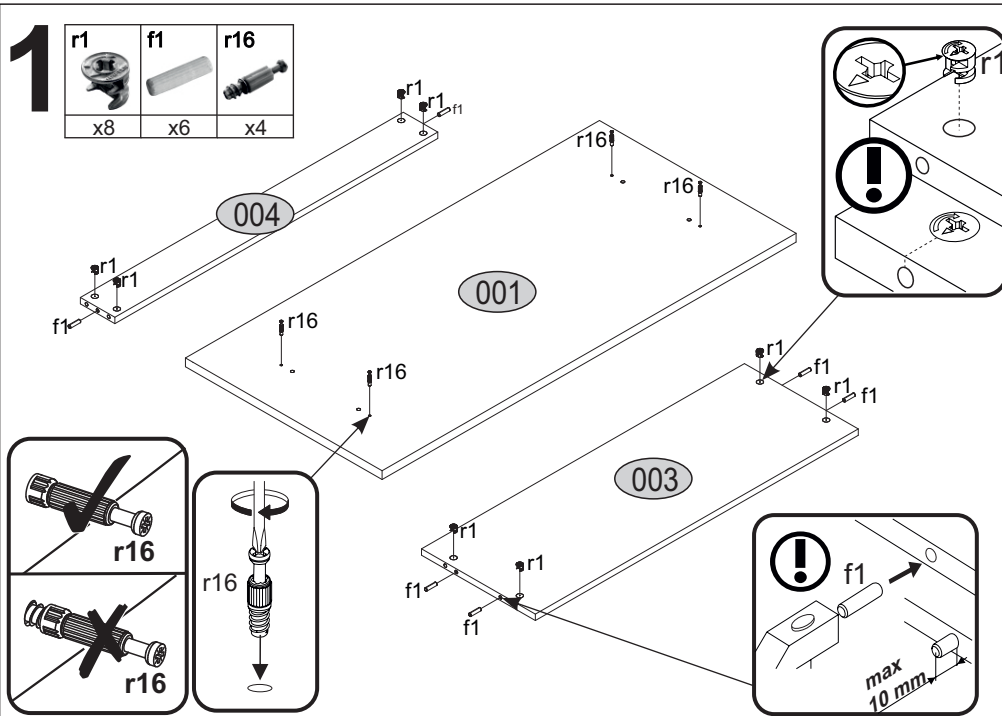

5

s2



x12

