
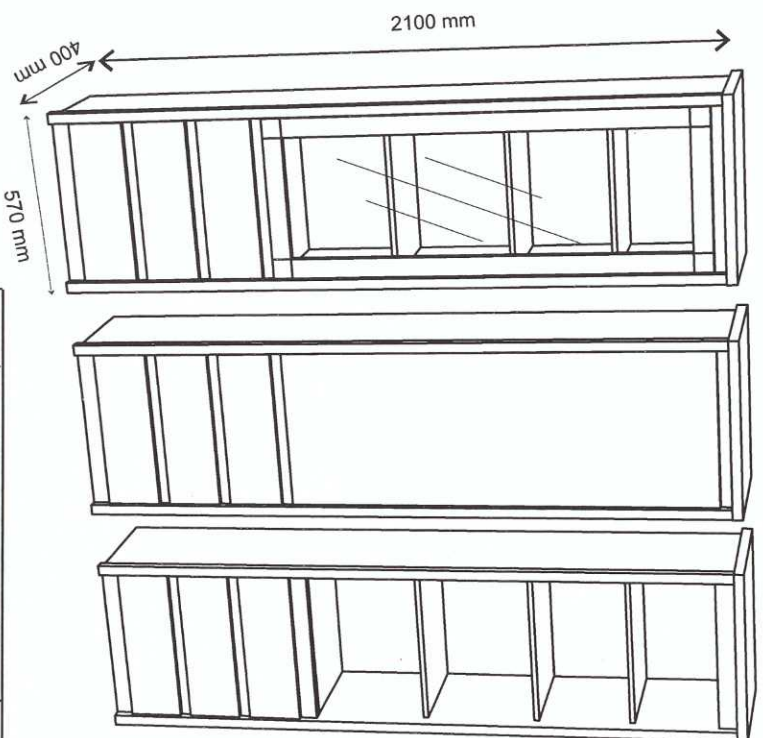
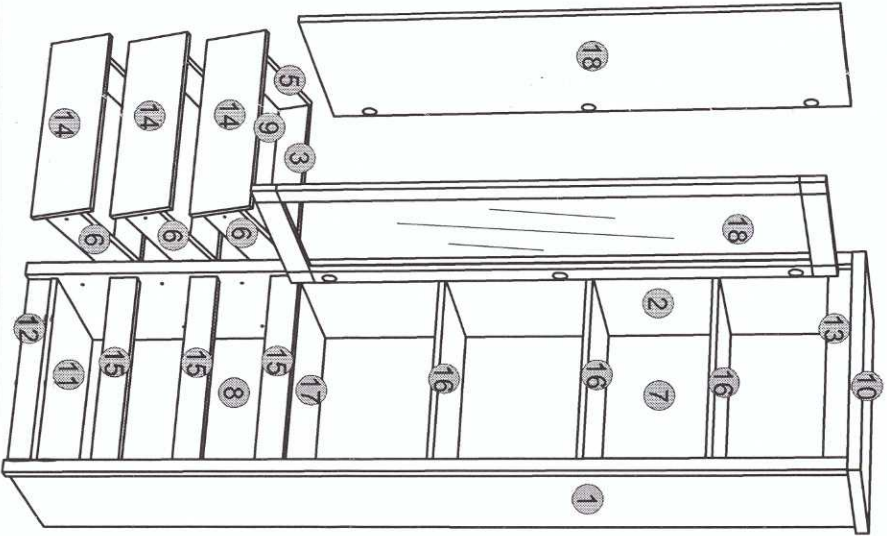
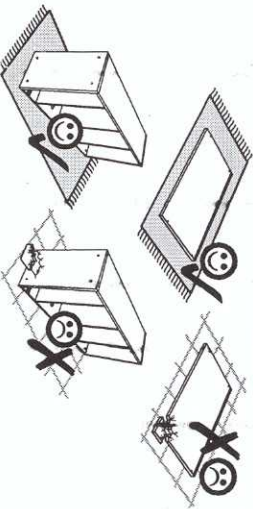
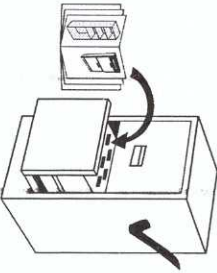
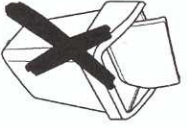
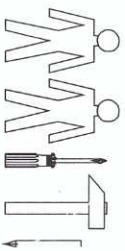
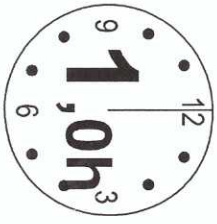


# Installation manual

NORTON: REG\_1W3S,1D3S,3S

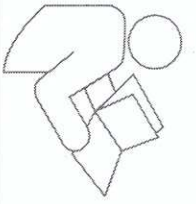


12x		1x		16x		1x	
1x		1x		3x		6x	
2x		12x		12x		46x	
12x		40x		16x		16x	
4x		70x		3x		3x	


Element symbol	Dimensions	Code	Package
1	2068 398 16/32	1 K-128	1/1
2	2068 398 16/32	1 K-129	1/1
3	447 100 16	3 K-525	1/1
4	447 100 16	3 K-526	1/1
5	350 100 16	3 K-527	1/1 2/2
6	350 100 16	3 K-528	1/1
7	1407 522 3	1 K-618	1/1
8	626 522 3	1 K-619	1/1
9	461 332 3	3 K-620	1/1
10	570 400 16/32/32	1 K-209	2/2
11	504 369 16	1 K-320	4/4
12	60 504 16	1 K-421	2/2
13	60 504 16	1 K-422	2/2
14	170 498 16	3 K-012	3/3
15	70 504 30	3 K-423	2/2
16	504 345 16	3 K-321	1/1
17	504 339 16	1 K-322	2/2
18	1354 498 16	1 K-013	5/5




1

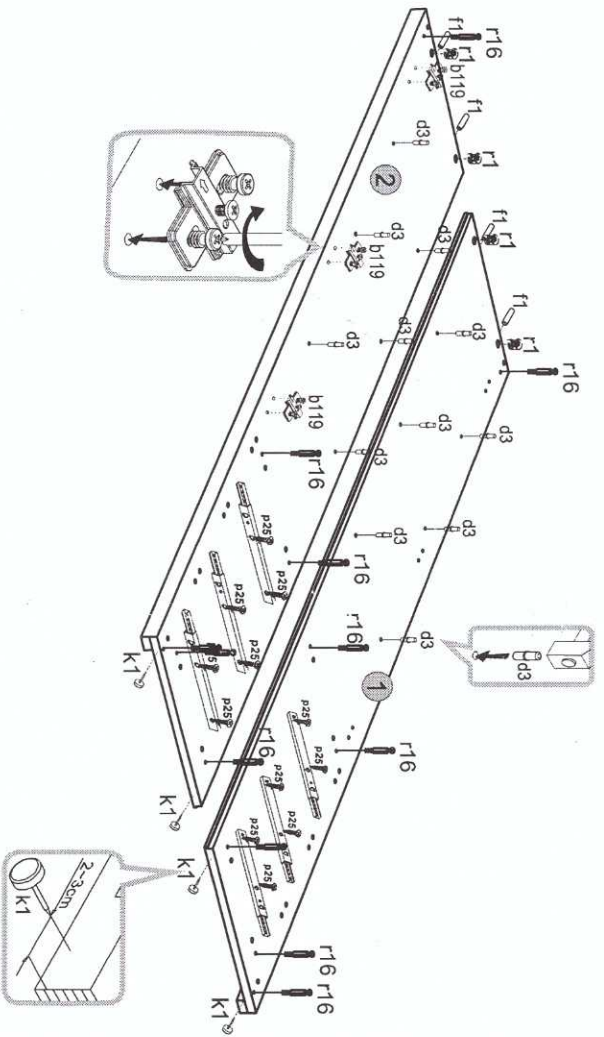


2

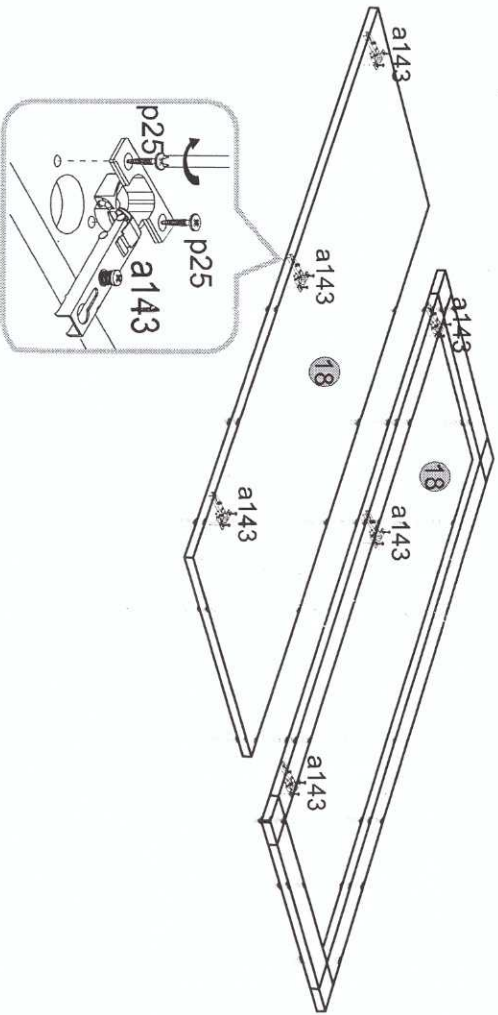


3

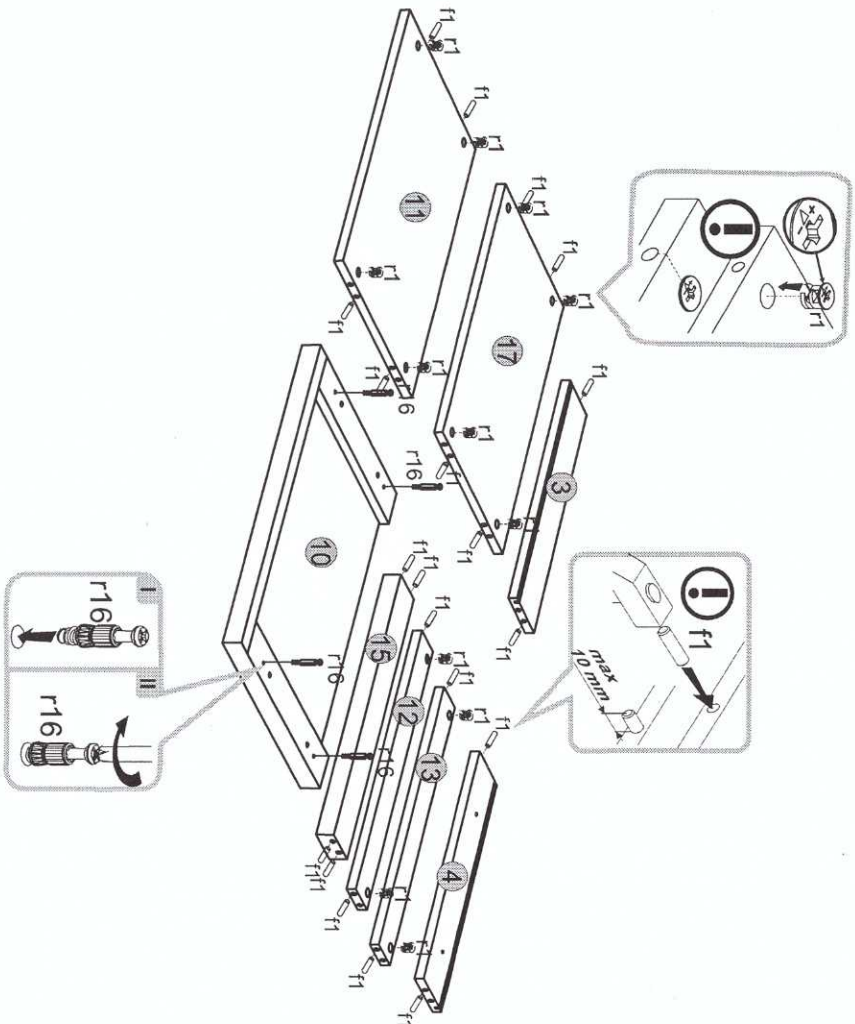


4




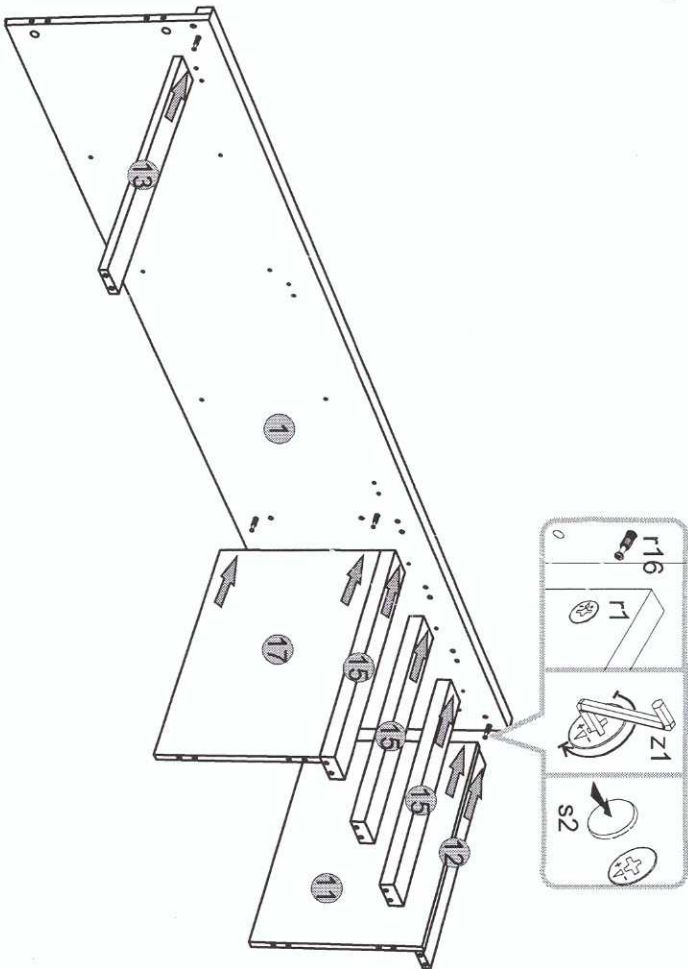


5

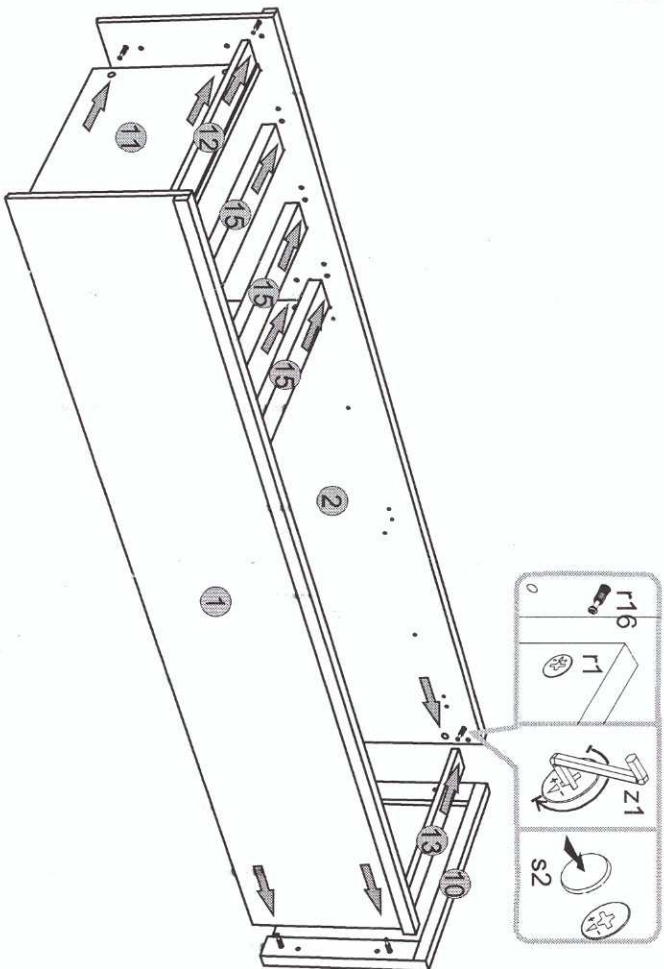

6

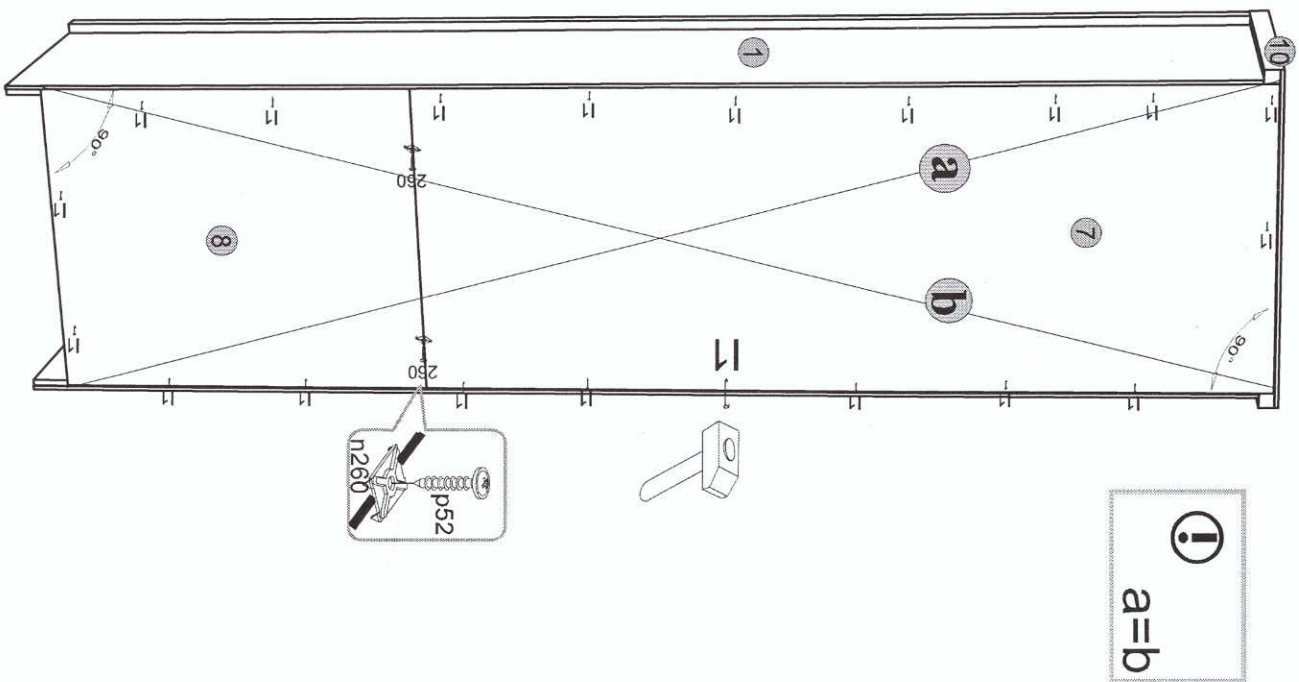

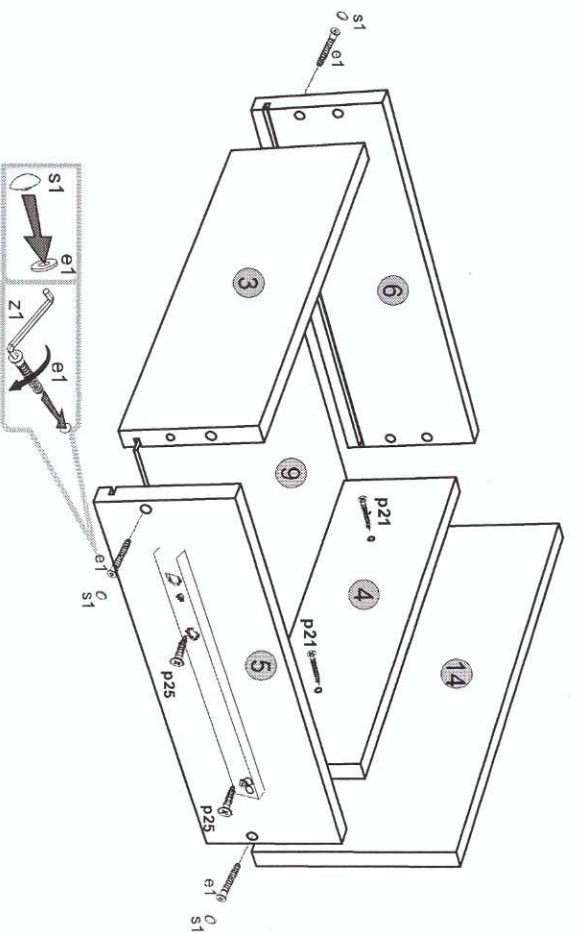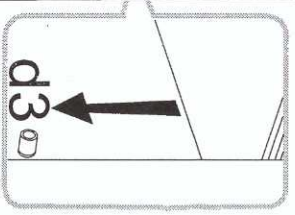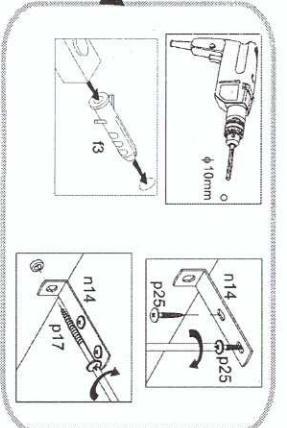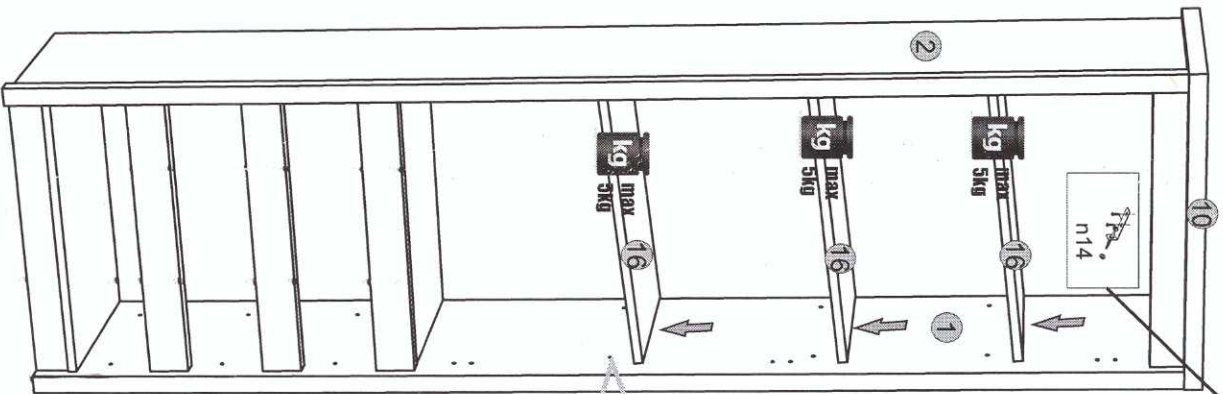

REG\_3S

