

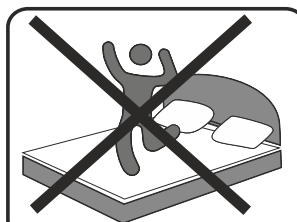
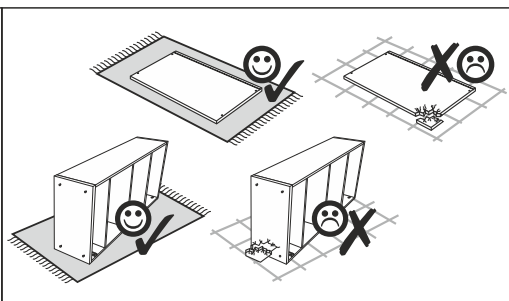
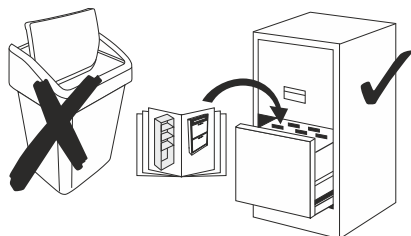
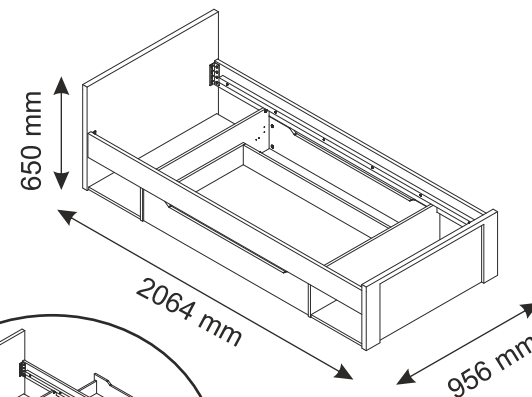
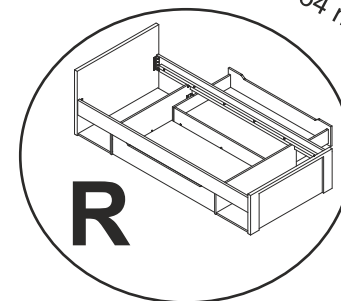
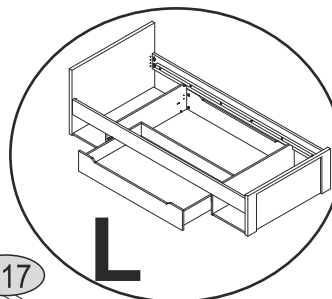
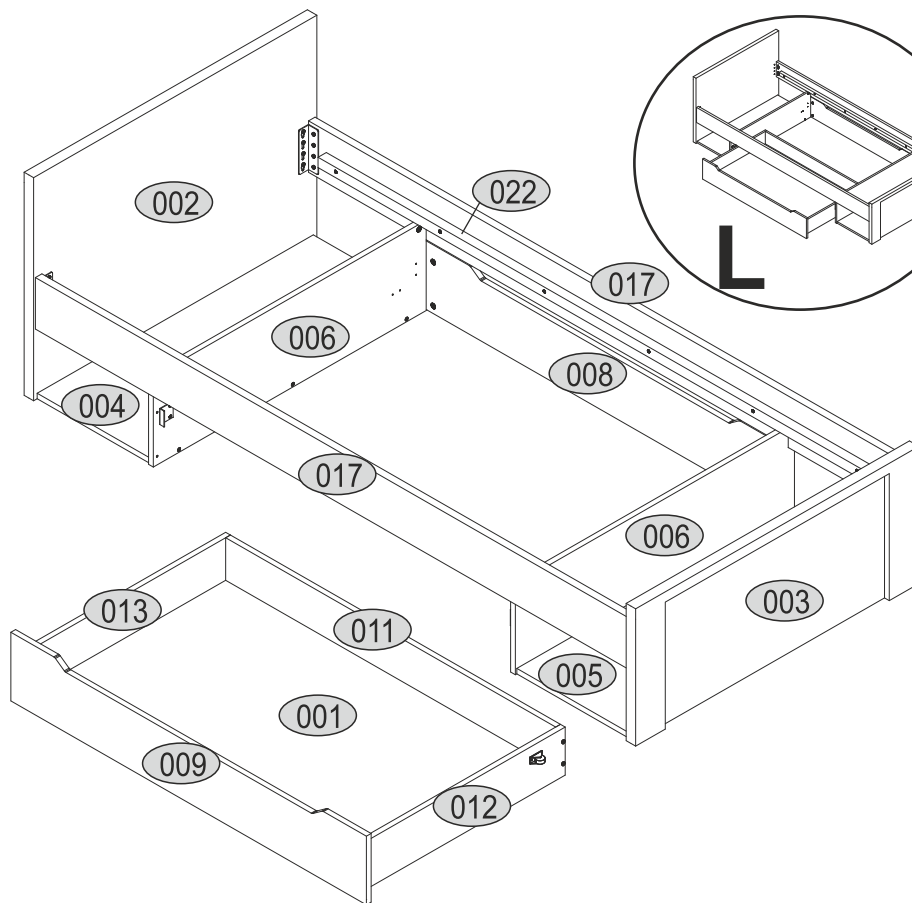


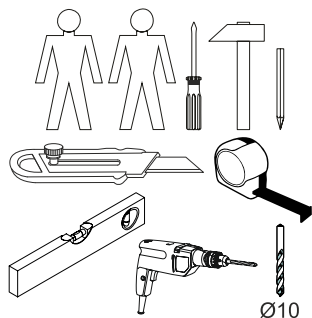

Installation manual


PAVI Bed 1S/90

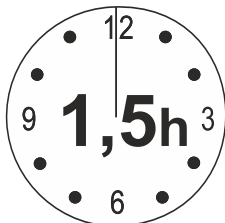




Code	Dimensions				Package
001	1114	666	16	1	1/3
002	956	650	16/32	1	1/3
003	956	400	16/32	1	1/3
004	932	381	16	1	3/3
005	932	381	16	1	3/3
006	942	263	16	2	3/3
008	1206	200	16	1	1/3
009	1200	200	16	1	1/3
011	1114	140	16	1	2/3
012	682	140	16	1	2/3
013	682	140	16	1	2/3
017	2000	150	22	2	2/3
022	1880	26	30	2	2/3
accessories				1	1/3

Accessories:




13x e1 Ø7x50	34x f1 Ø8x30	8x r3	2x n22
36x e2 Ø6x13	32x p25 Ø3.5x16	21x r1 15x12	29x r16 Ø5x24
4x s2	1x z1	12x s4	6x p21 Ø4x30
8x k34	4x n63	4x n221	12x p10 Ø4x40
8x k1			

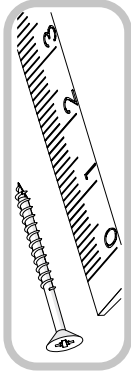





1

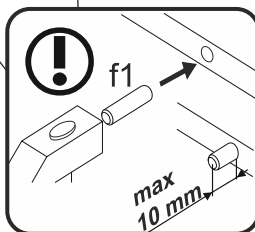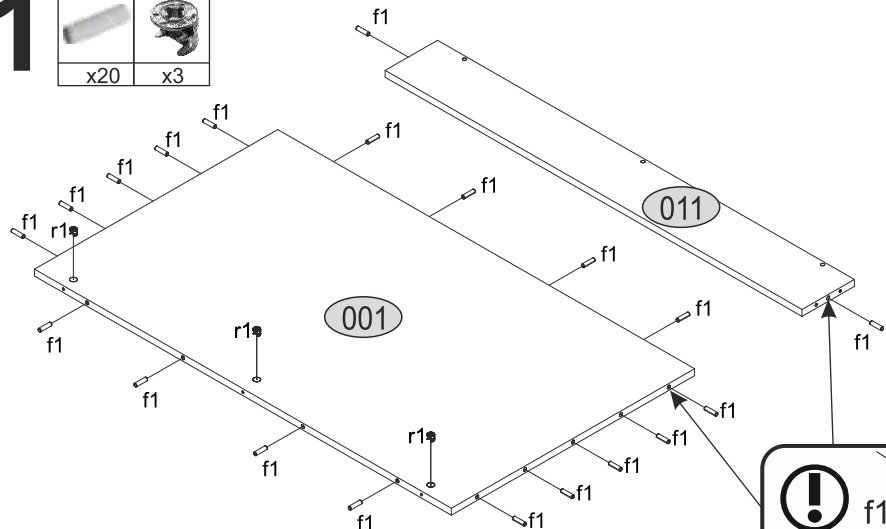





2

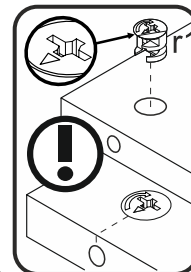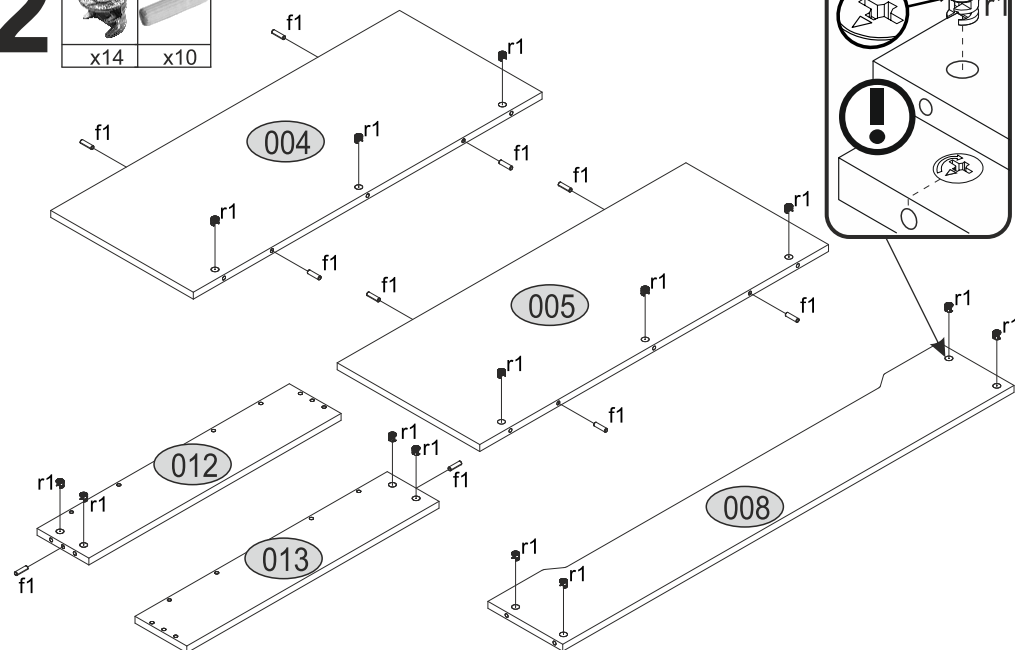


3

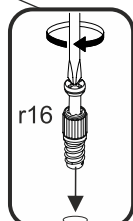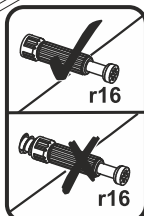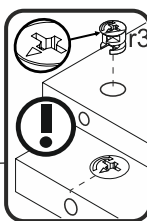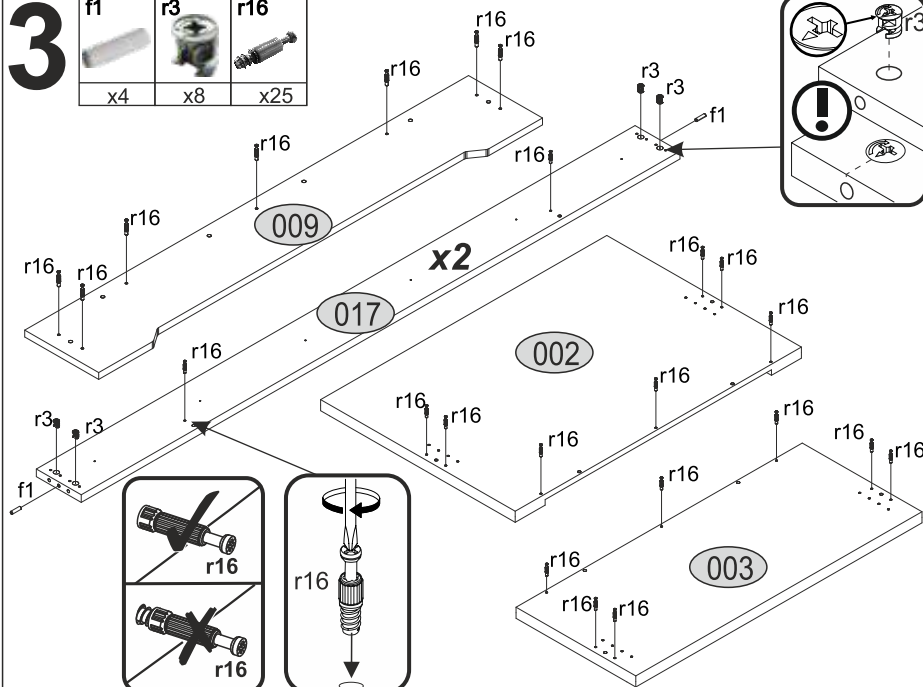


4

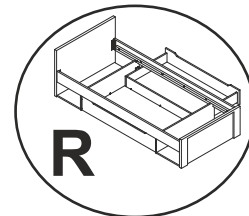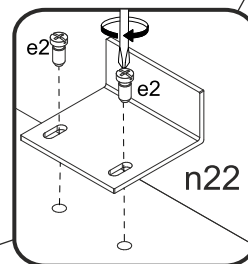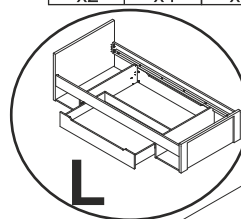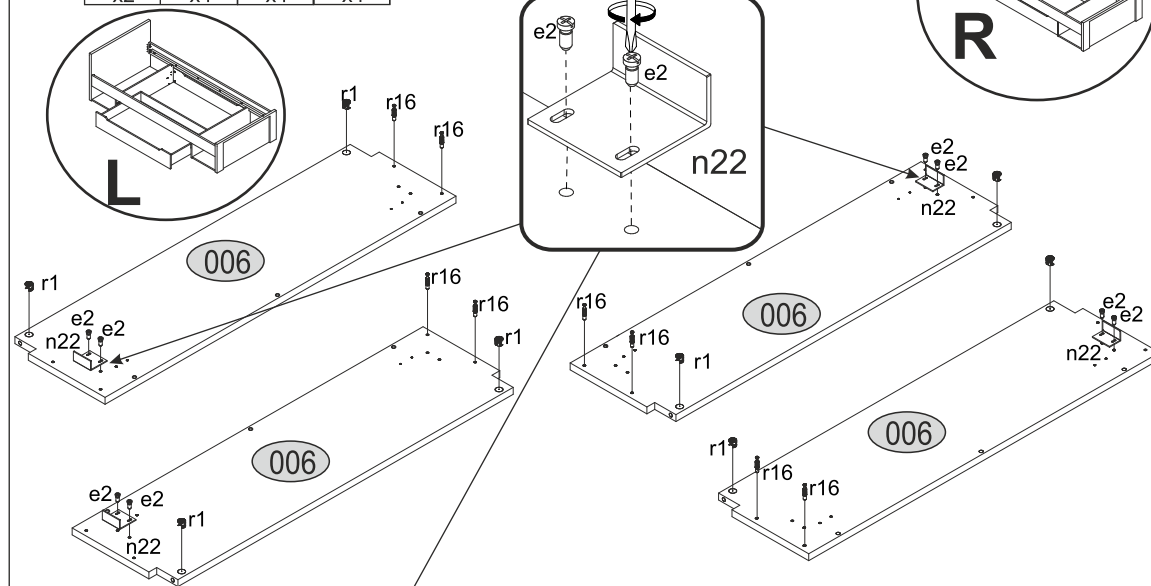




e1	
x6	

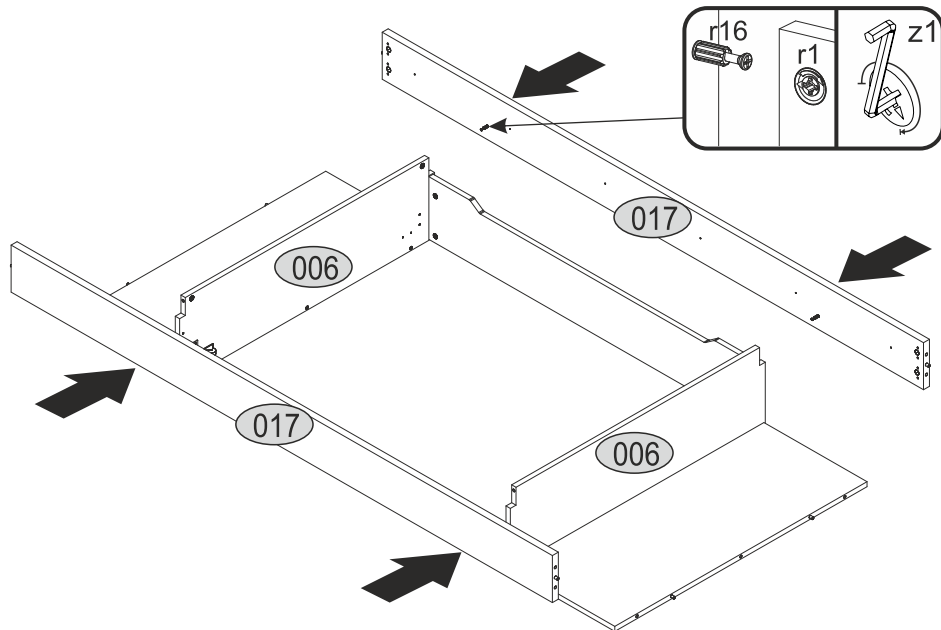





k34	p25
	
x2	x4

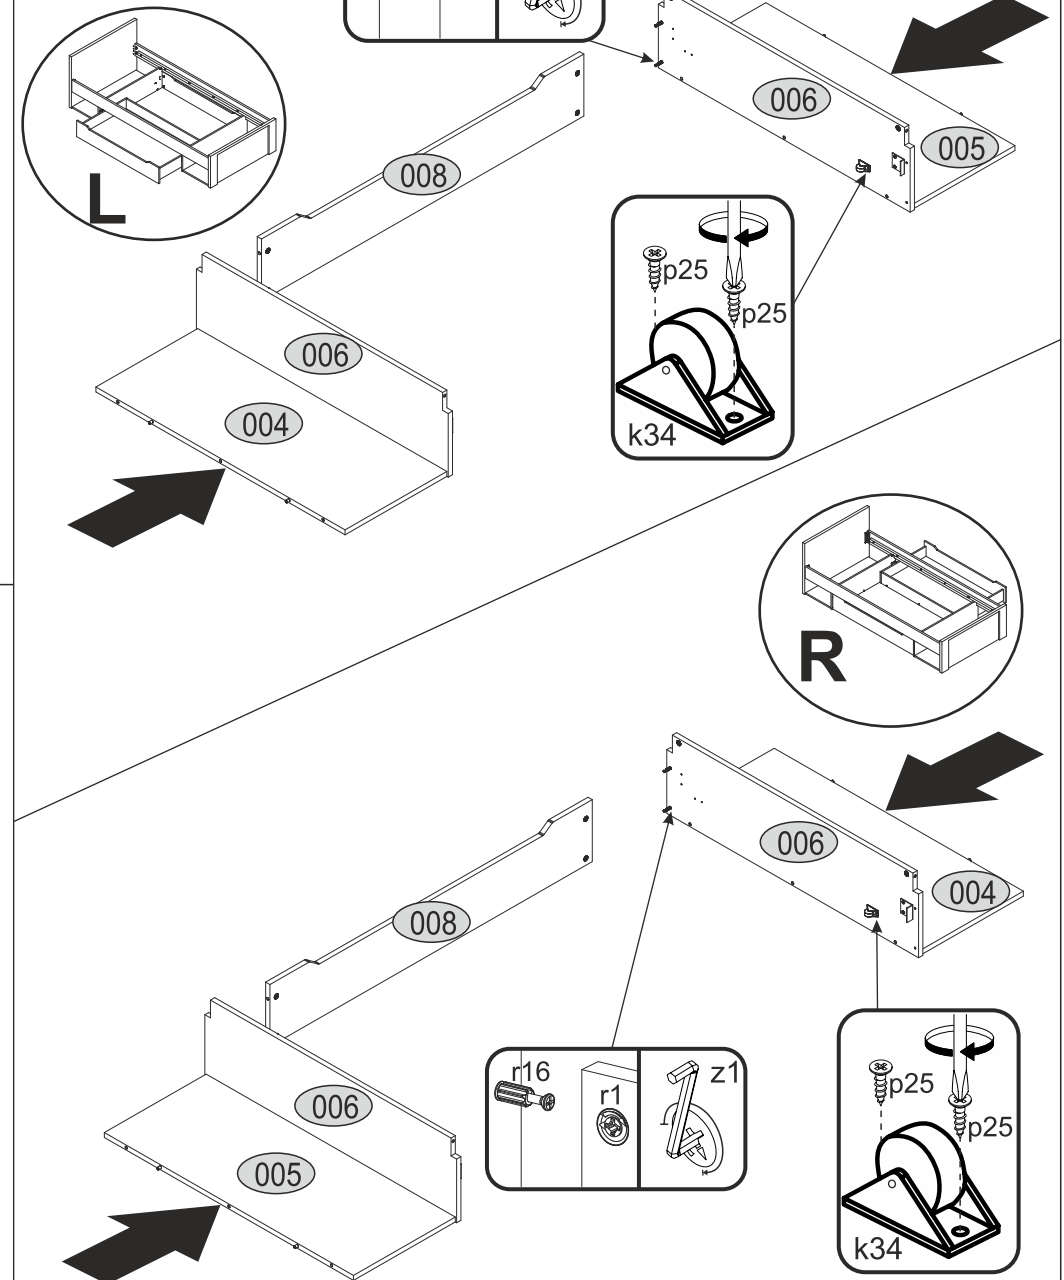






8

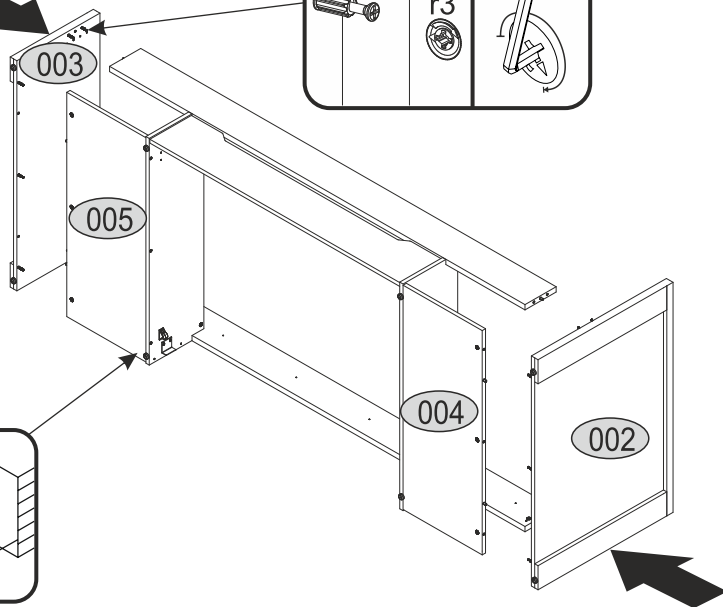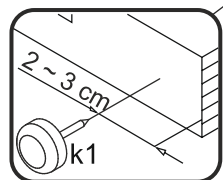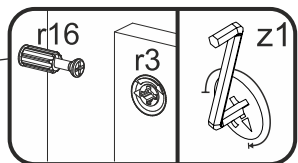



9

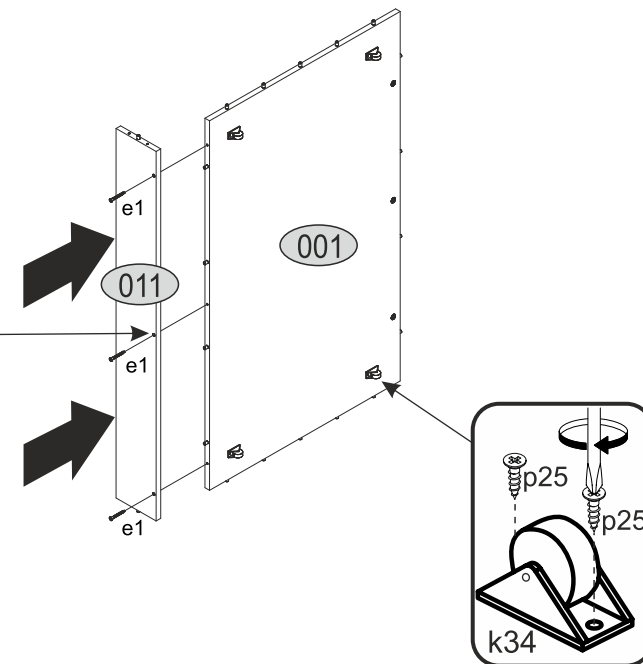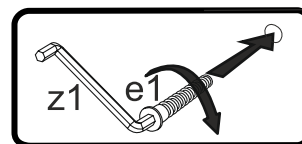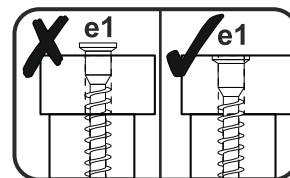

10

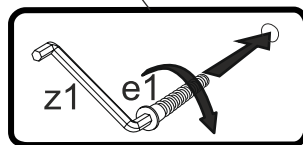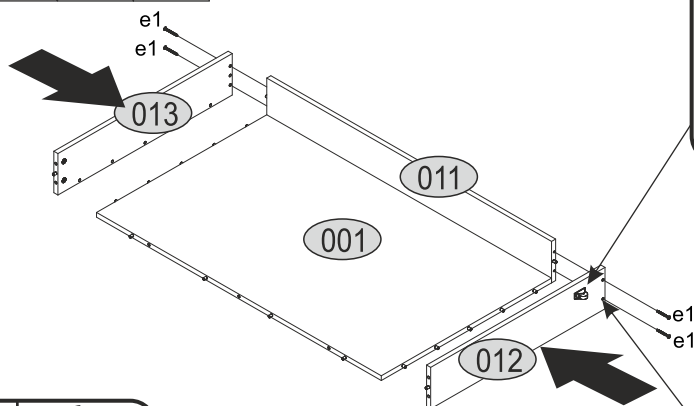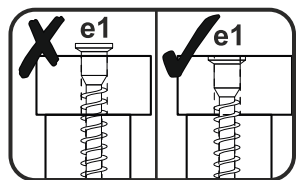
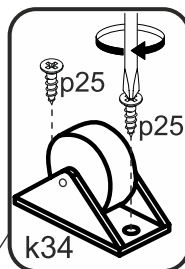



11

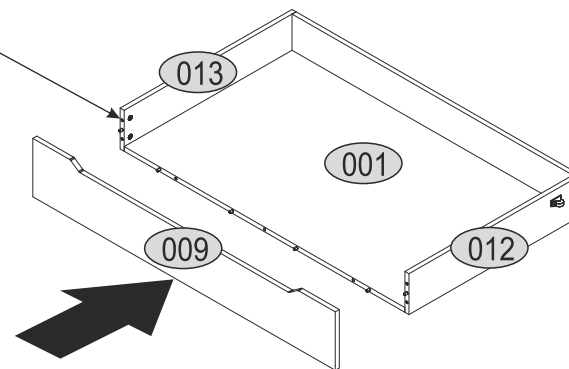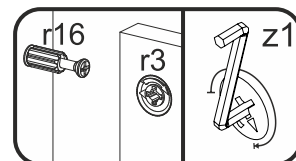






12

n63	e2	n221	p25	p10
				
x4	x32	x4	x16	x12

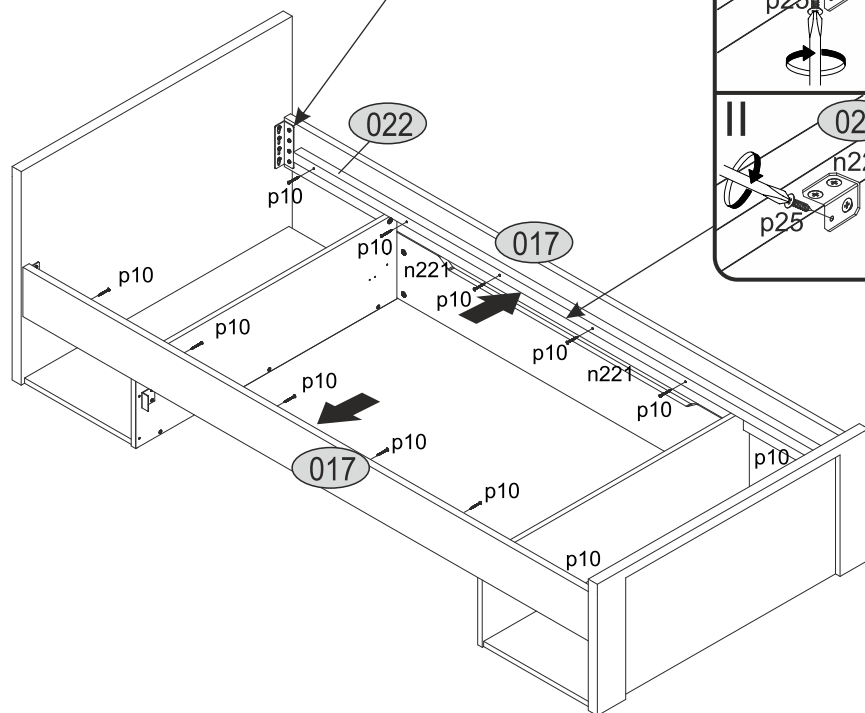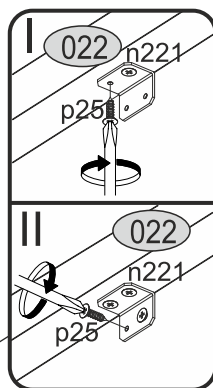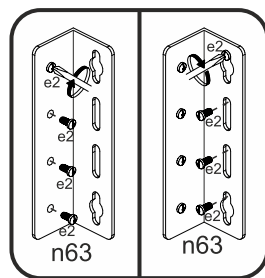

13

s2	s4
	
x4	x12

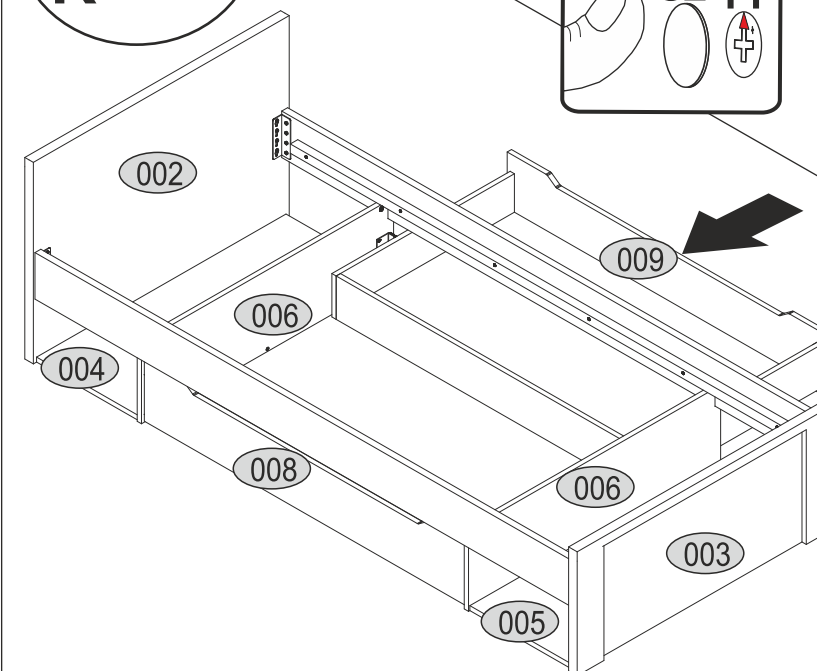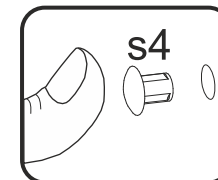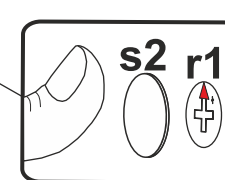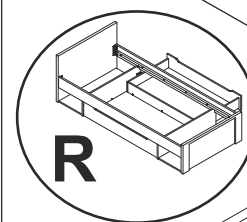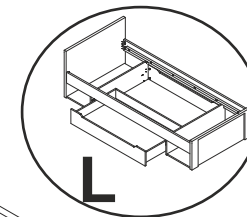

14

