
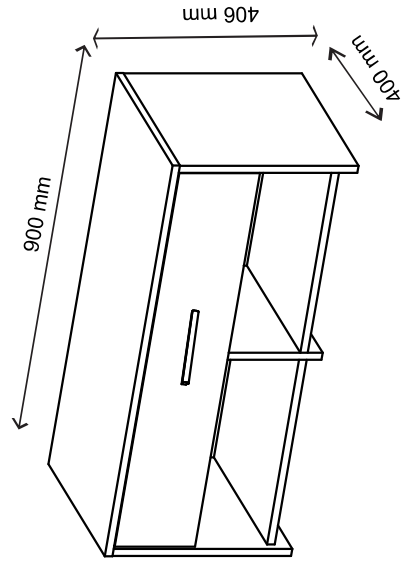
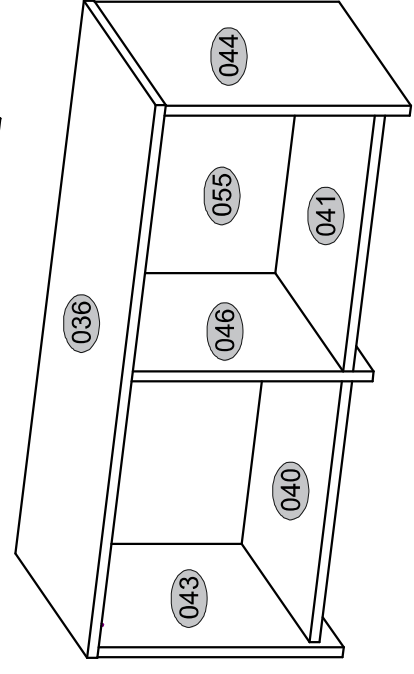
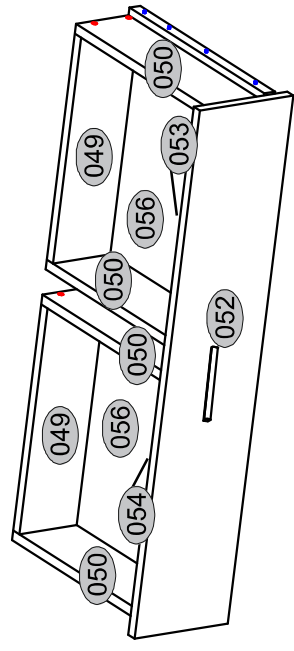
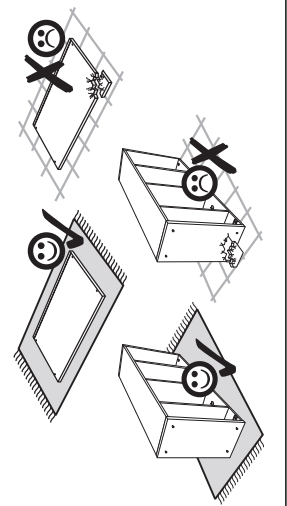
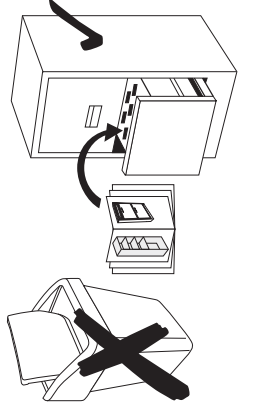
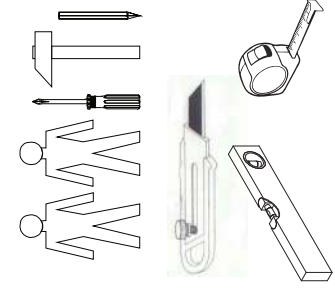
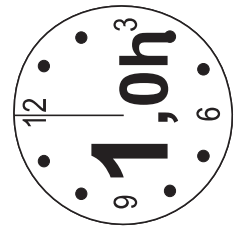



Installation manual

RUTA: chest

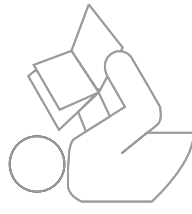


Code	Dimensions			Package
	900	400	16	
036	900	400	16	1 2/3
040	425	377	16	1 1/3
041	425	377	16	1 1/3
043	384	400	16	1 2/3
044	384	400	16	1 2/3
046	384	377	16	1 1/3
049	368	120	16	2 1/3
050	350	120	16	2 1/3
052	860	173	16	1 1/3
053	368	120	16	1 1/3
054	368	120	16	1 1/3
055	361	885	3	1 2/3
056	388	338	3	2 2/3


4x	φ4x30mm	p21	6x	k1	2x	φ4x40mm	p10	30x	l1	14x	φ3x12mm #16	r1	14x	r16	14x	s2
1x	c235	16x	φ8x30mm	e1	16x	φ8x50mm	s1	14x	φ3x12mm #16	24x	φ3,5x16mm	p25	2x	φ360mm	L-350	




1

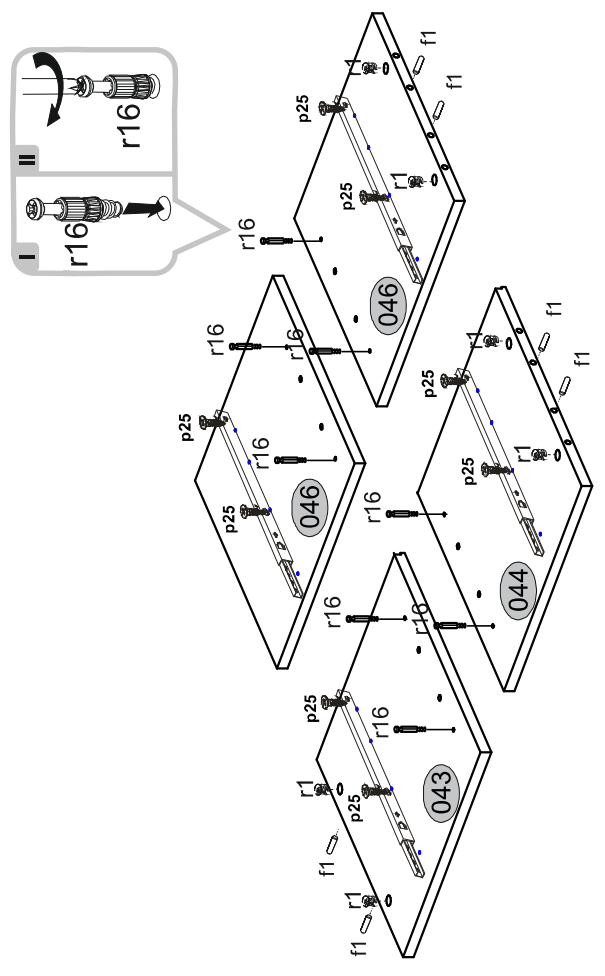


3

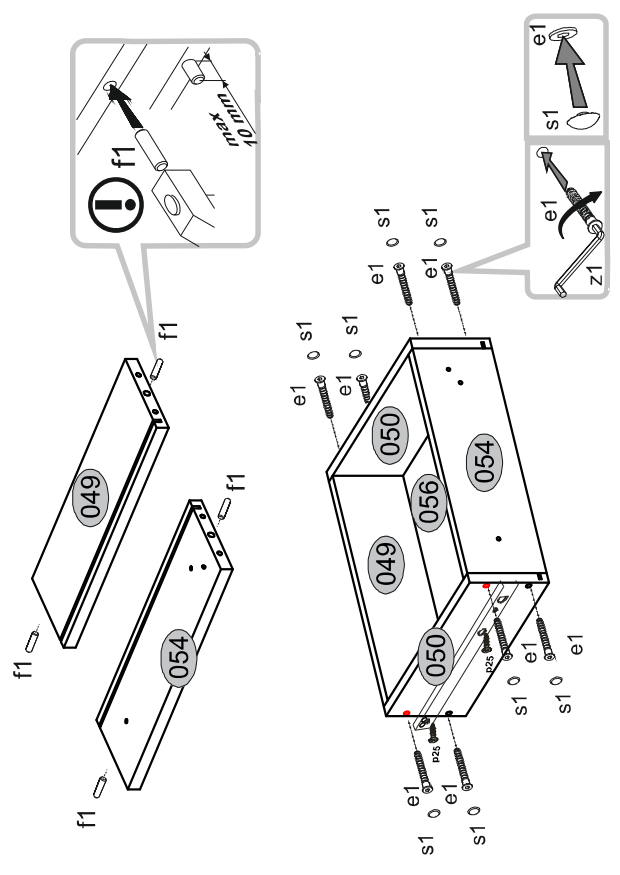

2

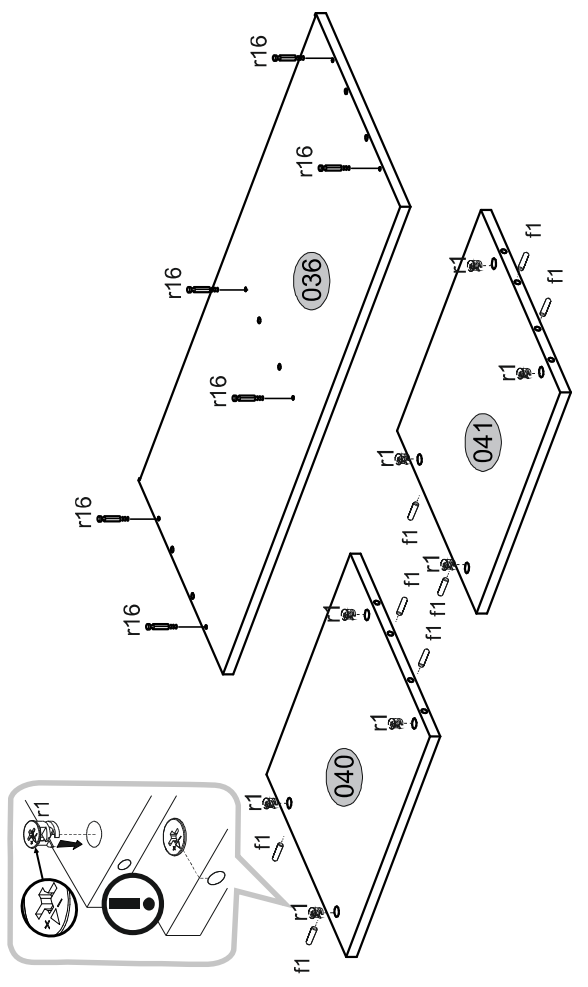


4


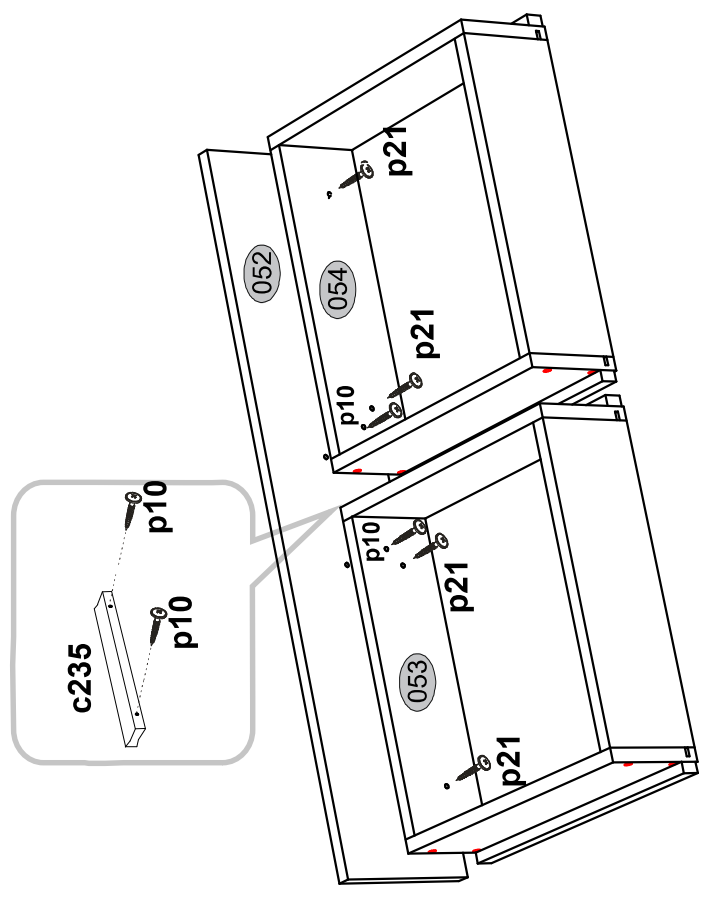





$a=b$

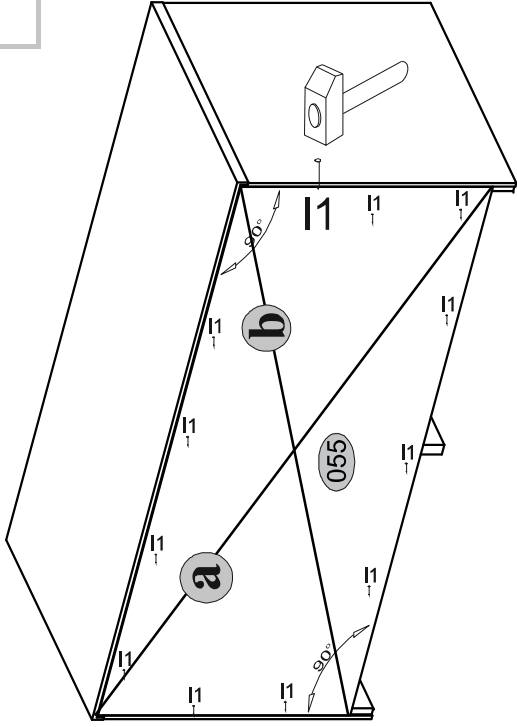


7

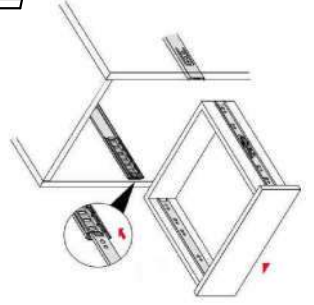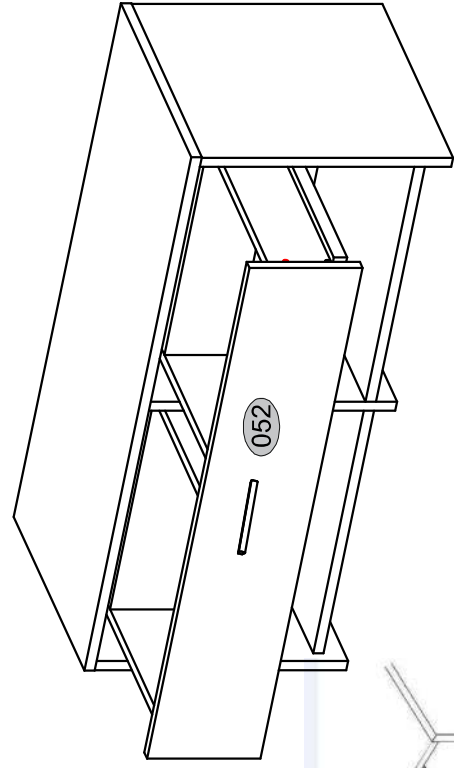

8

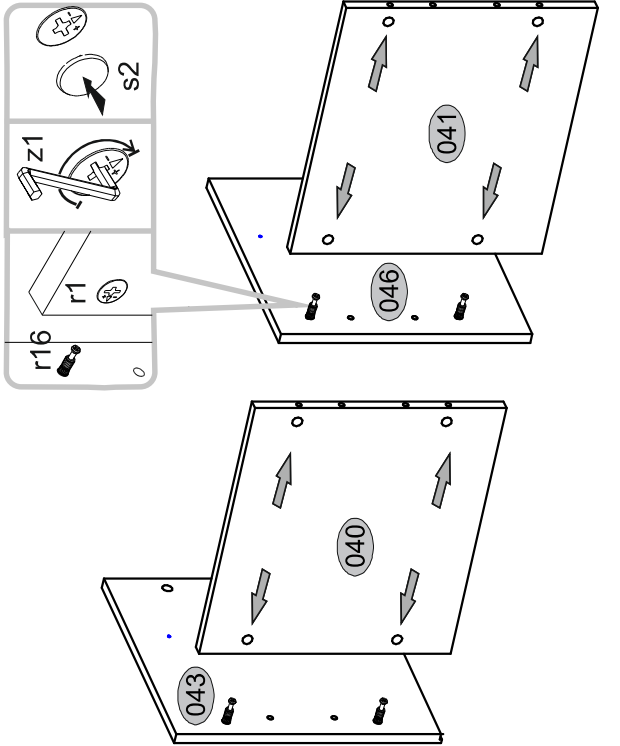







5

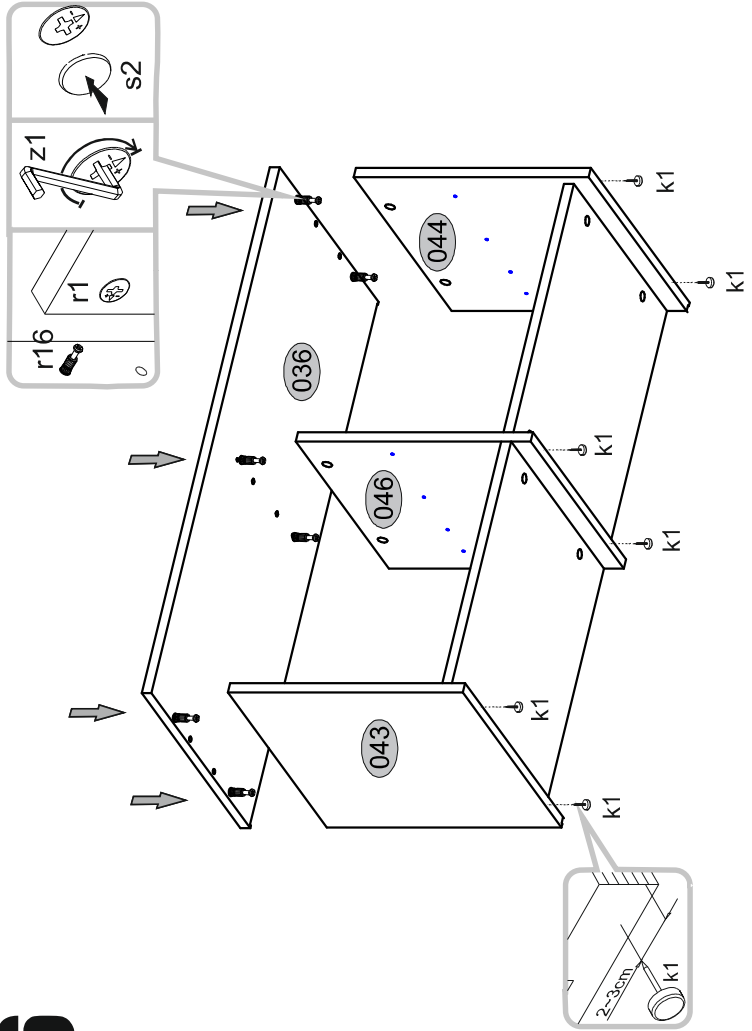

6

Installation manual

RUTA: hanger

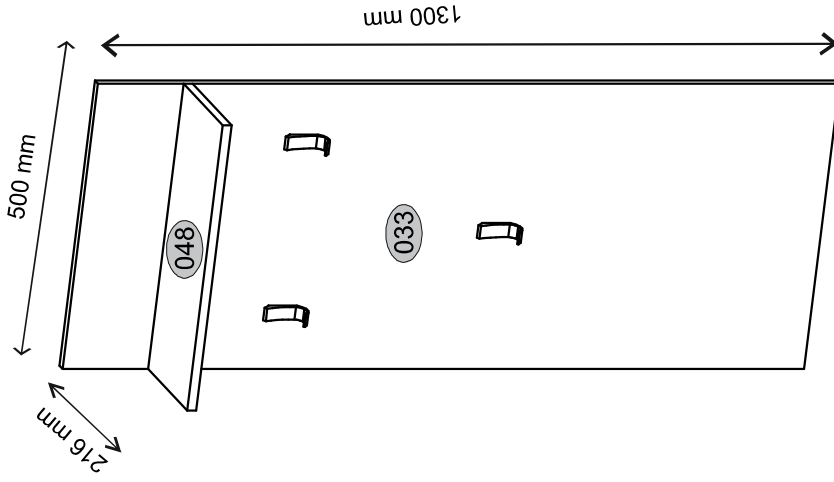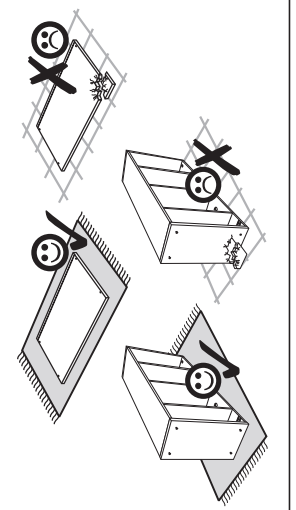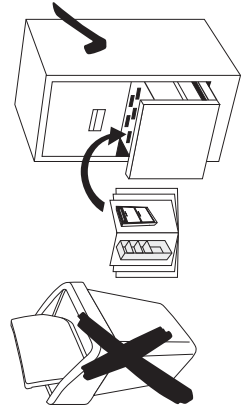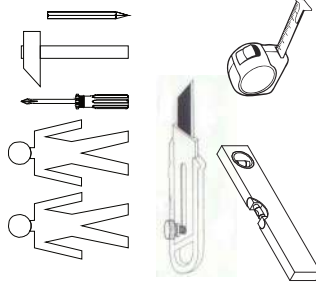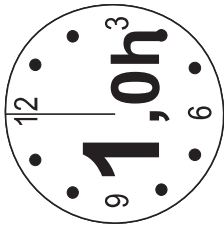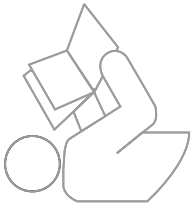


Code	Dimensions			Package
033	1300	500	16	1 1/3
048	500	200	16	1 1/3


2x ø6-3x13 mm e2	2x ø5x60 mm p17	2x ø8x30 mm f1	2x g2	4x ø9 mm e19
6x ø4x18 mm p18	3x ø10 mm f3	2x g101	3x s1	3x ø5.50 mm e1




1

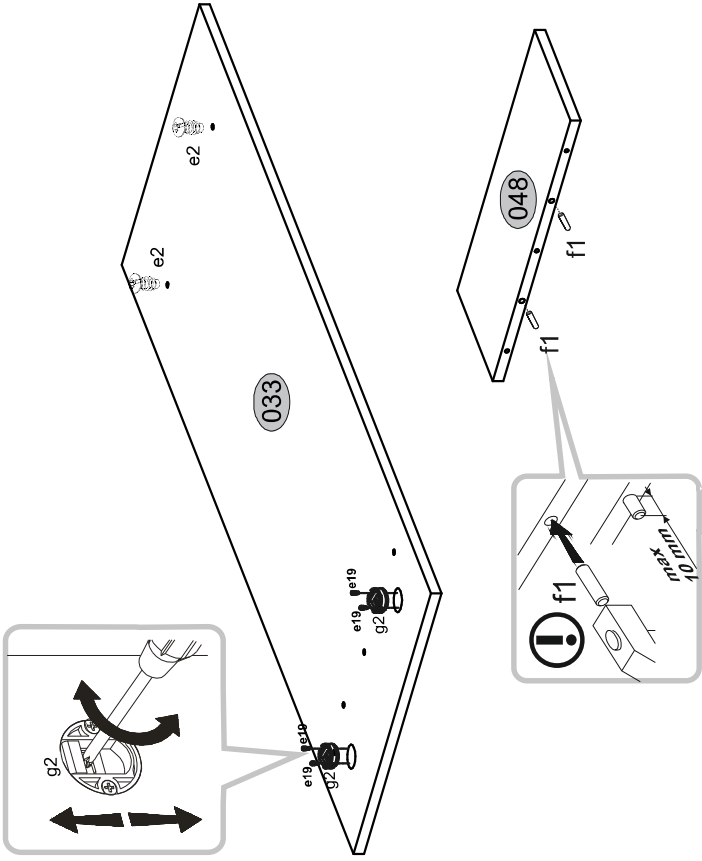




3

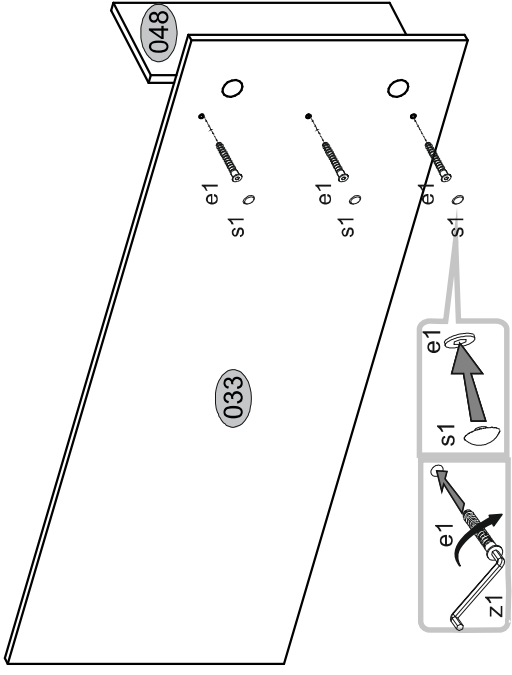

2

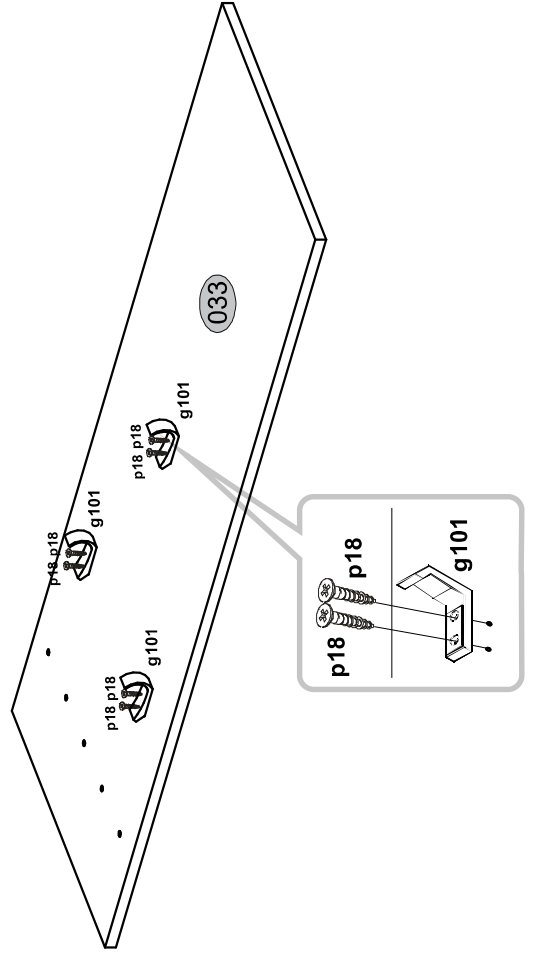








4

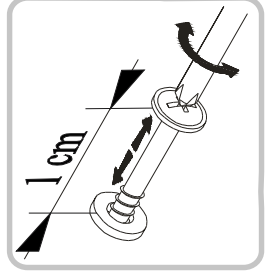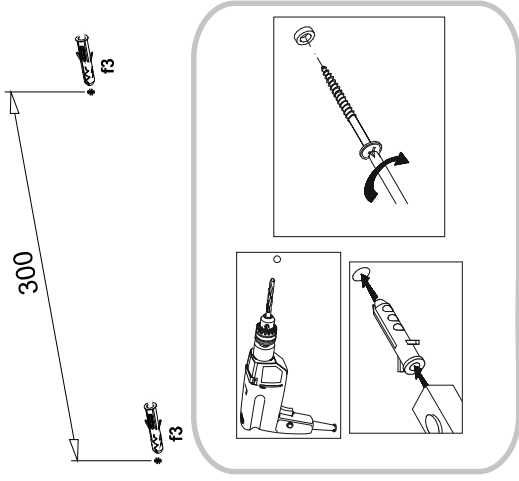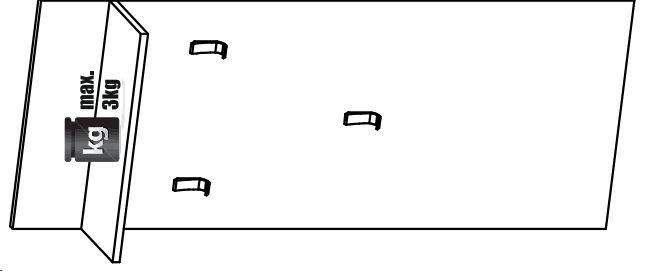

300

Installation manual

RUTA: high hanger

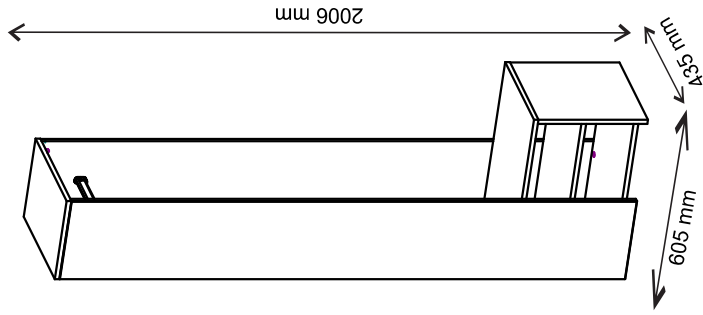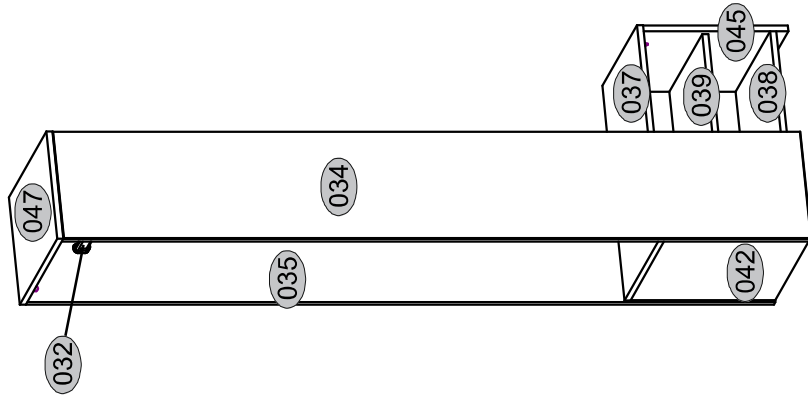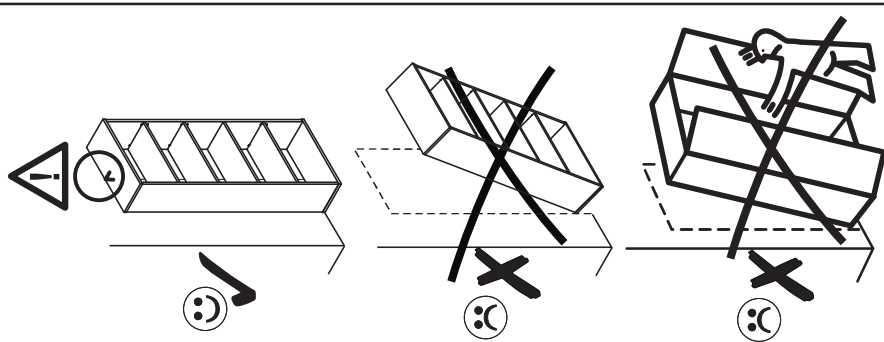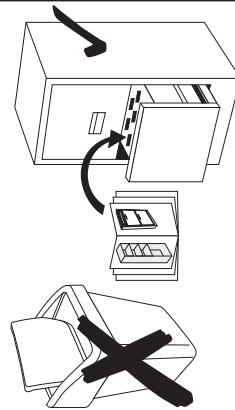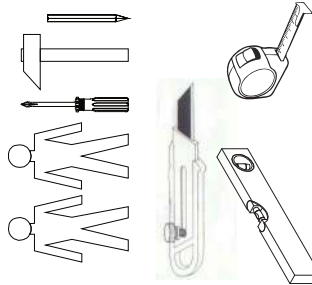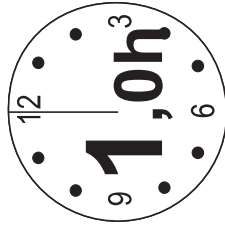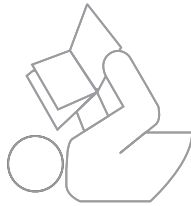


Code	Dimensions			Package
	1984	300	16	
034	1984	300	16	3/3
035	1984	300	16	3/3
037	600	400	16	2/3
038	566	400	16	2/3
039	566	380	16	2/3
042	384	400	16	2/3
045	384	400	16	2/3
047	300	434	16	1
032	395		1	1/3


1x φ5,60 mm p17	1x n14	1x φ5,60 mm p17	1x z1	4 x φ5,17 mm d1
1x φ10 mm f3	20x φ5,5/2 mm /16 r1	20x φ8,3/0 mm f1	6x φ3,5/16 mm p25	2x n301
6 x k1				




1

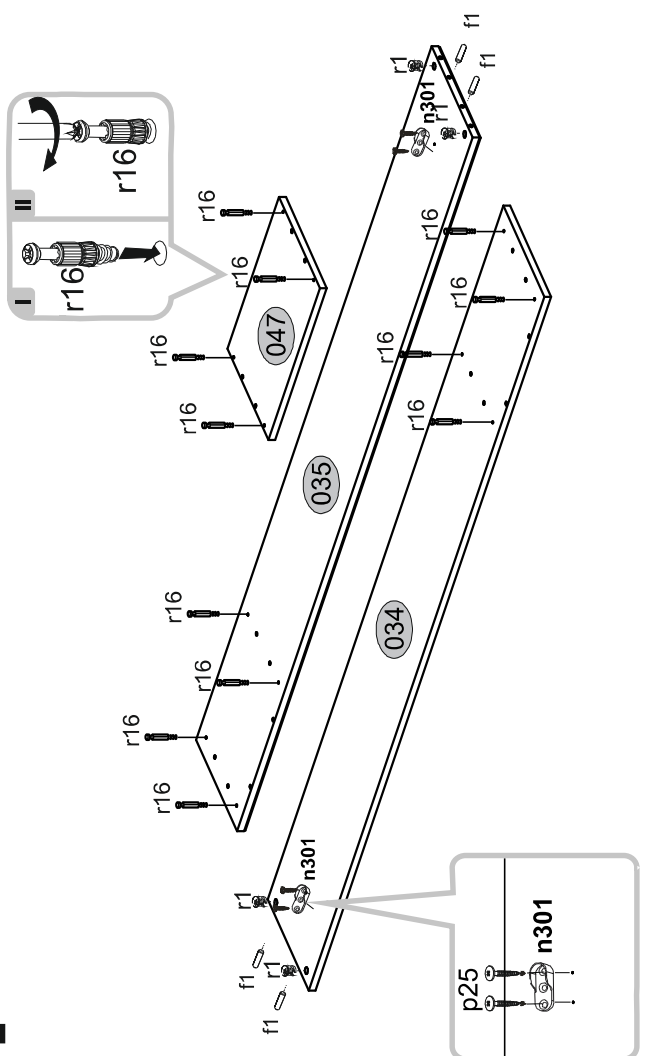


3

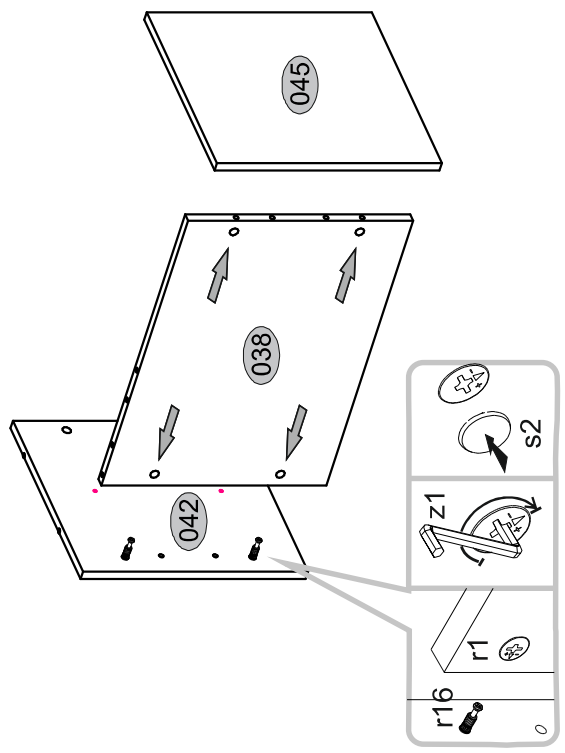


2

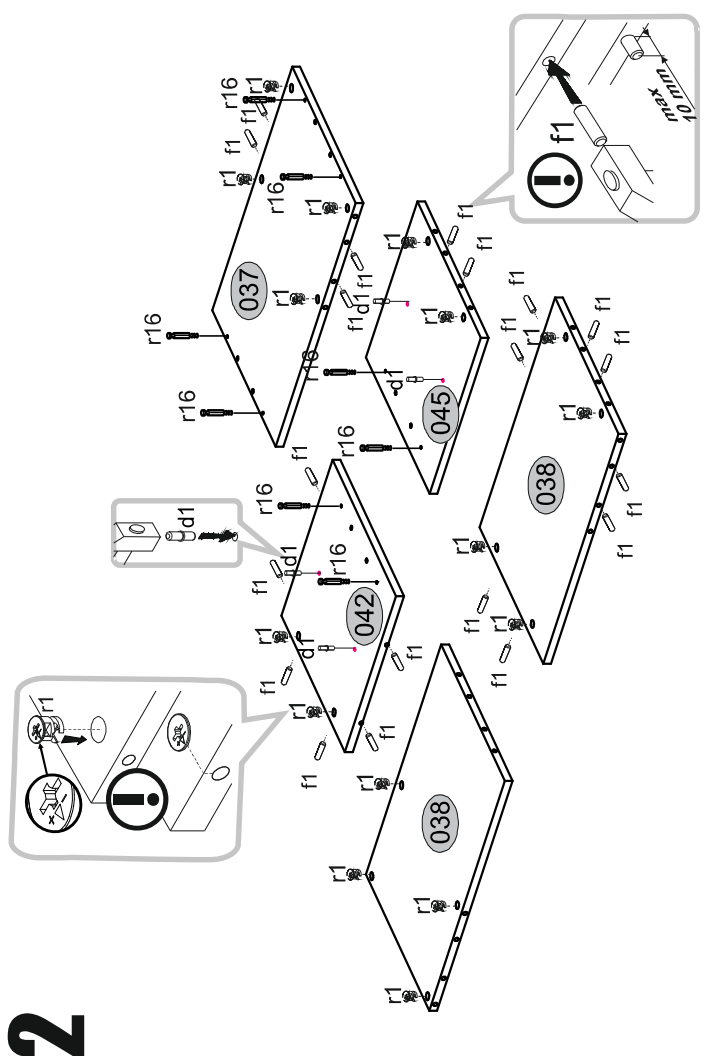

4

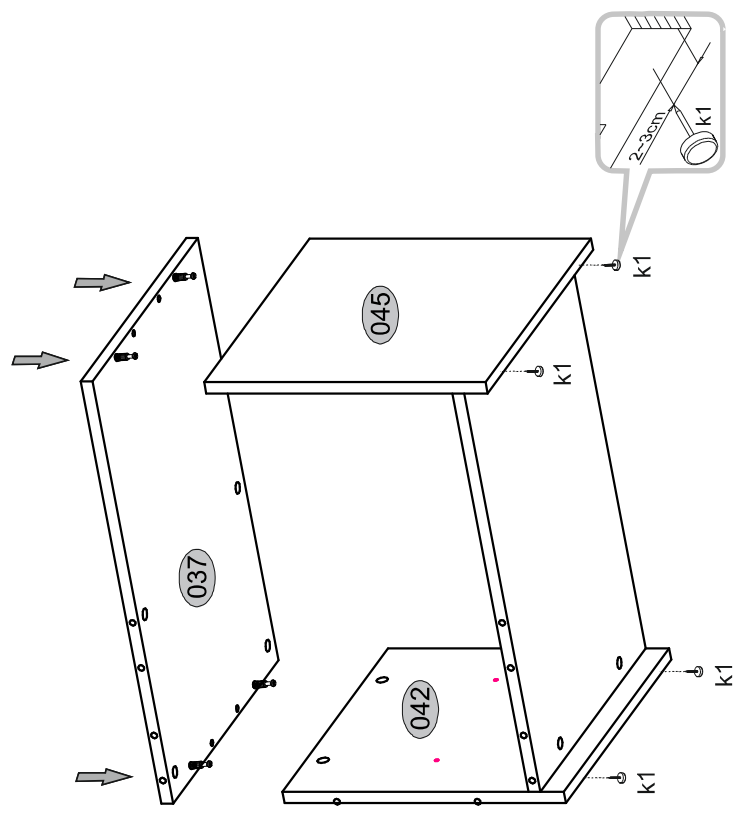

5

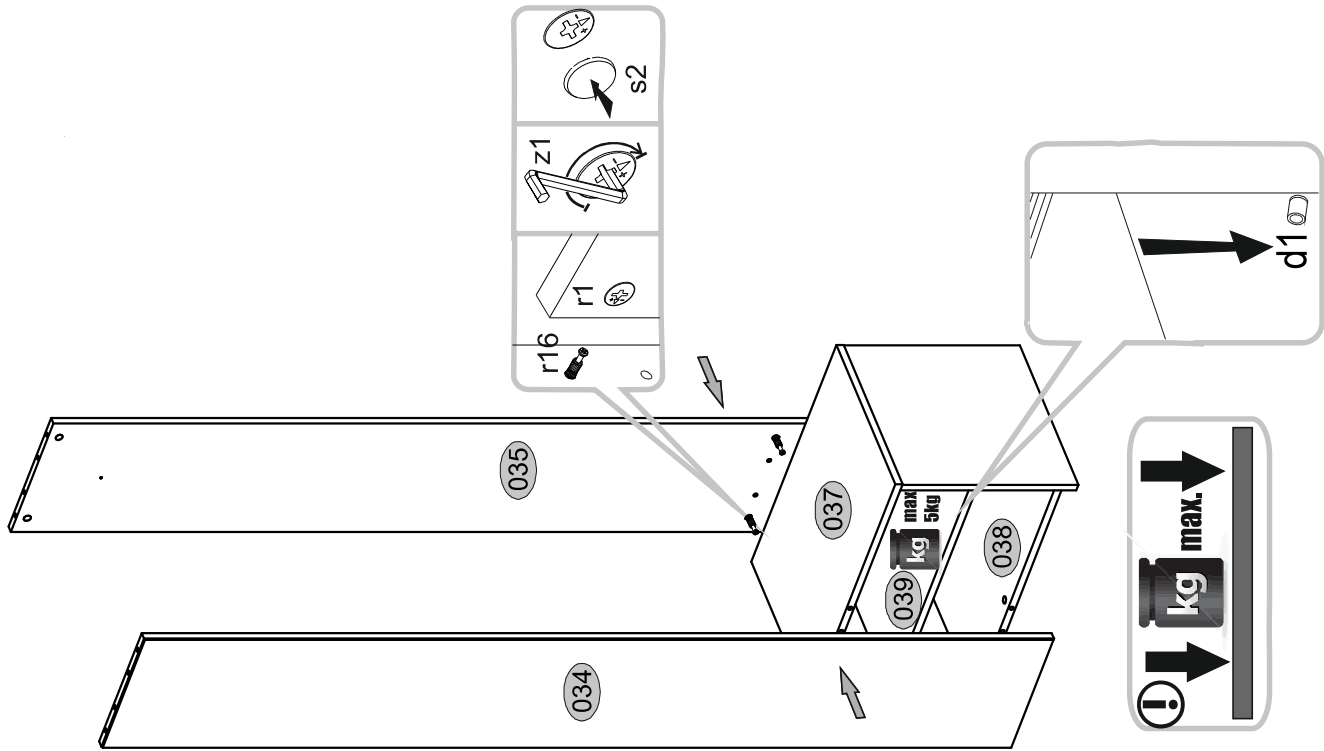

6

