
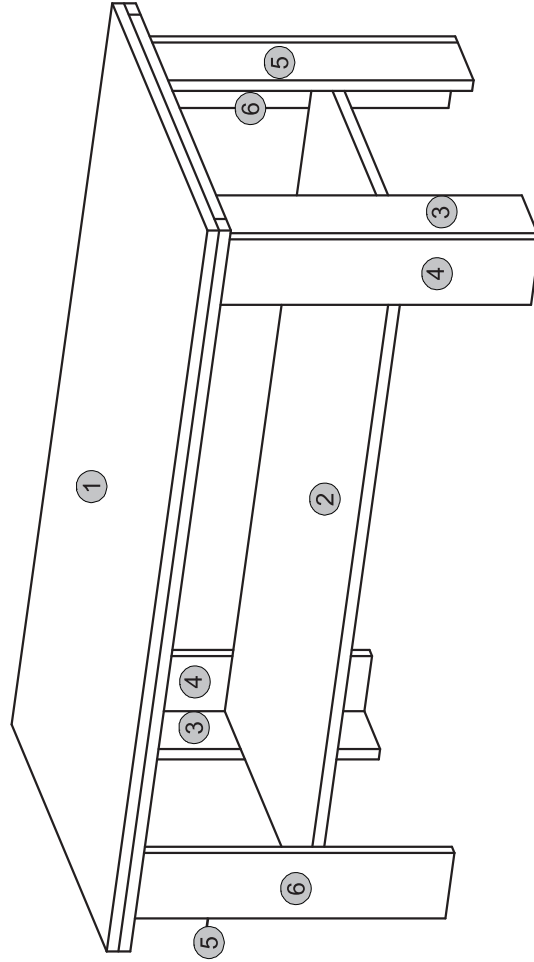
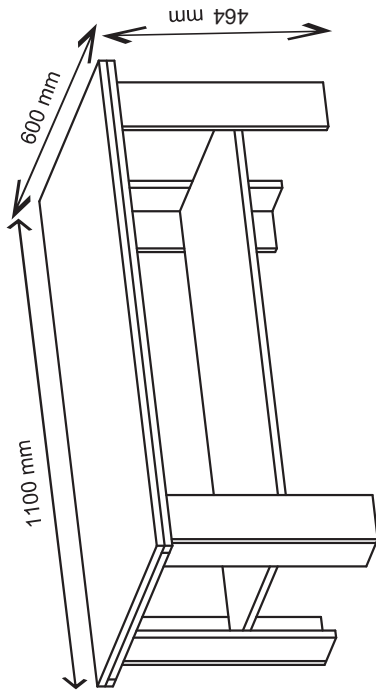
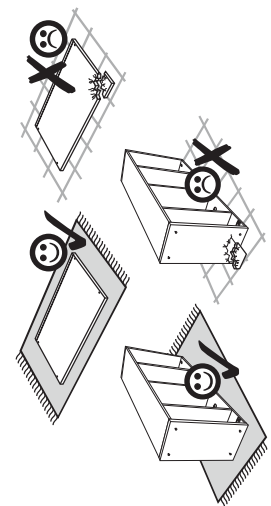
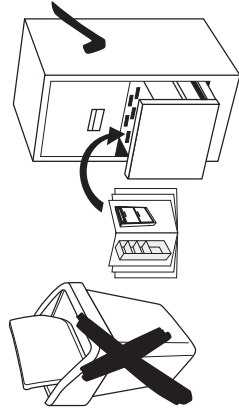
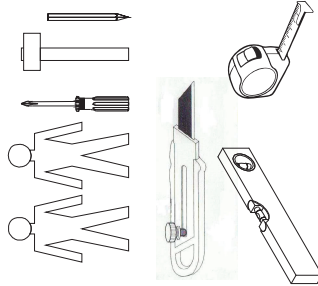
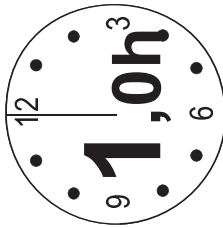





# Instalation manual

## STOLIK VERNE 7

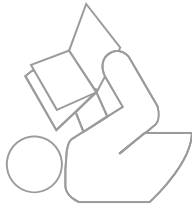


Element symbol	Dimensions	Code	Package
1	1100 600	LAWA 110x60.001	1/1
2	1004 504	LAWA 110x60.002	1/1
3	448 100	LAWA 110x60.003	1/1
4	448 100	LAWA 110x60.004	1/1
5	448 100	LAWA 110x60.005	1/1
6	448 100 2	LAWA 110x60.006	1/1

24X ø16	s2	1x ø16	z1	8x	k1	1x ø16	y1
24X	r16	24X ø15x12mm #16	r1	16X	f1	ø8x30 mm	

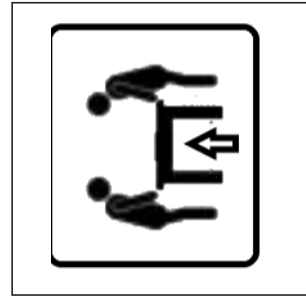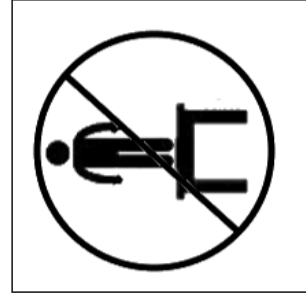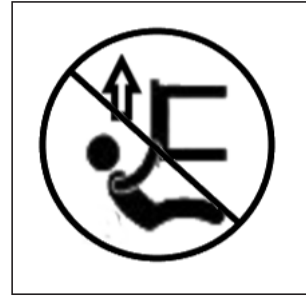


# 3

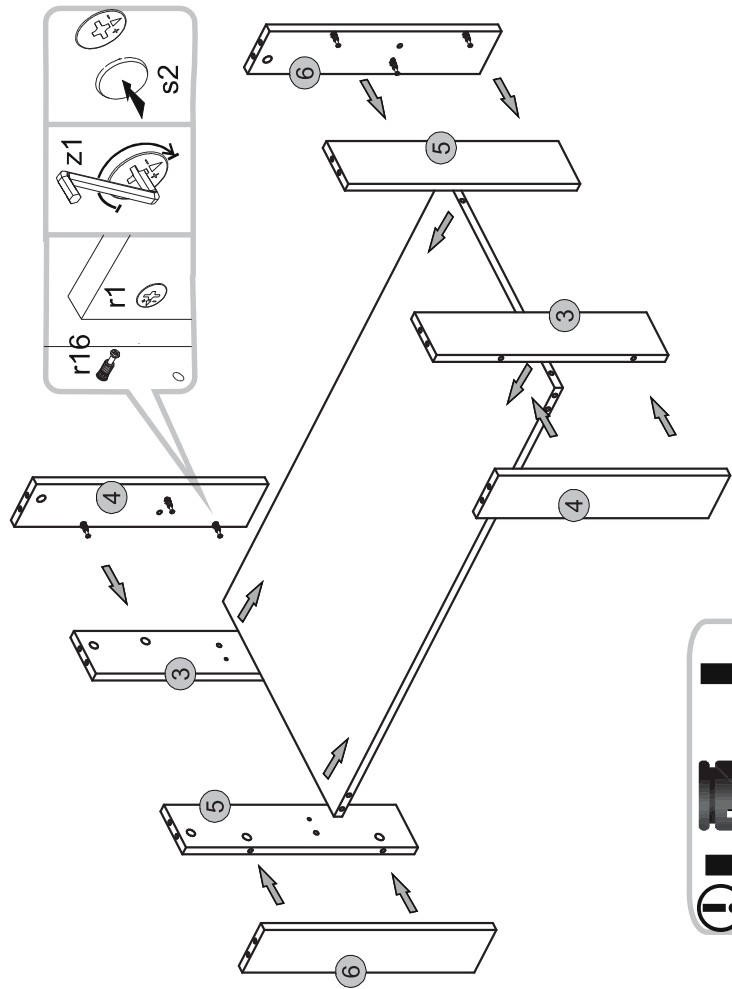


**kg max.**  
**kg max.**

# 4

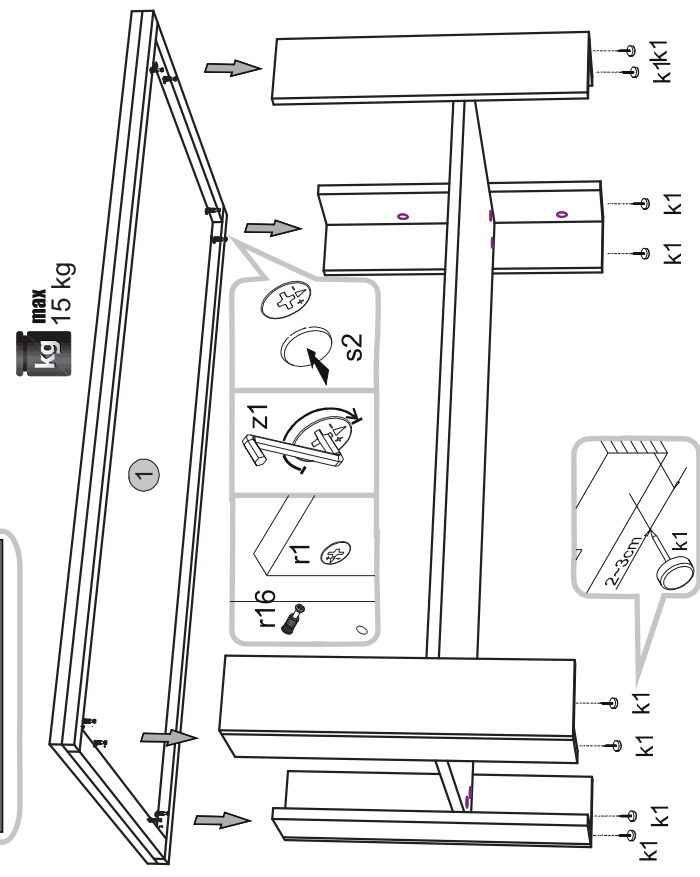

# 1

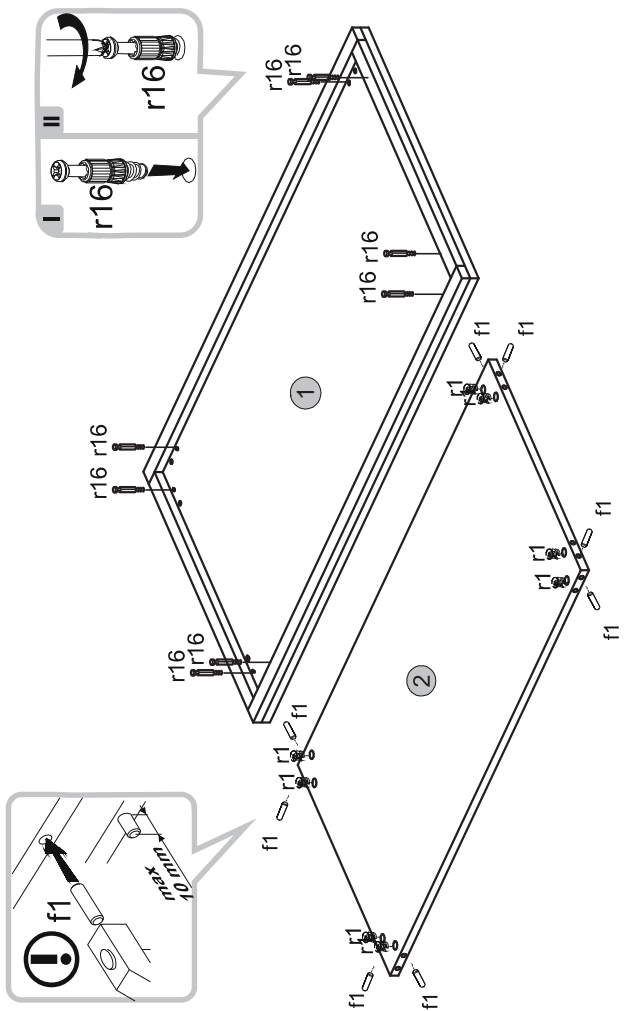

# 2

