
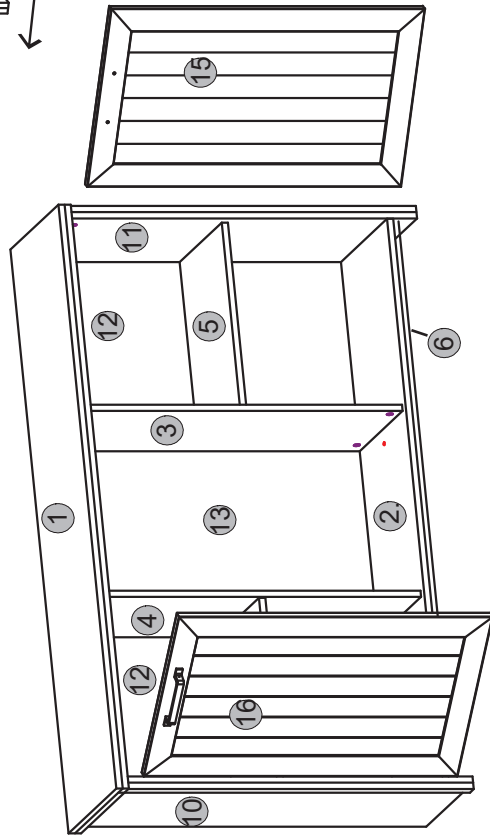
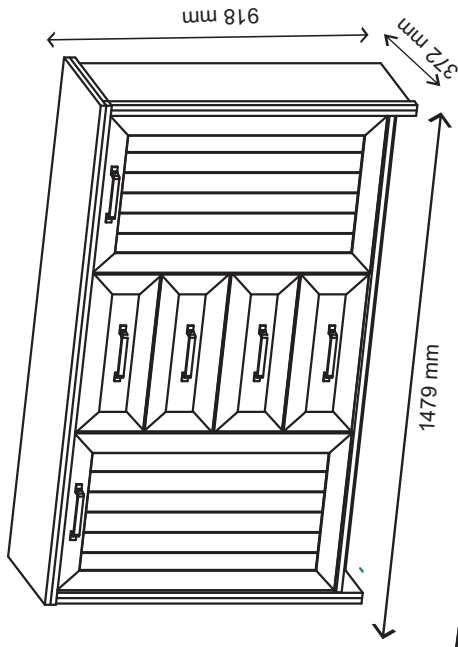
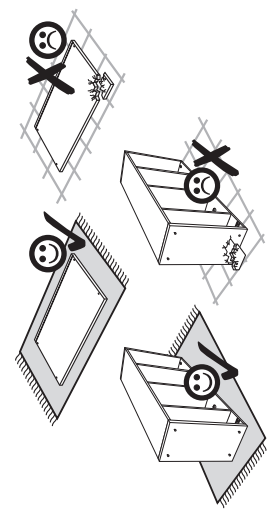
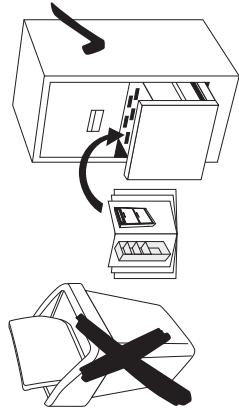
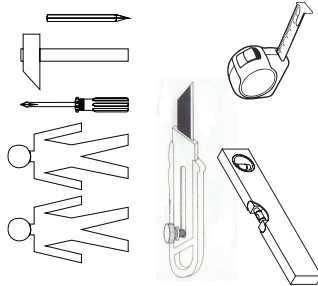
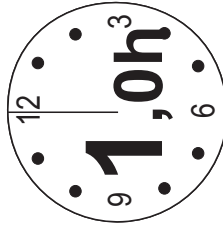


Instalation manual

KOMODA VERNE 5

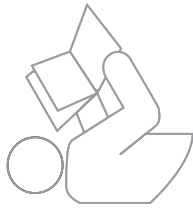


Element symbol	Dimensions	Code	Package	
1	1479	1 KOM_2D4S_vagonka.001	2/3	
2	1413	1 KOM_2D4S_vagonka.002	2/3	
3	826	1 KOM_2D4S_vagonka.003	2/3	
4	826	1 KOM_2D4S_vagonka.004	2/3	
5	463	2 KOM_2D4S_vagonka.005	2/3	
6	1413	1 KOM_2D4S_vagonka.006	2/3	
7	397	120	4 KOM_2D4S_vagonka.007	1/3
8	300	120	4 KOM_2D4S_vagonka.008	1/3
9	300	120	4 KOM_2D4S_vagonka.009	1/3
10	886	365	1 KOM_2D4S_vagonka.012	1/3
11	886	365	1 KOM_2D4S_vagonka.013	1/3
12	851	480	2 KOM_2D4S_vagonka.014	2/3
13	851	471	1 KOM_2D4S_vagonka.015	2/3
14	415	302	4 KOM_2D4S_vagonka.016	1/3
15	804	467	1 KOM_2D4S_vagonka.017	3/3
16	804	467	1 KOM_2D4S_vagonka.018	3/3
17	198	467	4 KOM_2D4S_vagonka.019	3/3


1x		f3	φ10 mm
1x		p17	φ5x60 mm
4x		y1	300 mm b-300
1x		z1	

6x		k1	
1x		n14	
6x		n260	
1x		p52	φ3x16 mm
1x		y1	300 mm b-300
8x		j8	M4x27mm
18x		f1	φ8x30 mm
18x		s1	φ5x17 mm d1
34x		p25	φ3,5x16 mm
56x		f1	φ8x30 mm


6x		n260	
34x		r1	φ5x12mm #16
18x		e1	φ5x80 mm
4x		a143	
4x		b119	
6x		2Z285	
34x		r16	
34x		s2	
50x		l1	




1

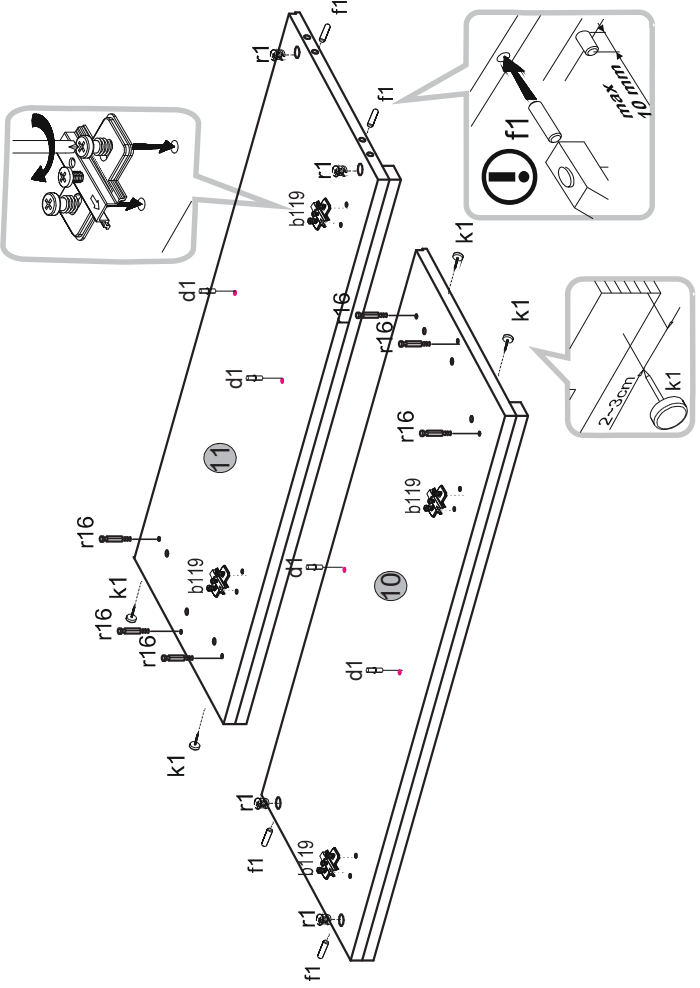


3

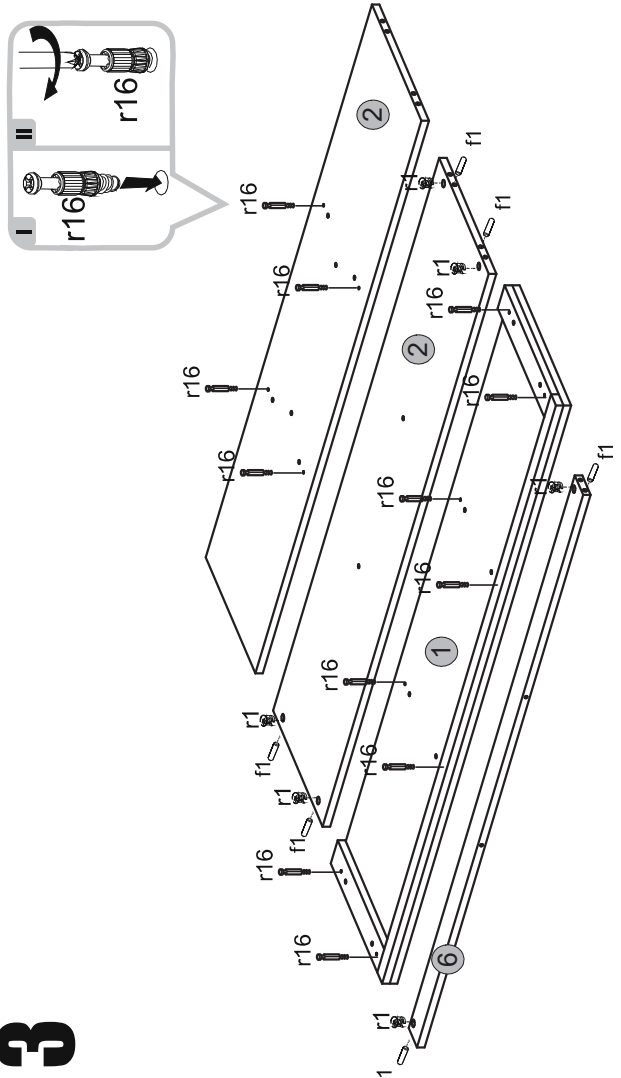

2


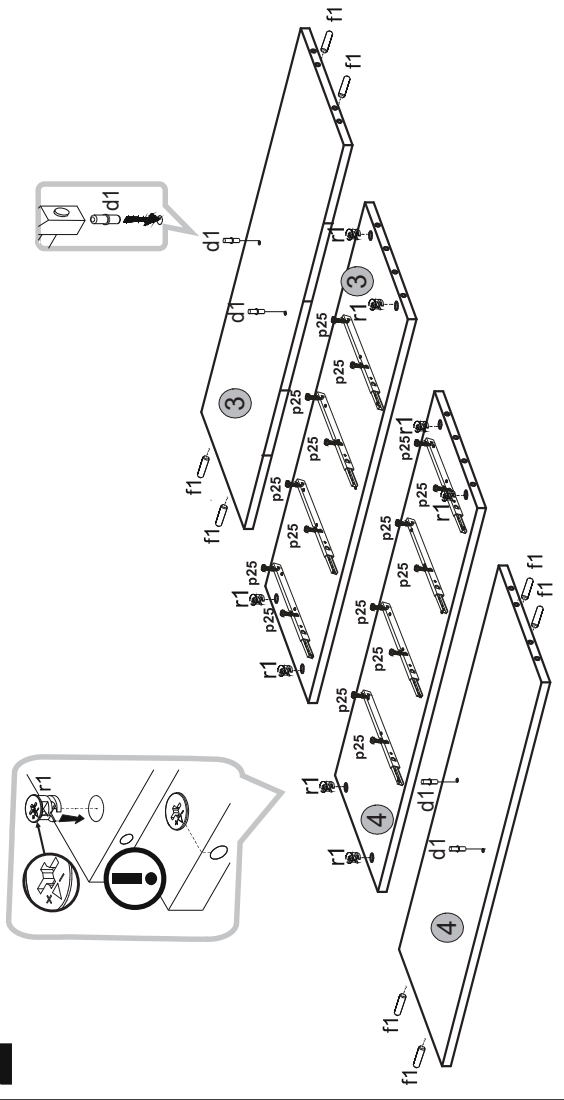


4

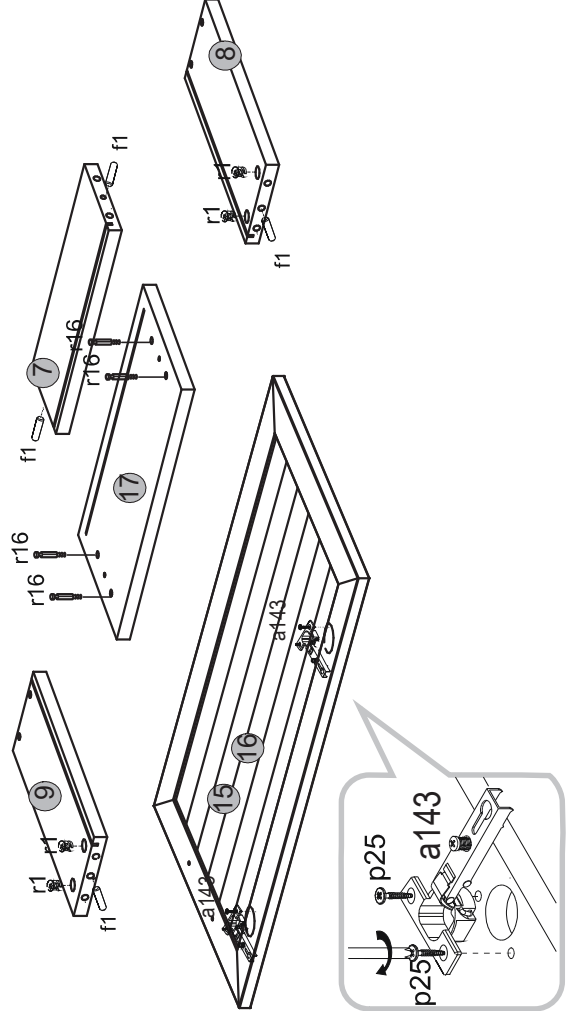


7



! a=b

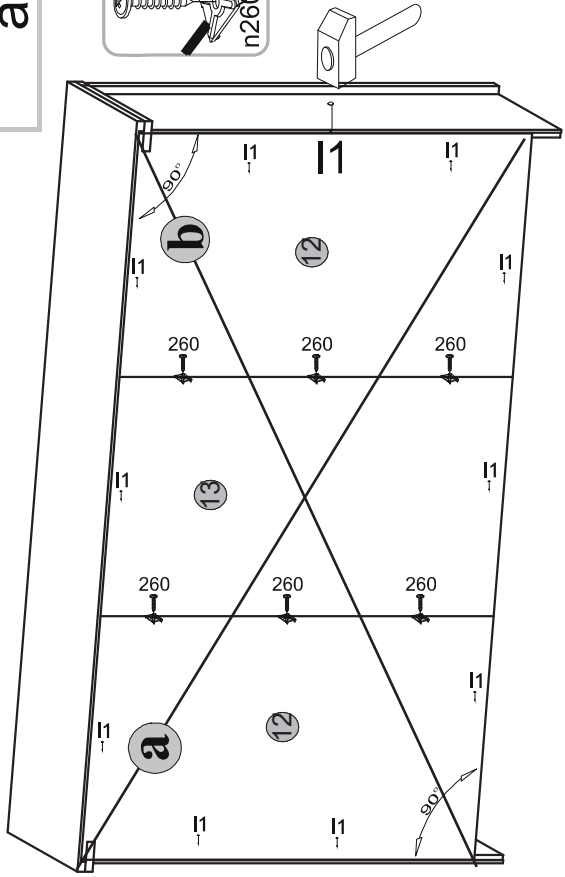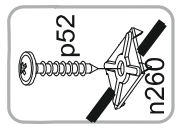


8

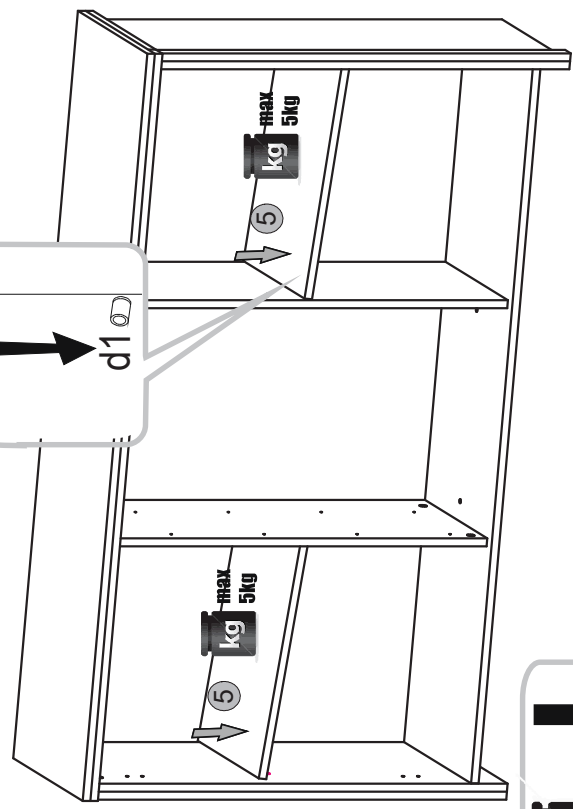





5

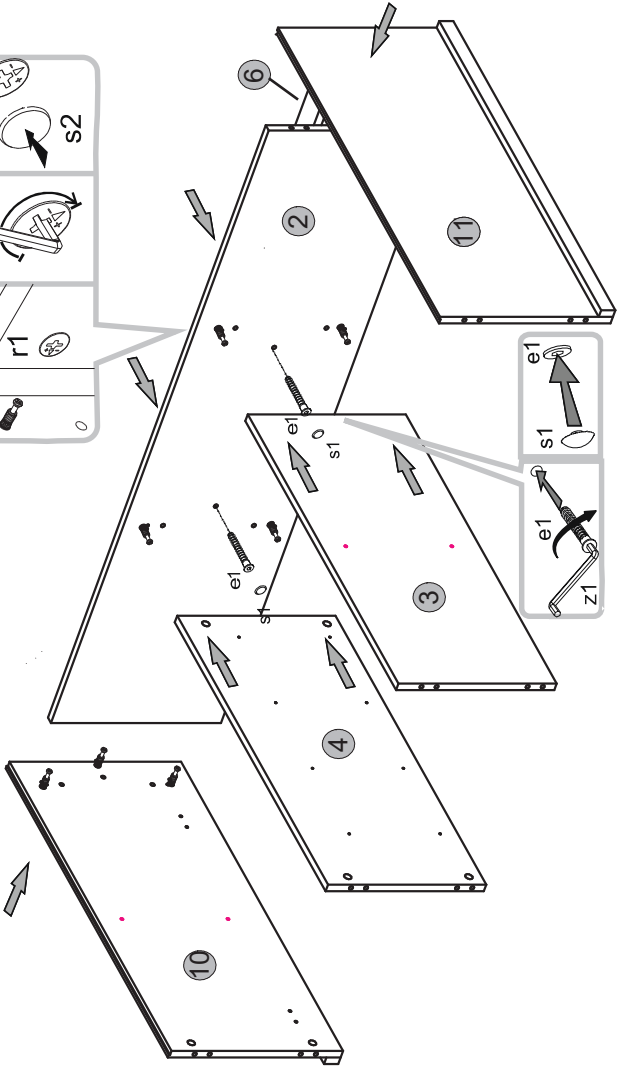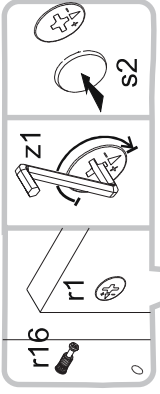

6

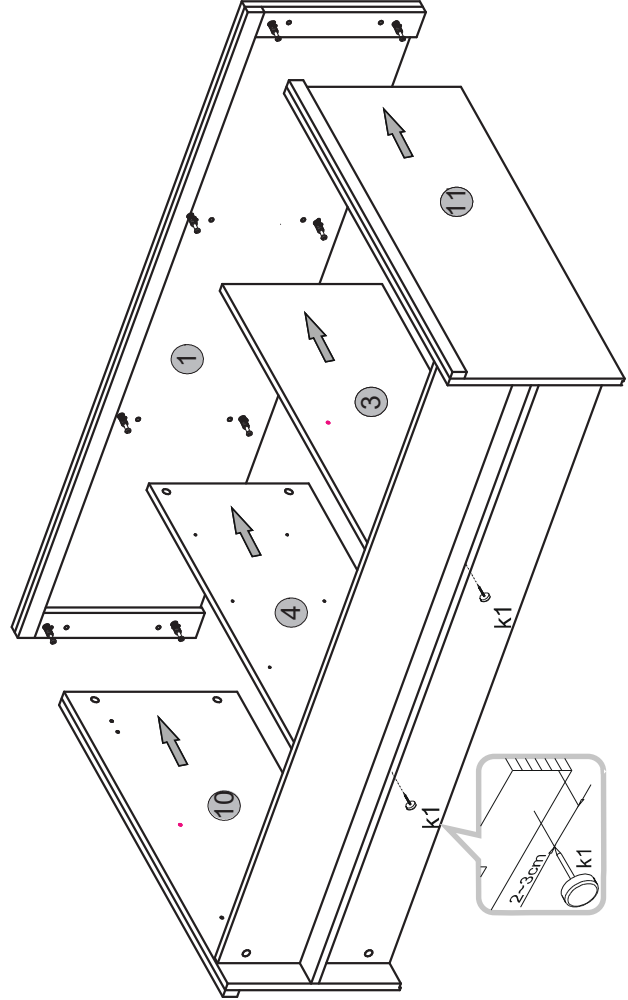

9

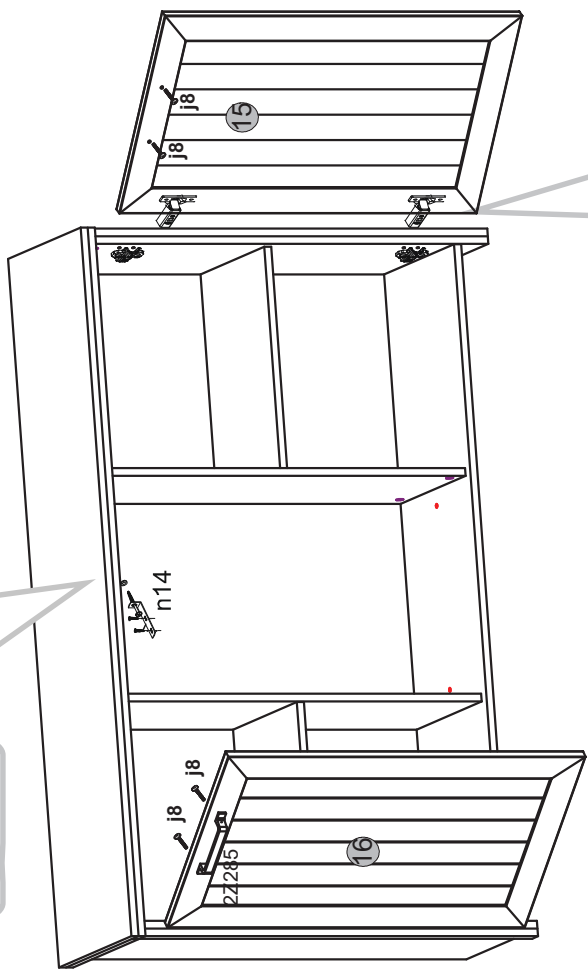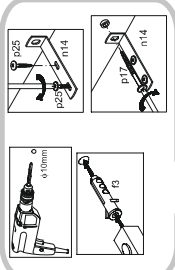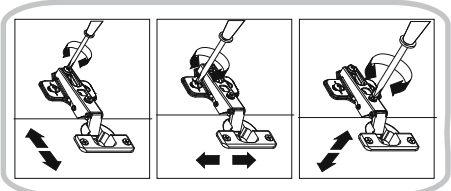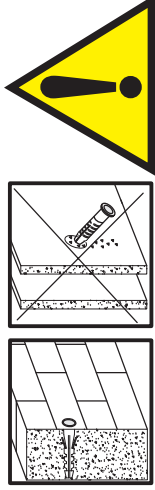

10

