
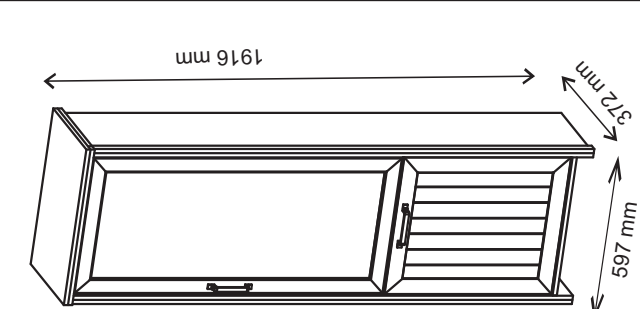
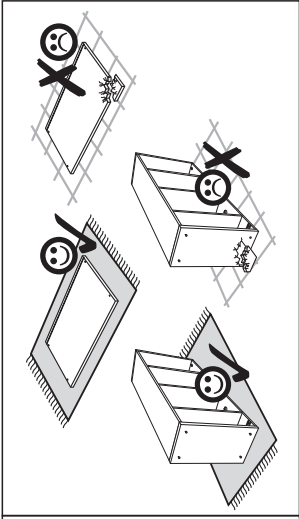
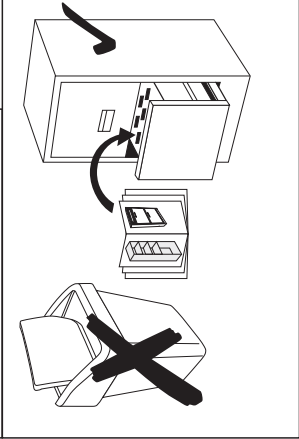
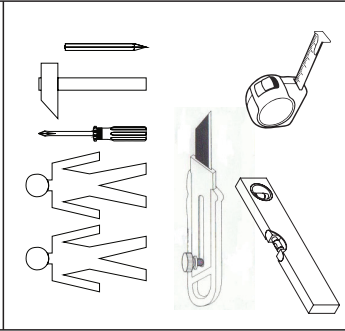
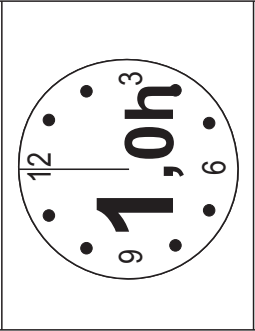


Instalation manual


WITRYNA WYSOKA VERNE 1

WITRYNA WYSOKA VERNE 1

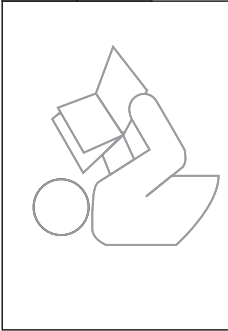


Element symbol	Dimensions			Code	Package
1	1884	365		1 WIT 1W1D	wagonka.001 1/3
2	1884	365		1 WIT 1W1D	wagonka.002 1/3
3	598	372		1 WIT 1W1D	wagonka.003 1/3
4	532	359		1 WIT 1W1D	wagonka.004 1/3
5	532	337		1 WIT 1W1D	wagonka.005 1/3
6	532	337		4 WIT 1W1D	wagonka.006 1/3
7	1849	550		1 WIT 1W1D	wagonka.009 1/3
8	1063	421		1 WIT 1W1D	wagonka.010 3/3
9	630	527		1 WIT 1W1D	wagonka.016 2/3


4x		1x		1x		1x		12x	
k1	φ5x60 mm	p17	n14	φ10 mm	f3	s4			
2x		4x		16x		12x		12x	
22/285	M4x25 mm	j8	d1	φ5x17 mm	r1	s2			
1x		12x		10 x		40x		5x	
z1	φ8,30 mm	f1	p25	φ3,5x16 mm	l1	a143	b119		




1

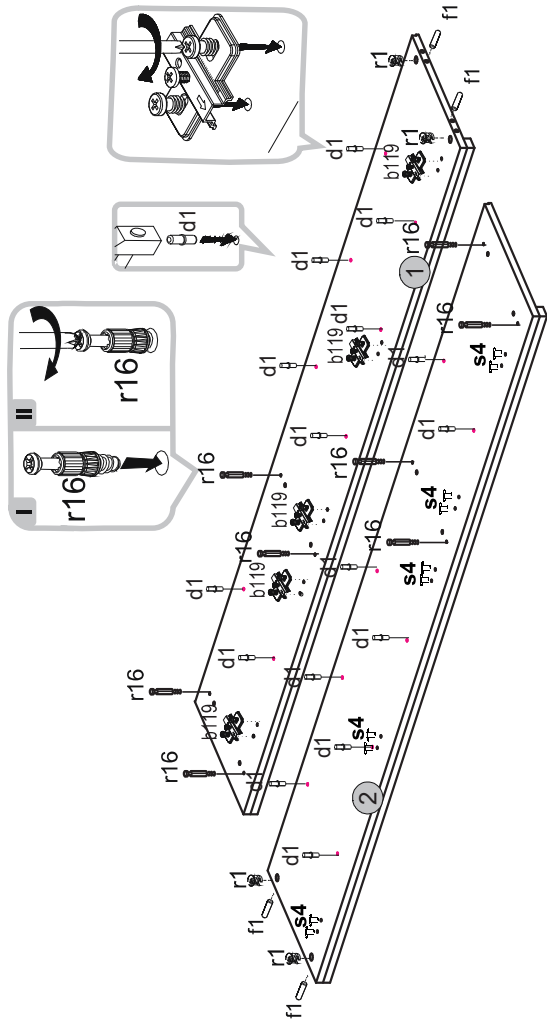


3

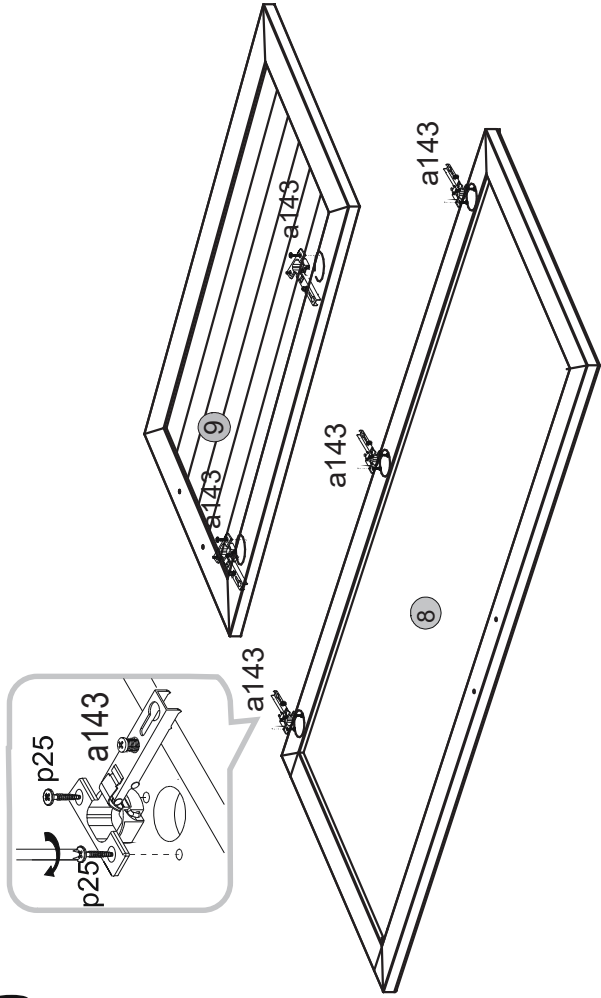


2

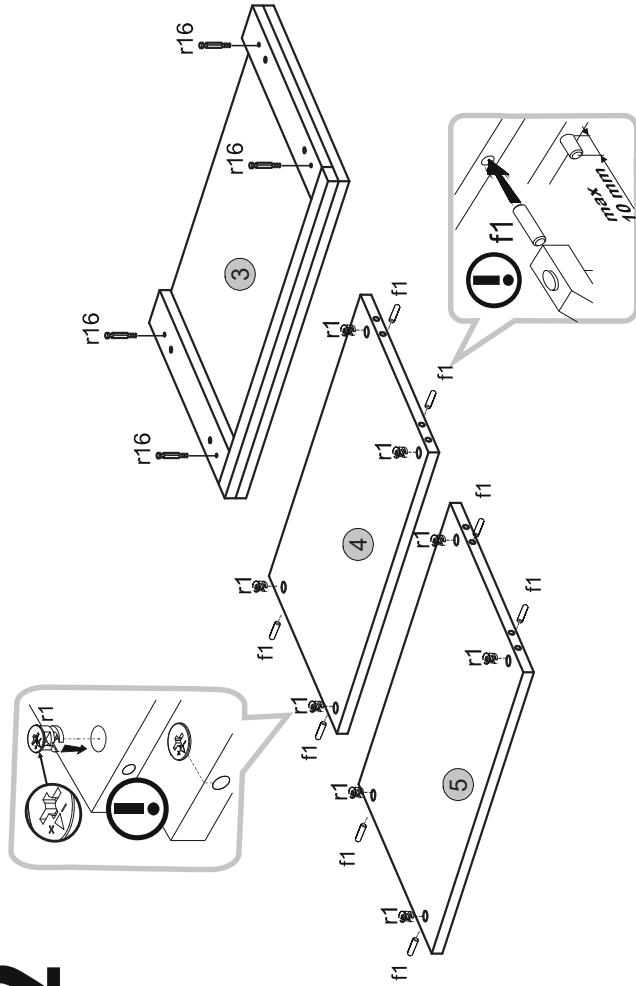



4

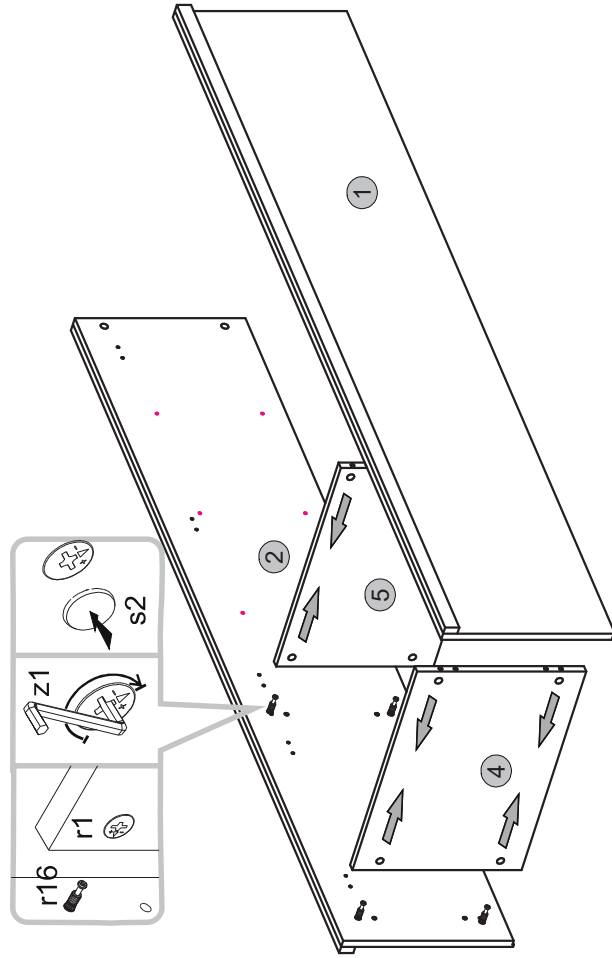

5

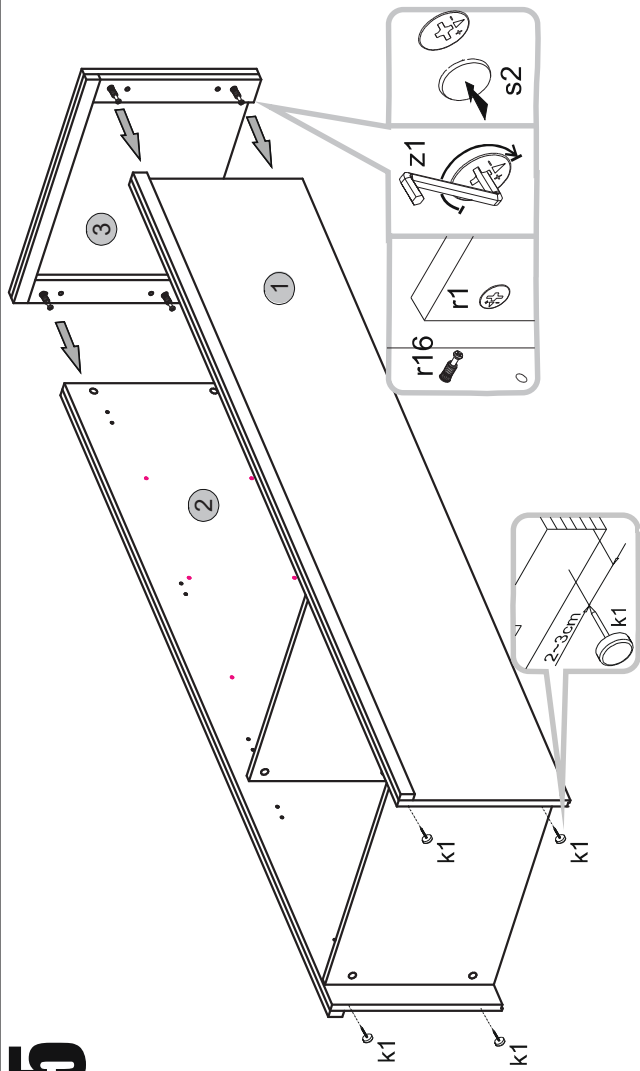

6

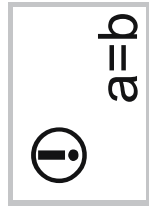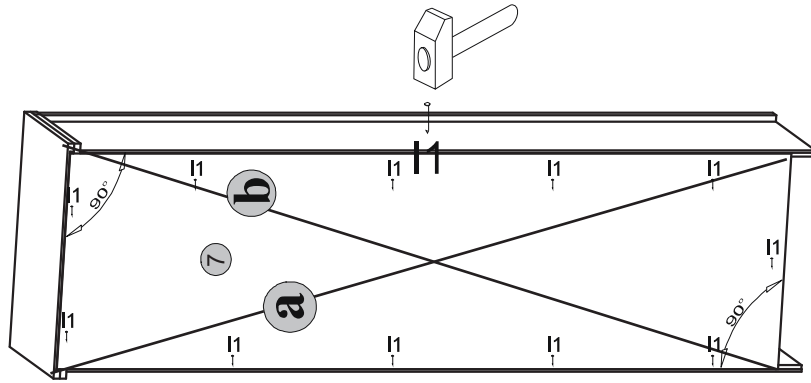

$a=b$

7

