
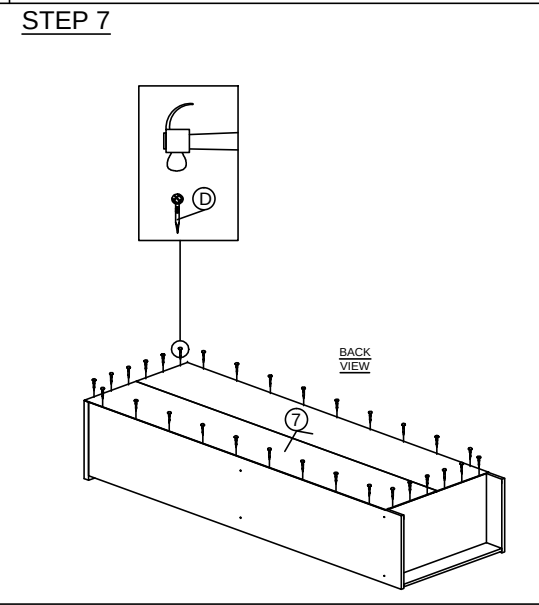
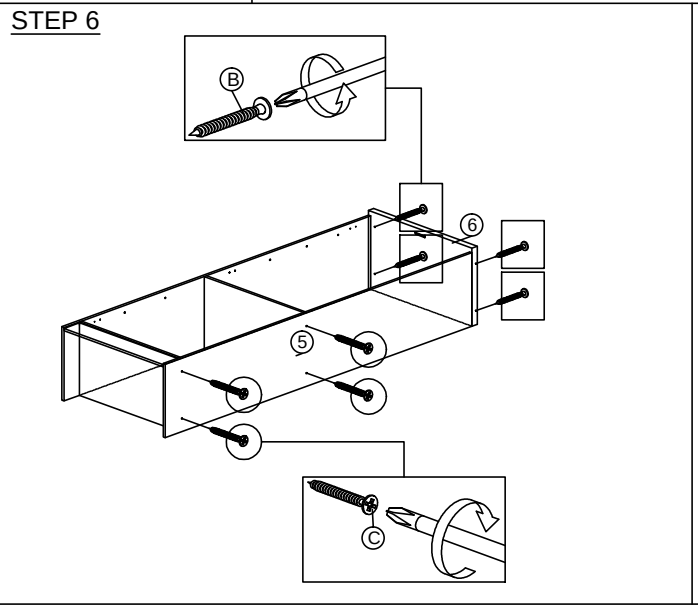
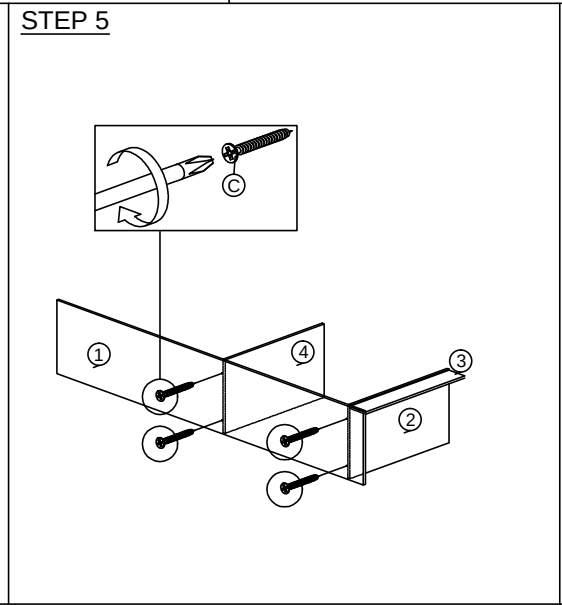
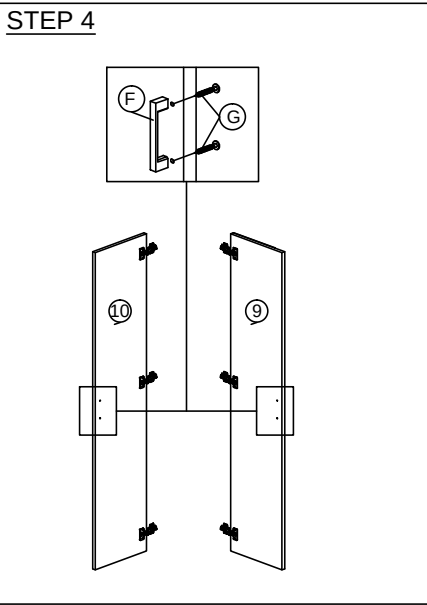
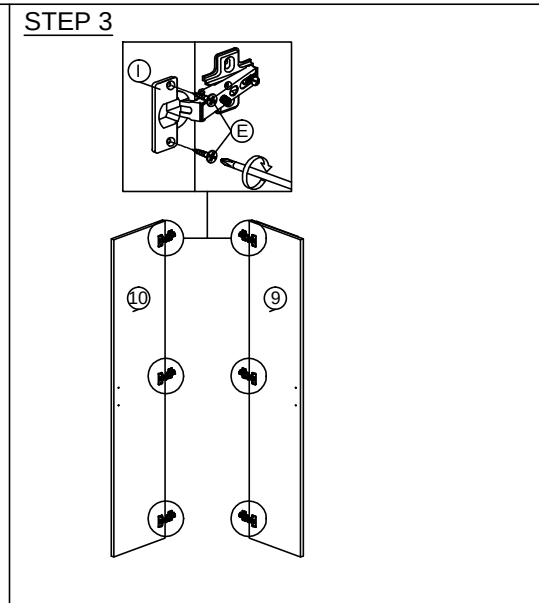
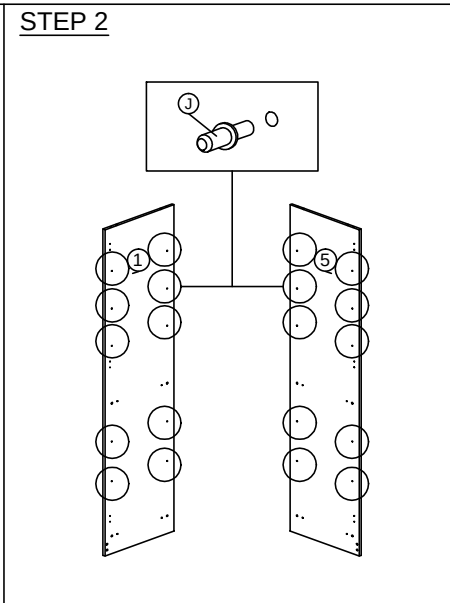
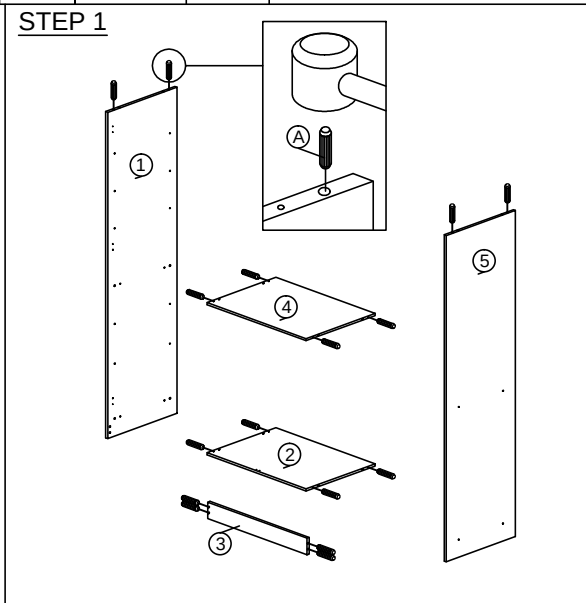


ASSEMBLY INSTRUCTION

MODEL : HM 2379.01

DESC : 2 DOORS SHOE CABINET

HARDWARE	A	B	C	D	E	F	G	H	I	J
	 WOOD DOWEL 6 X 30 16	 CB SCREW M4X50MM 4	 CB SCREW M4X38MM 8	 NAIL 5/8 30	 TAPPING SCREW MBX12MM 24	 HANDLE 108 -96MM 2	 CB SCREW M4X25MM 4	 PVC NAIL WITH PIN 1/2 5	 HINGES 2/8 6	 SHELF SUPPORT 20

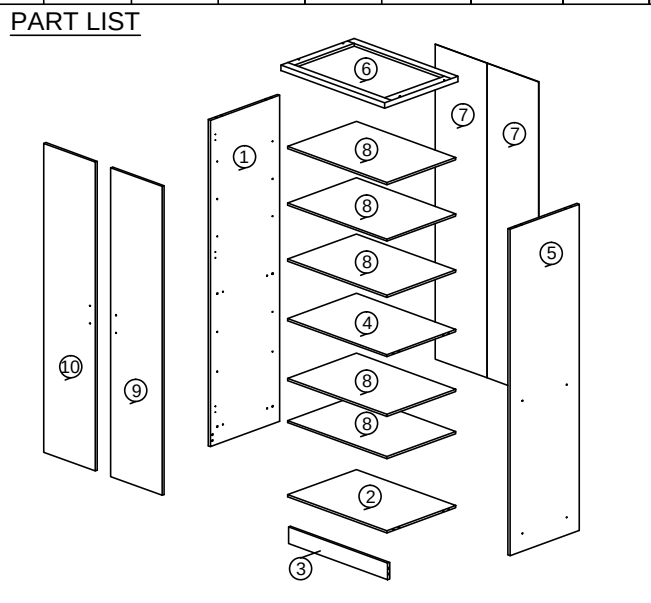




SOFT, DRY CLOTH



CHEMICAL




HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

ASSEMBLY INSTRUCTION


MODEL : HM 2379.01

DESC : 2 DOORS SHOE CABINET


STEP 8

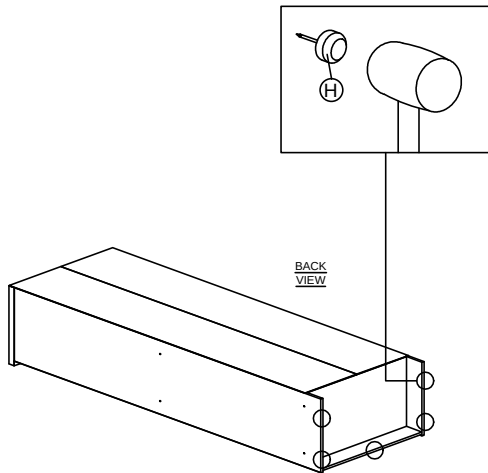

STEP 9

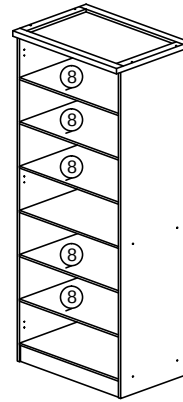

COMPLETED

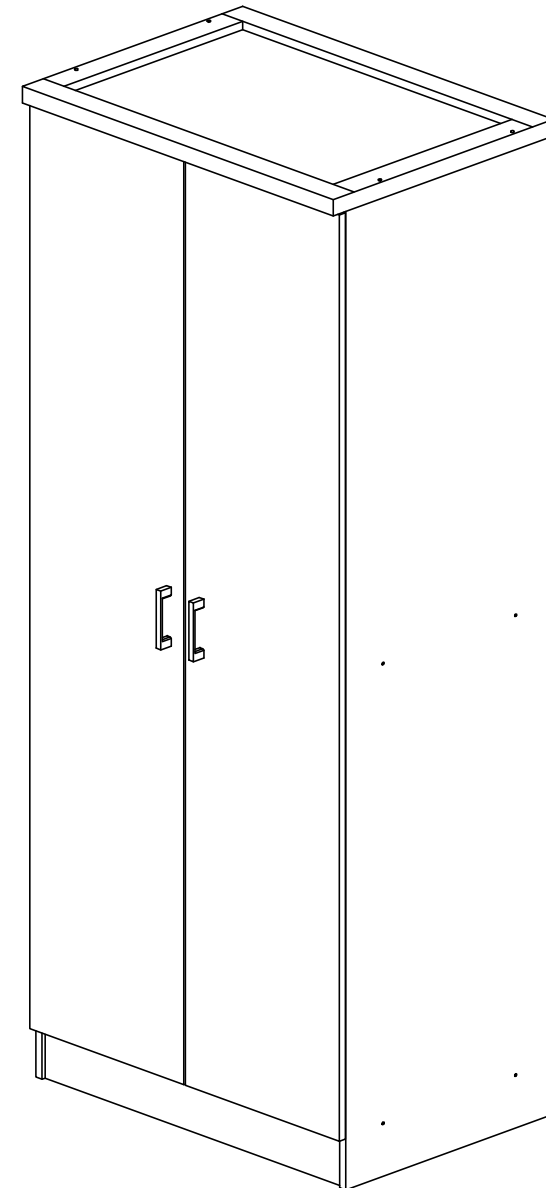

STEP 10

