

ASSEMBLY INSTRUCTION


MODEL : HM 351.01 DESC : 3 DOOR TOP CLOSET WITH WARDROBE

	SOFT DRY CLOTH	CHEMICAL		HEAT	KEEP DRY		HANDLE WITH CARE	DO NOT USE KNIFE


HARDWARE	
A	WOOD DOWEL 6 X 20 12
B	HANDLE 108 -80MM (PVC) 3
C	CD SCREW MAX25MM 12
D	CD SCREW MAX25MM 12
E	HINGES 5/8 4 SETS
F	HINGES 2/8 2 SETS
G	CD SCREW MAX32MM 24
H	NAIL 5/8 20

PART LIST


STEP 1

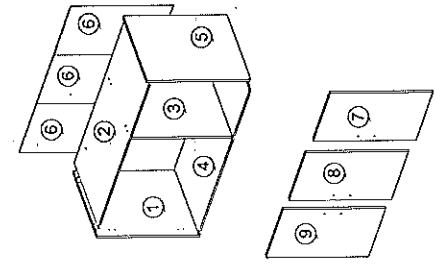


STEP 2

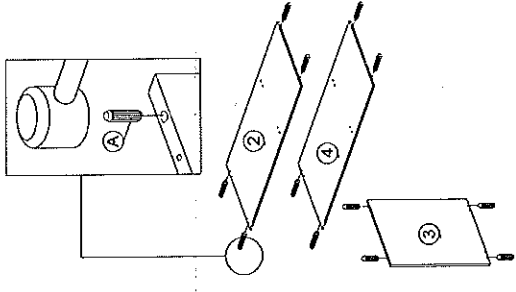


STEP 3

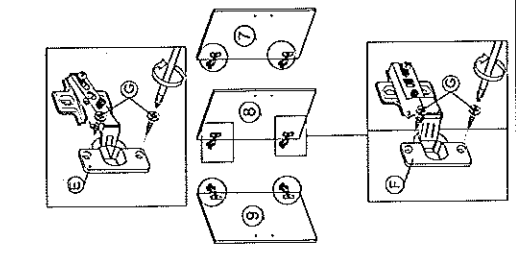


STEP 4

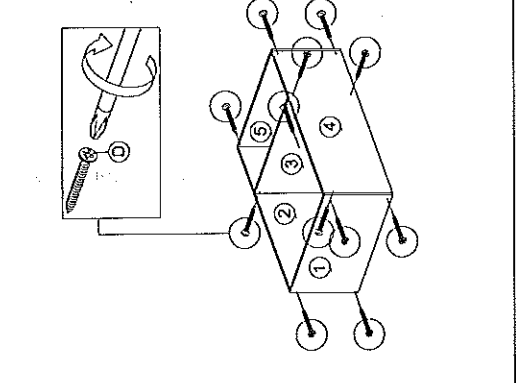


STEP 5

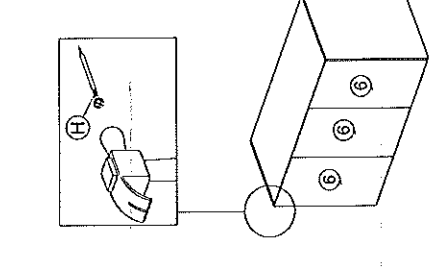


STEP 6

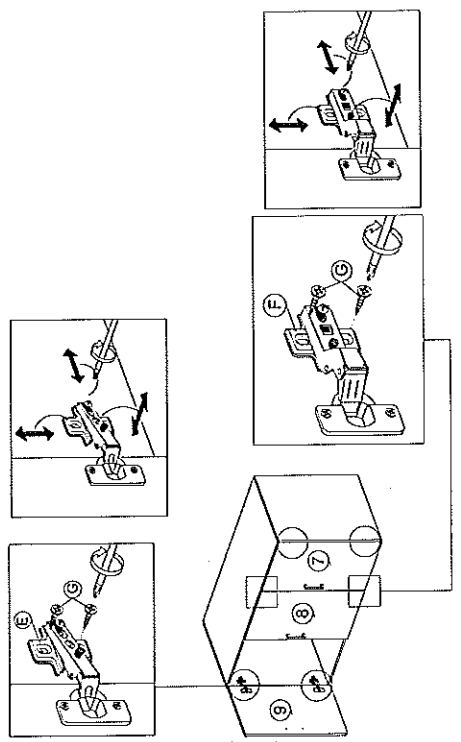

COMPLETED

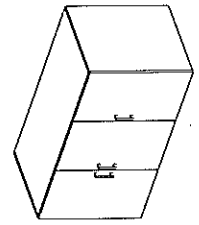

STEP 1



COMPLETED

