# **ASSEMBLY INSTRUCTIONS**

## MODEL: 097-000008



### IMPORTANT NOTE: \*

- \* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

HARDWARE LIST			PART LIST		
Α	JCBC M6 x 25mm + S/W M6 + F/W M6 x 13mm	4PCS	1	RIGHT SIDE FRAME	1PC
			2	LEFT SIDE FRAME	1PC
В	JCBC M6 x 45mm + S/W M6 + F/W M6 x 13mm	4PCS	3	FRONT STRETCHER	1PC
			4	BACK STRETCHER	1PC
			5	TOP REST	1PC
C	ALLEN KEY M4	1PC	6	CUSHION SEAT	1PC
D	L BRACKET	4PCS			

8PCS

2PCS


#### CAUTIONS:

(1) DO NOT <u>FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY</u> <u>UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.</u>

(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS.)

(2) KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.

#### STEP 1

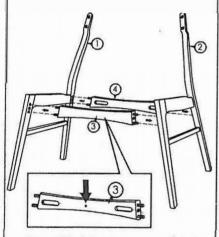

PH SCREW M4 x 12mm 4tta()

WOOD DOWEL M8 x 25mm

Front Stretcher has a small hole for identification.

