

# ASSEMBLY INSTRUCTIONS

**MODEL : 097-000011**

**IMPORTANT NOTE :**

- \* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- \* DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

HARDWARE LIST		PART LIST	
A	JCBC M6 x 25mm + S/W M6 + F/W M6 x 13mm	4PCS	1 LEG L/R 2PCS
	B	JCBC M6 x 55mm + S/W M6 + F/W M6 x 13mm	4PCS
C		JCBC W SCREW M7 x 40mm	1PC
	D	FH SCREW #8 x 25mm	16PCS
E		ALLEN KEY M4	1PC


**CAUTIONS :**

(1) **DO NOT FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.**


(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS.)

(2) **KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.**


**STEP 1**

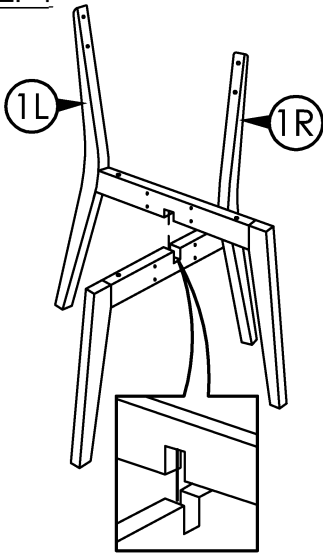


**STEP 2**

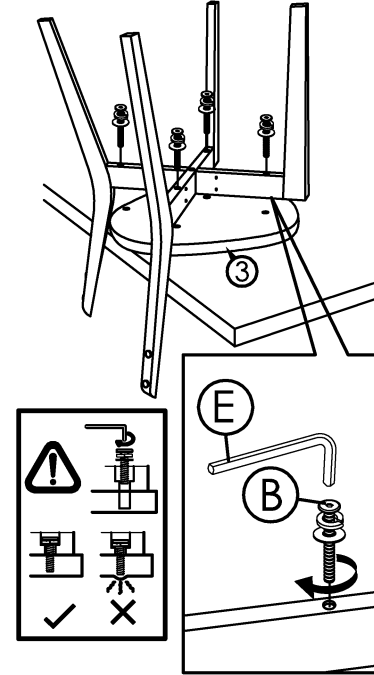


**STEP 3**

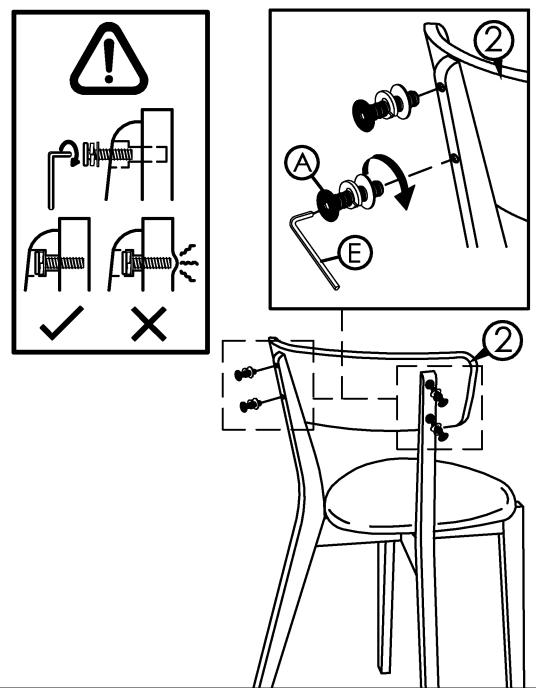


**STEP 4**

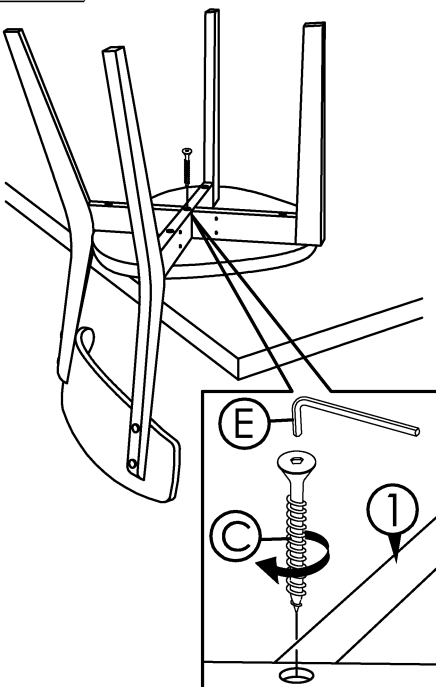

**STEP 5**

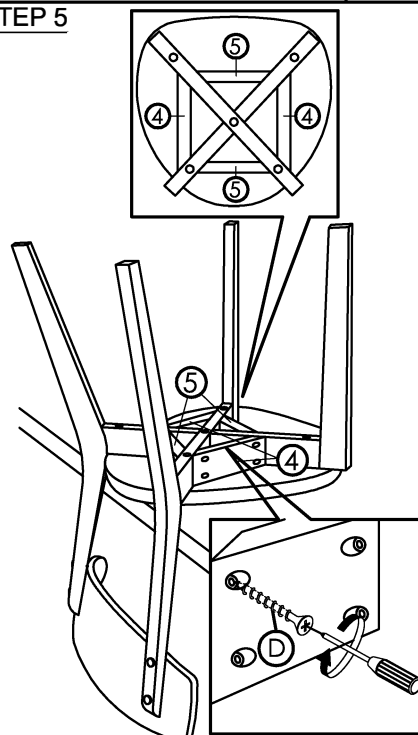

**STEP 6**

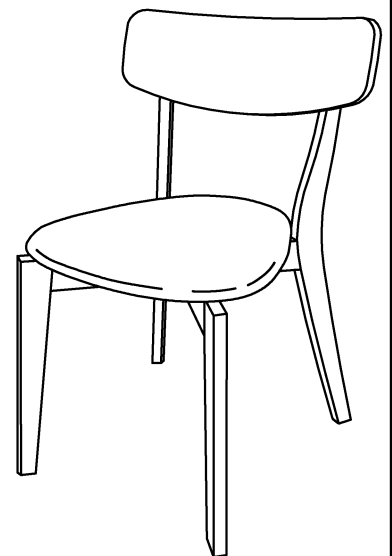

COMPLETED  
CHAIR ASSEMBLY.