
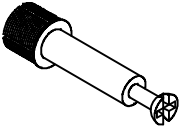


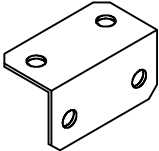

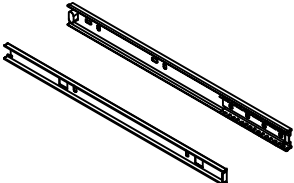
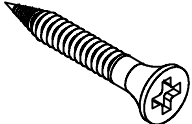



246-000031

<div>Minifix Screw</div> <div></div> <div>X46</div> <div>A</div>	<div>Screw $\phi 35*14$</div> <div></div> <div>X36</div> <div>E</div>
<div>Minifix</div> <div></div> <div>X46</div> <div>B</div>	<div>Angle support fix</div> <div></div> <div>X4</div> <div>F</div>
<div>Wood Minifix</div> <div></div> <div>X5</div> <div>C</div>	<div>Drawer rail</div> <div></div> <div>X2</div> <div>G</div>
<div>Screw $\phi 3*30$</div> <div></div> <div>X8</div> <div>D</div>	

Two drawer ,front side one drawer,back side one drawer

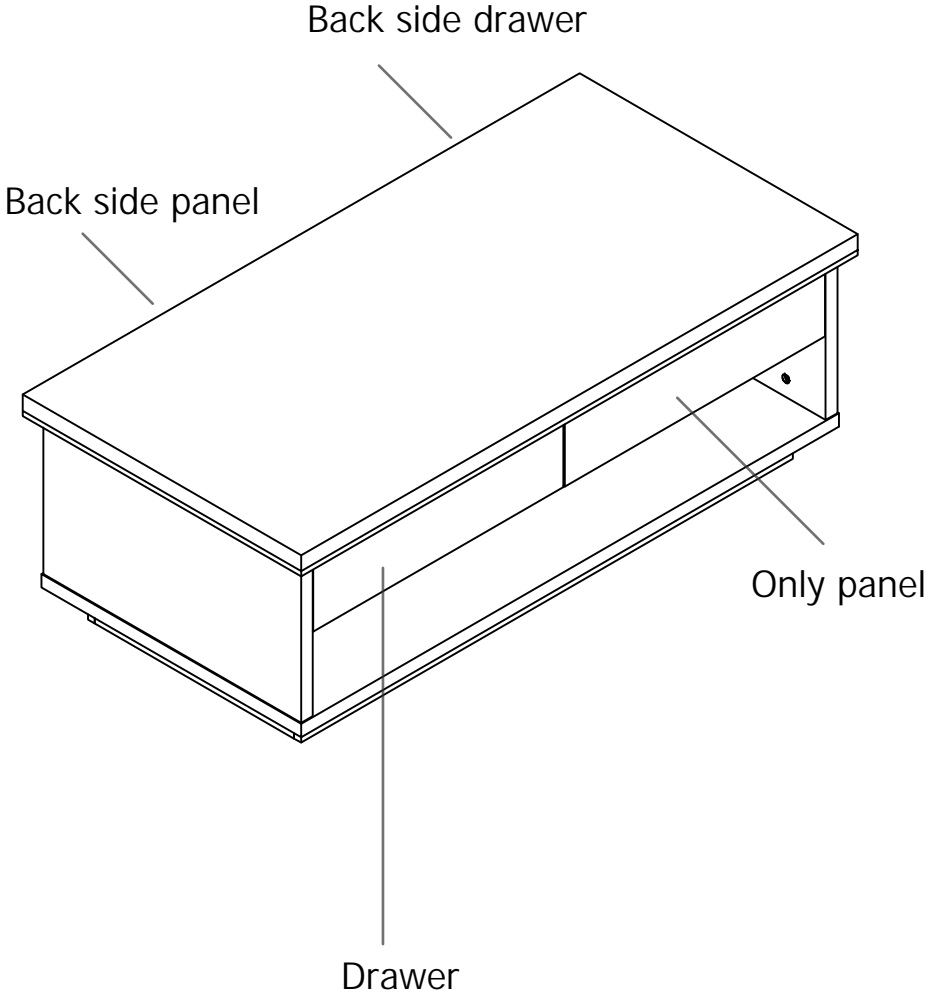


(1200X600X420)

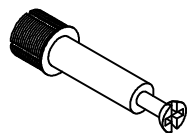

X4

A




X4

B


STEP:1

To fix the panel (1) and panel (2)

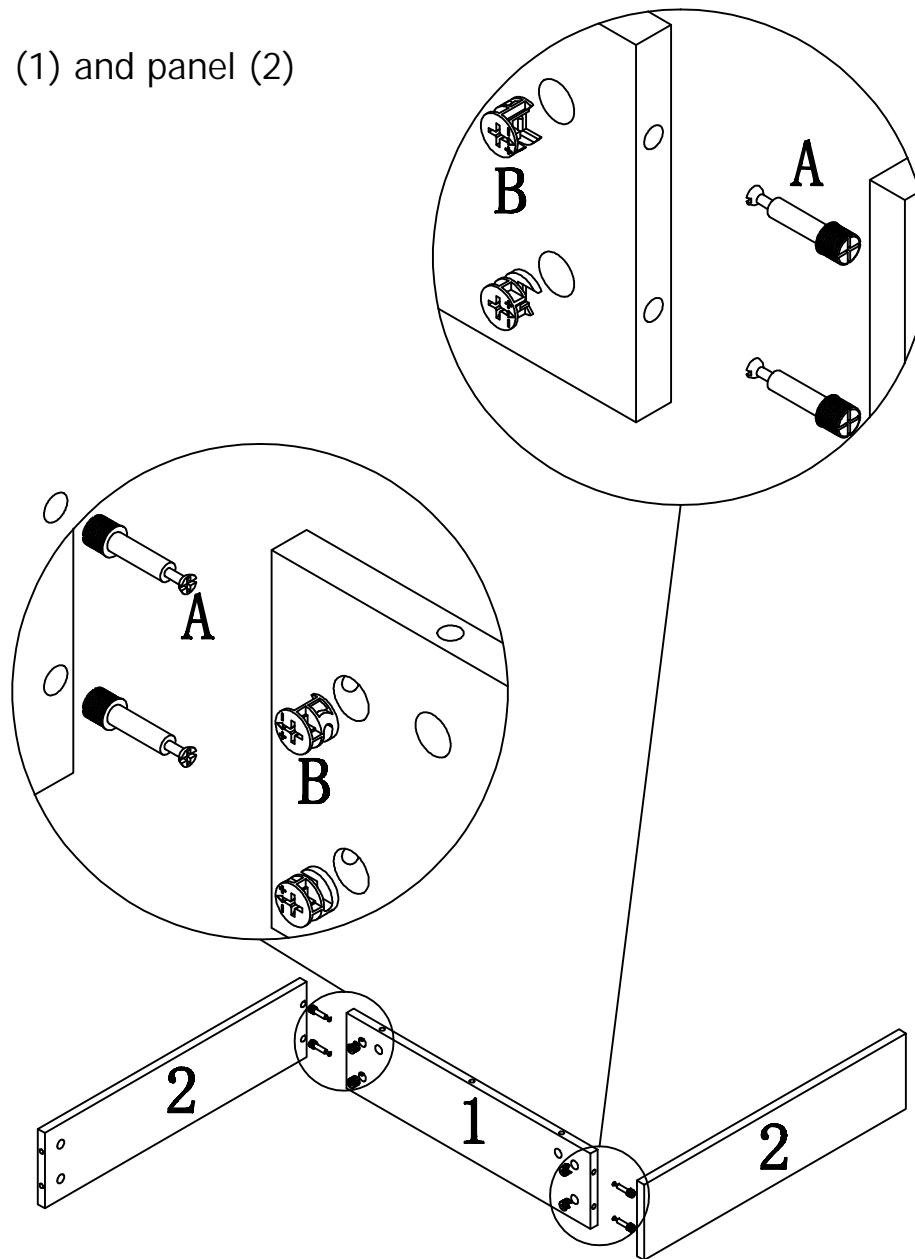


STEP:2

To fix the both
side panel (3)

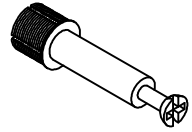


X4

A




X4

B

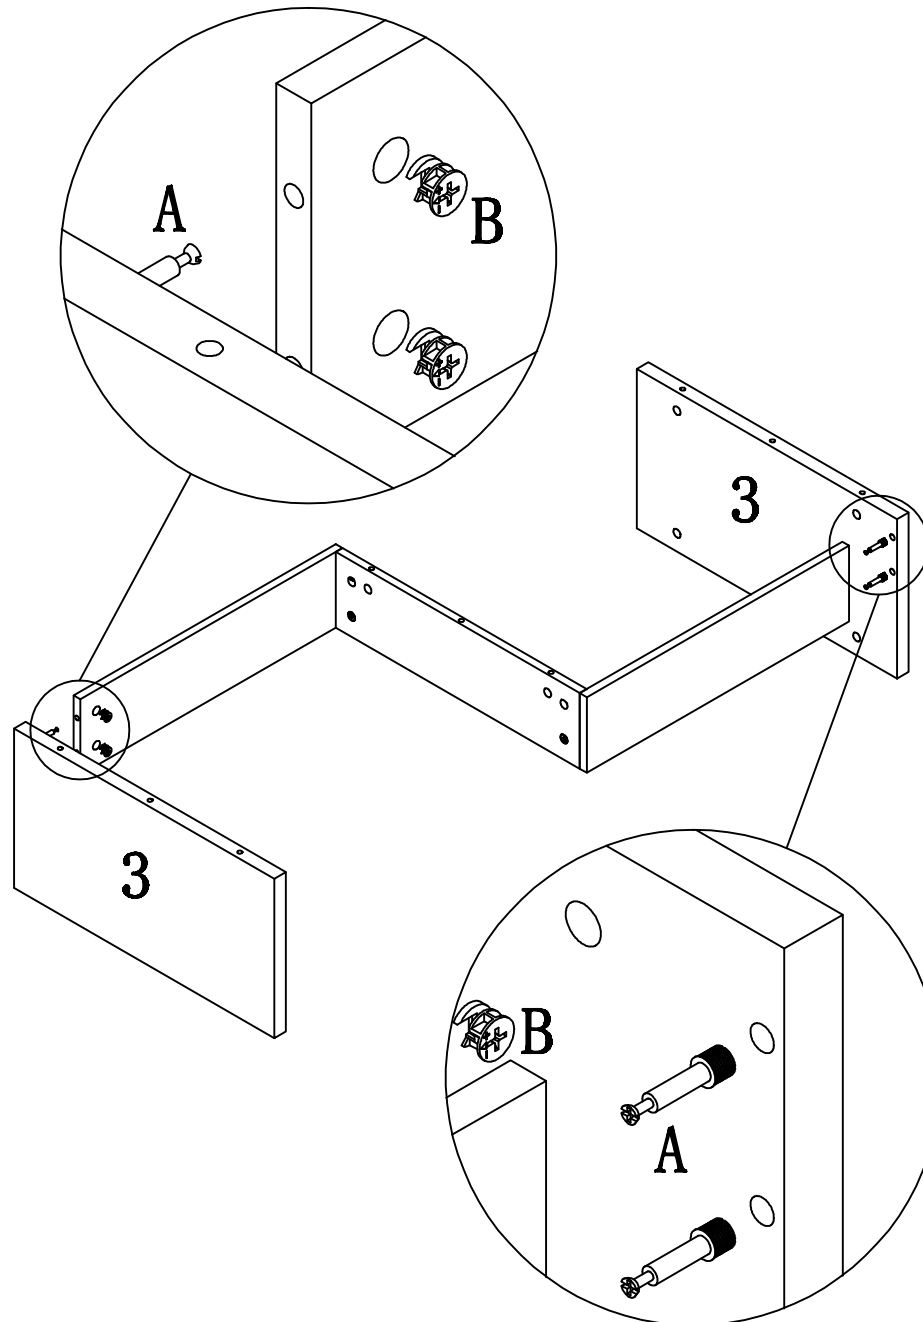


STEP:3 To fix bottom panel (4) and both side panel

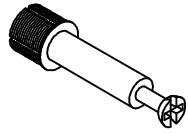


X4

A




X4

B




X2

C

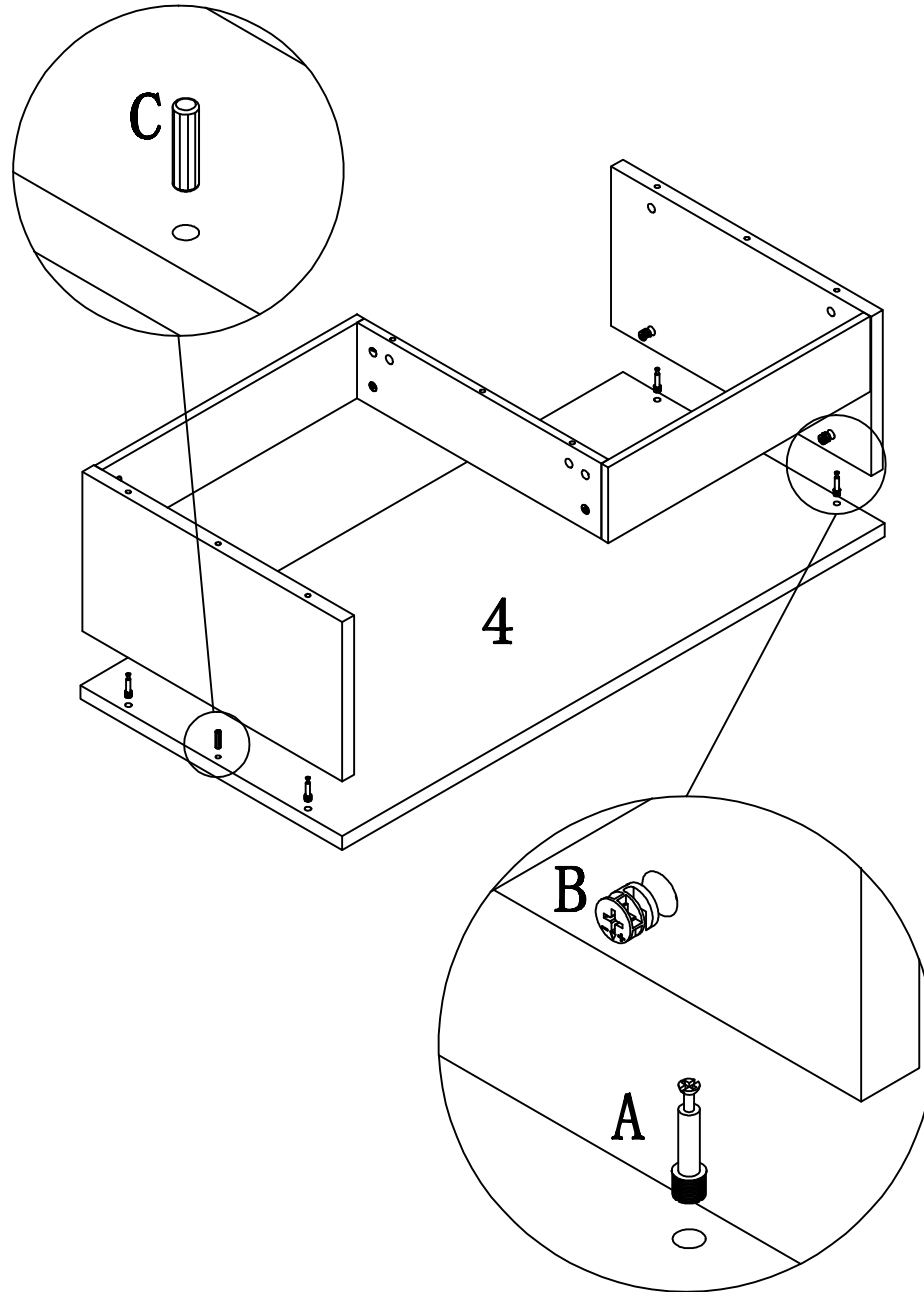


STEP:4

To fix foot stand support panel (5 & 6)

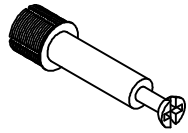



X8

A




X8

B

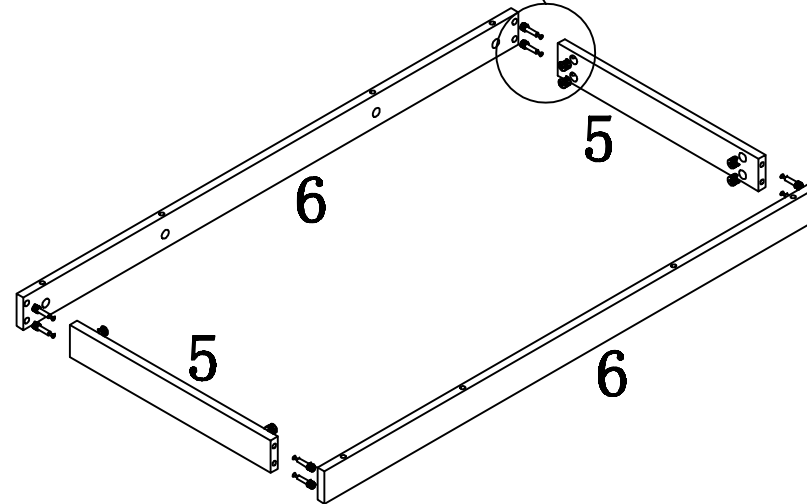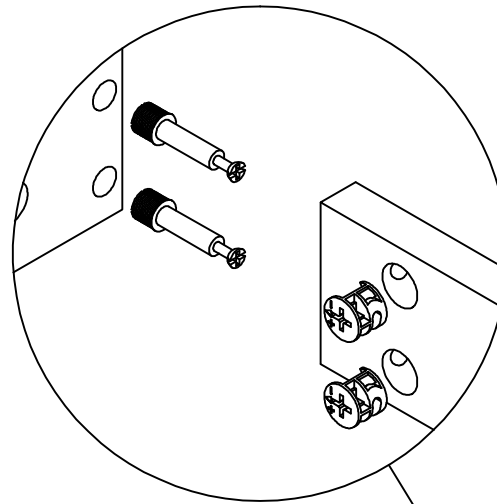


STEP:5

To fix bottom panel on foot stand support

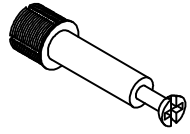


X8


A




X8

B

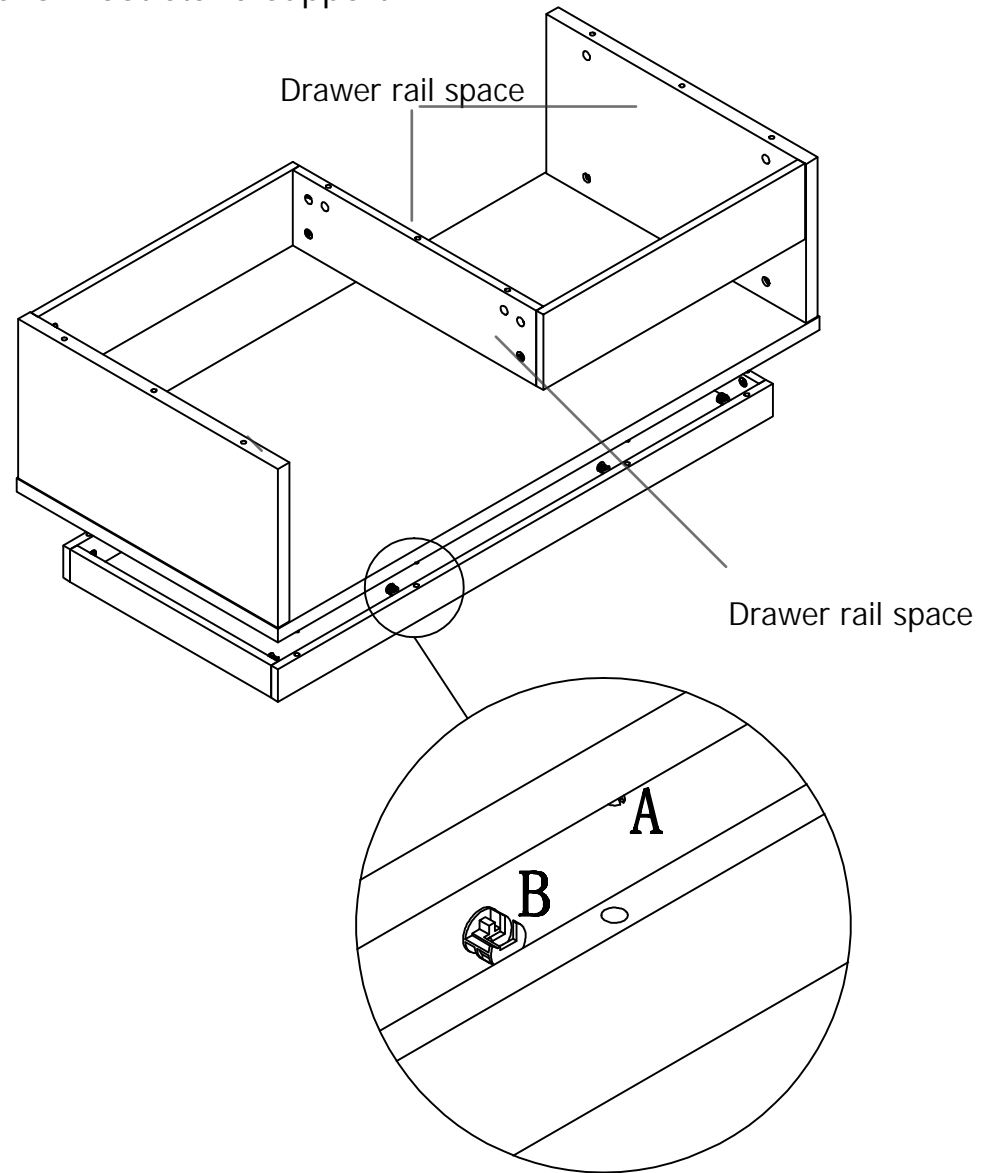


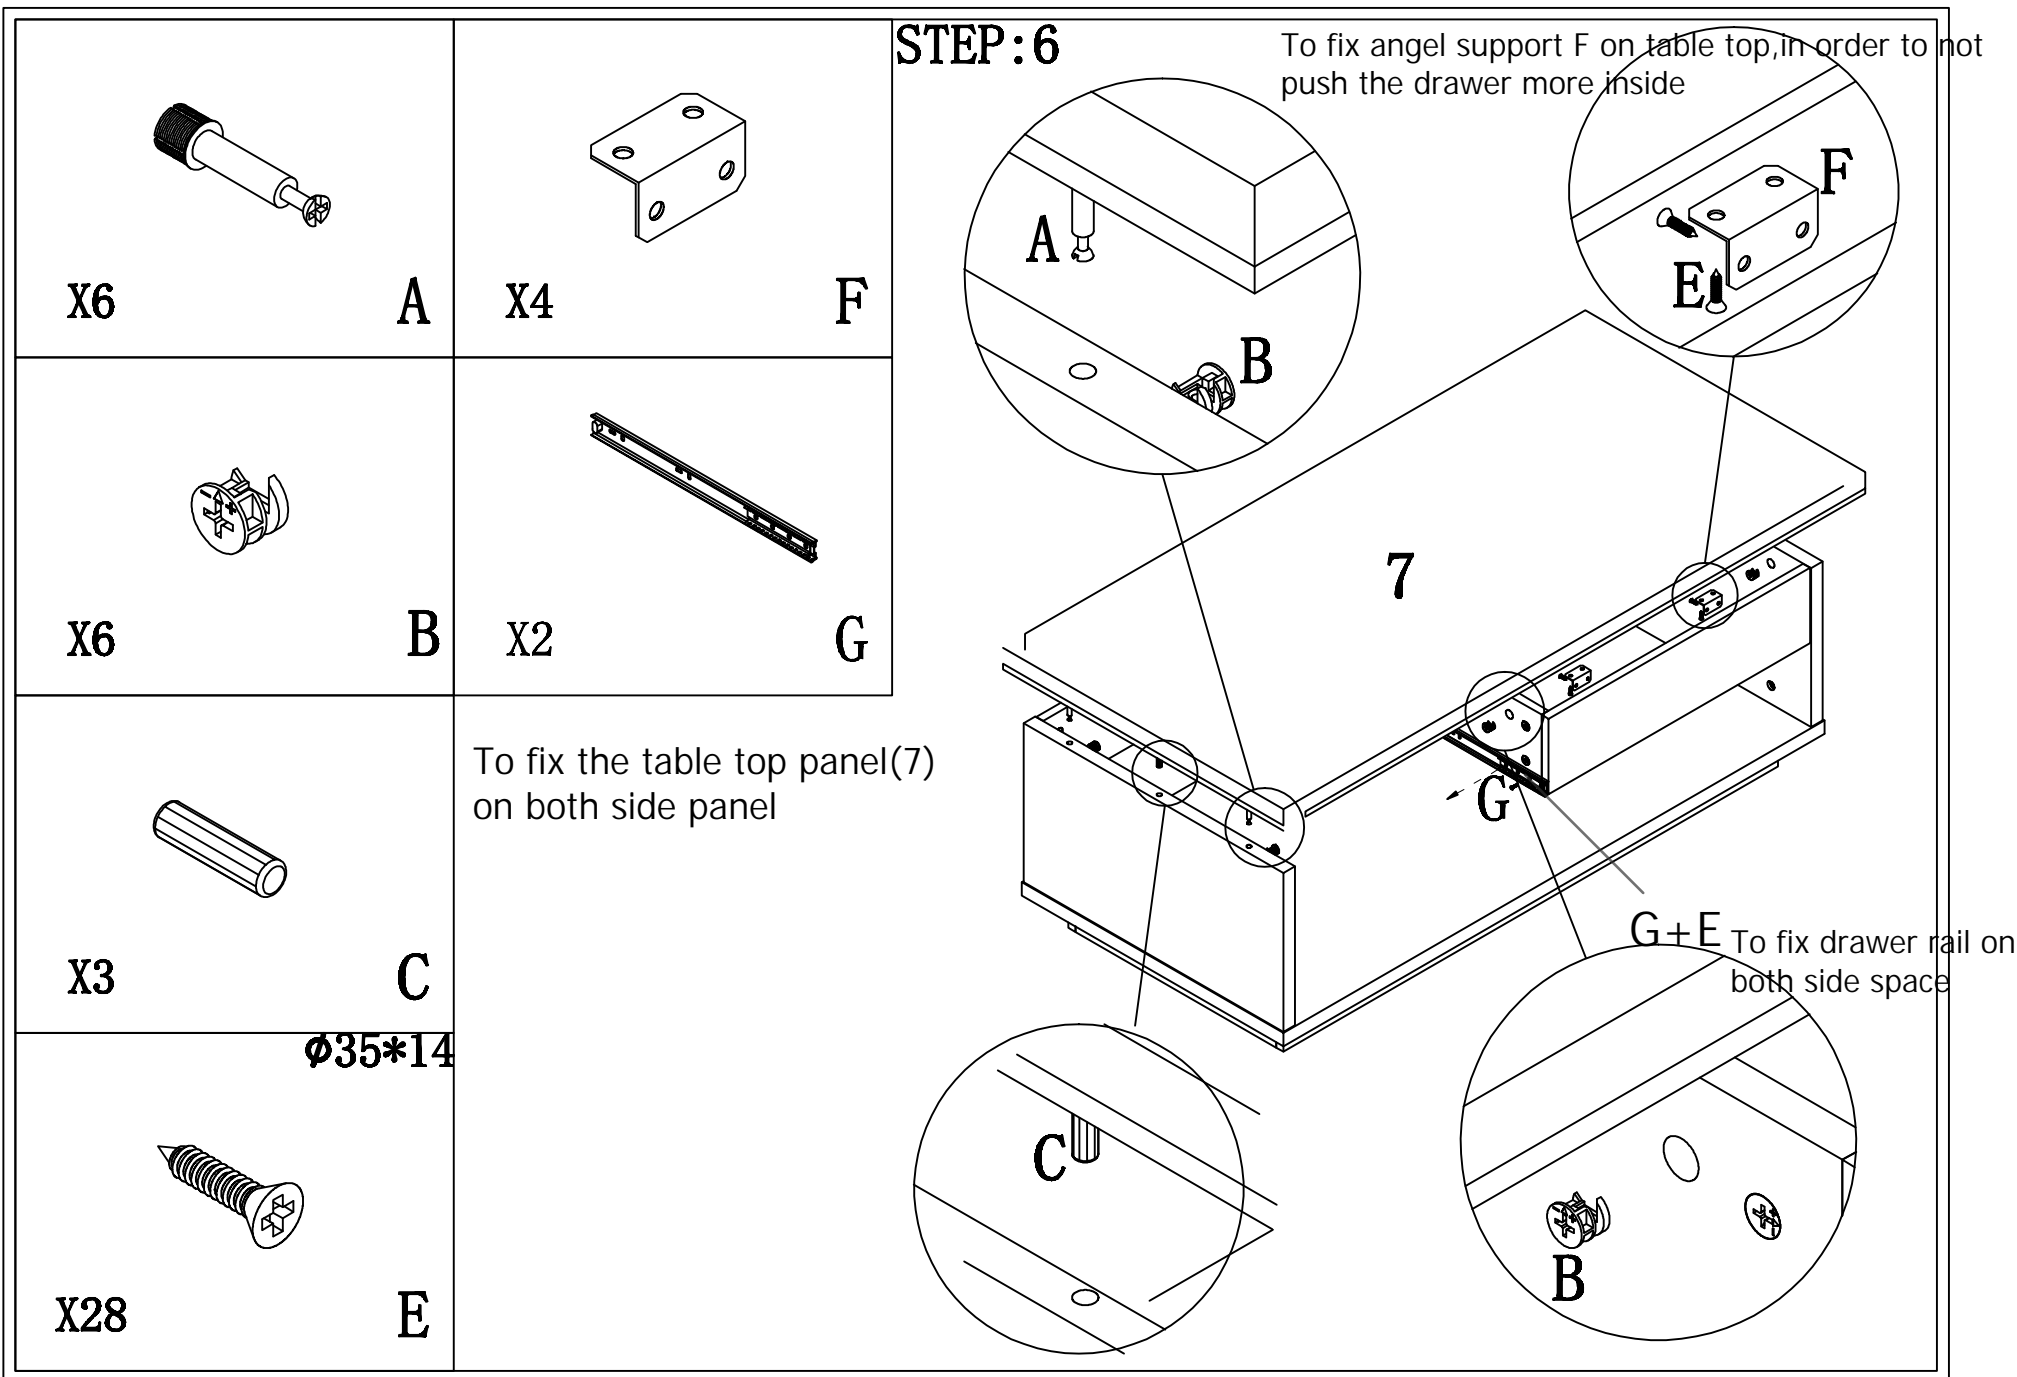

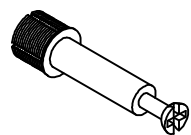

X8


A

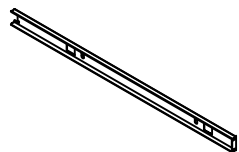

X2

G

To fix drawer panel(8,9
10)

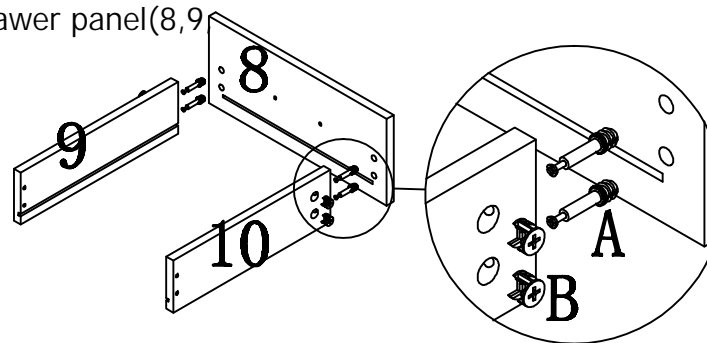

X8


B

STEP:7

FINISH

Final to put the two
drawer one front
side one back side


Ø3*30

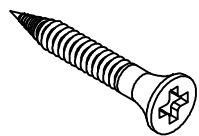

X8

D



Ø35*14



X8

E

To put the bottom panel (11) inside
and fix the panel (12)

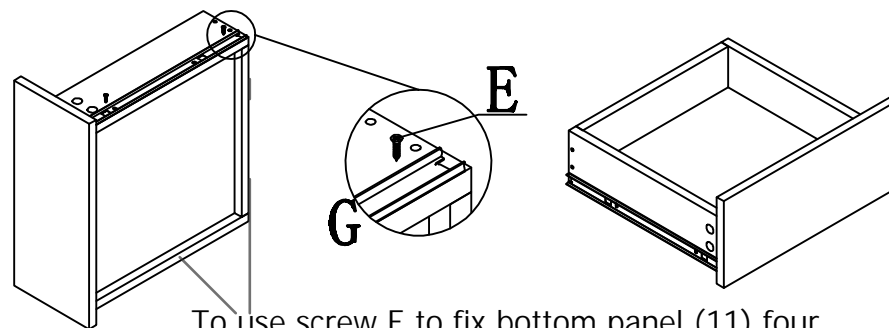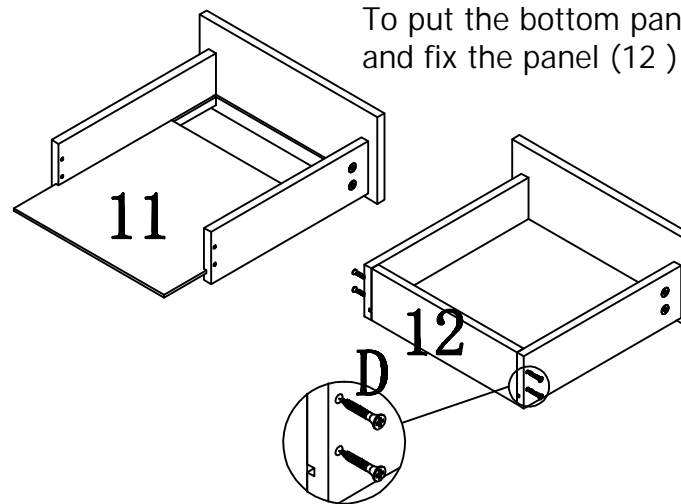

To use screw E to fix bottom panel (11) four
side more tough,the fix both side rail G