


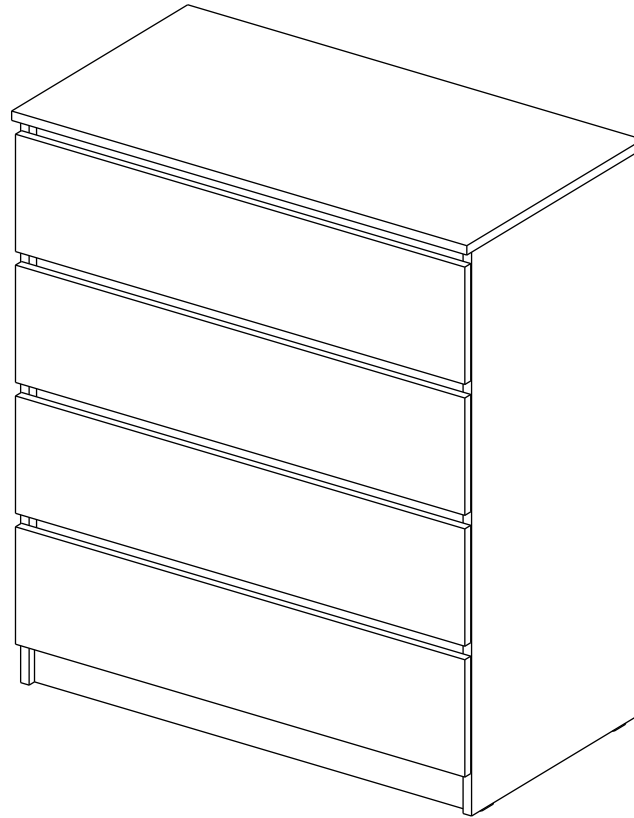
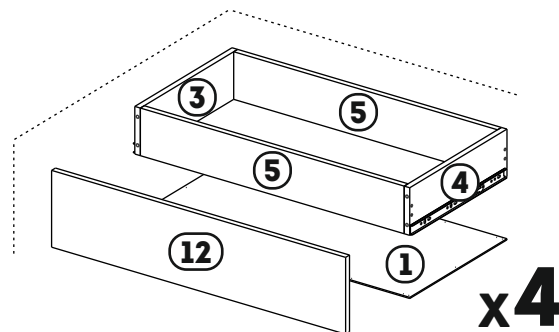
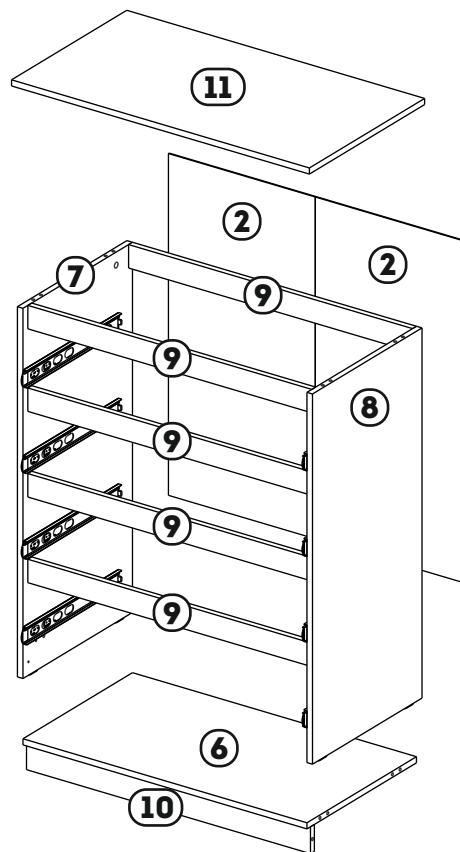
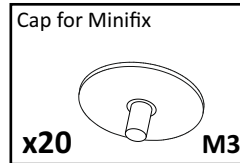
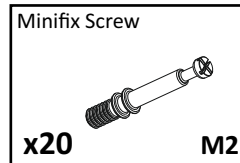
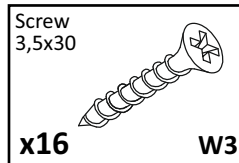
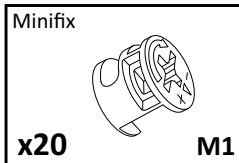
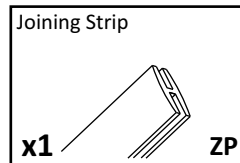
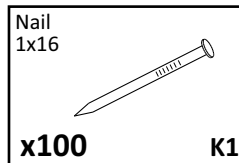
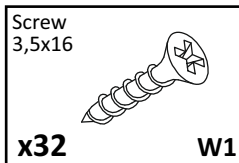
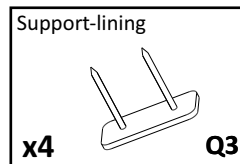
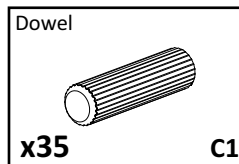
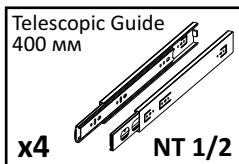




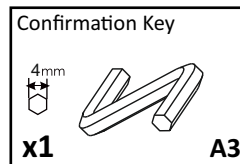


361-000046

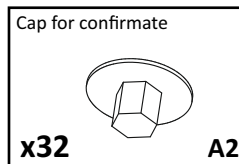

| No | a*b     | X | Pack |
|----|---------|---|------|
| 1  | 792x400 | 4 | 1/3  |
| 2  | 890x423 | 2 | 1/3  |
| 3  | 400x124 | 4 | 2/3  |
| 4  | 400x124 | 4 | 2/3  |
| 5  | 760x124 | 8 | 2/3  |
| 6  | 818x451 | 1 | 1/3  |
| 7  | 964x451 | 1 | 2/3  |
| 8  | 964x451 | 1 | 2/3  |
| 9  | 818x61  | 5 | 1/3  |
| 10 | 818x70  | 1 | 1/3  |
| 11 | 858x474 | 1 | 1/3  |
| 12 | 200x847 | 4 | 3/3  |

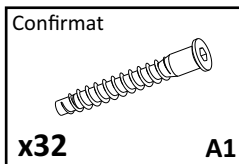

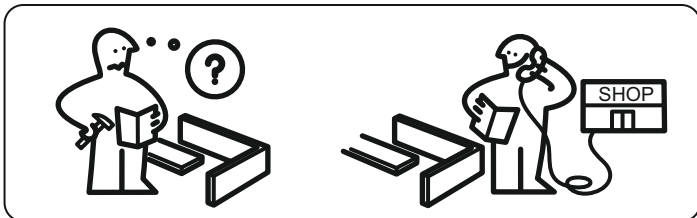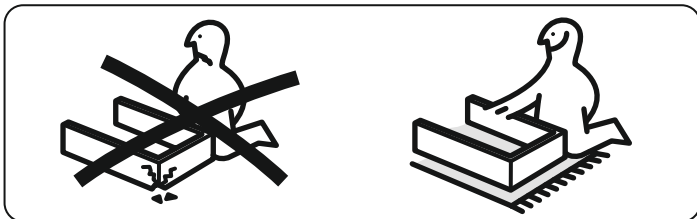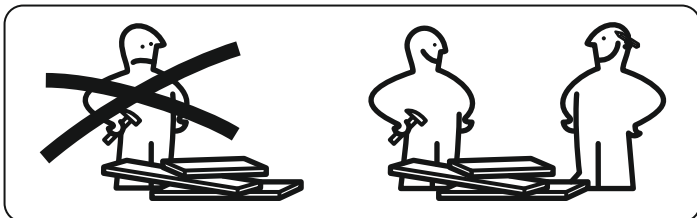

## GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

## CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

# 1


Screw  
3,5x16



x16


W1

Telescopic Guide  
400 mm

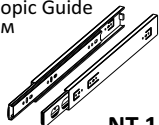

x4

NT 1

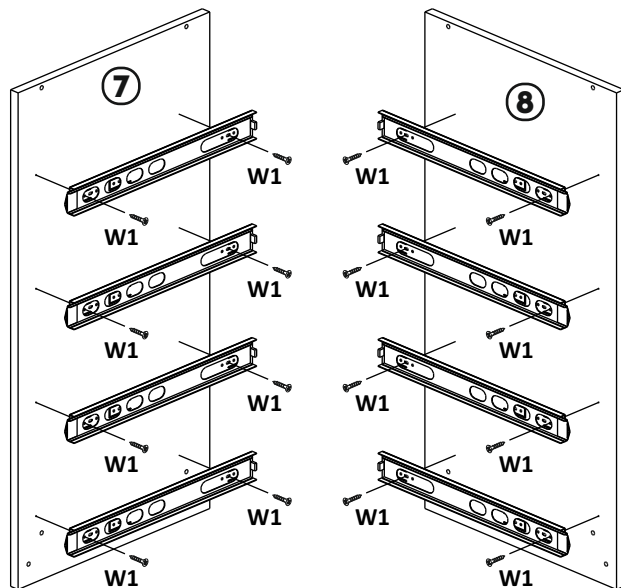



# 2

Minifix



x12

M1

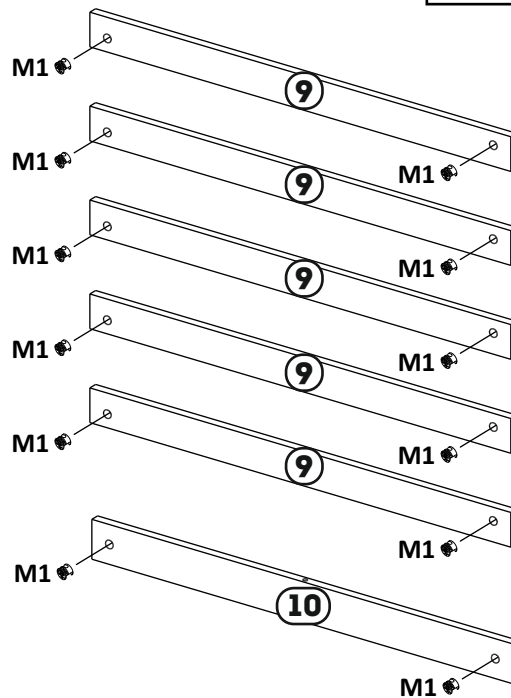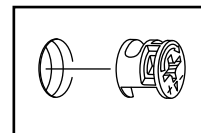


# 3

Minifix Screw

x4


M2



Dowel

x5


C1





Minifix

x4

M1

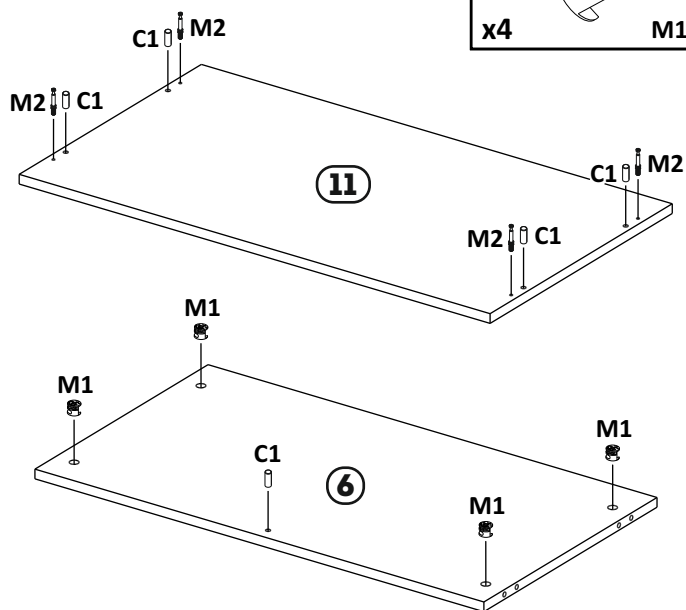


# 4

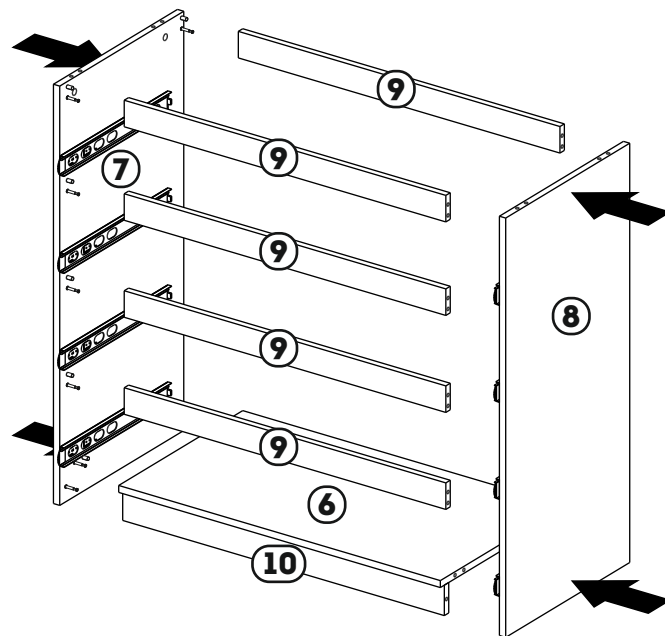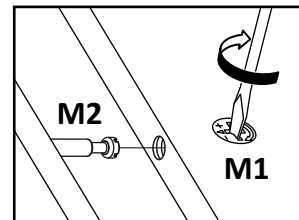


# 5

Support-lining



x4



Q3

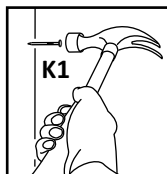


K1

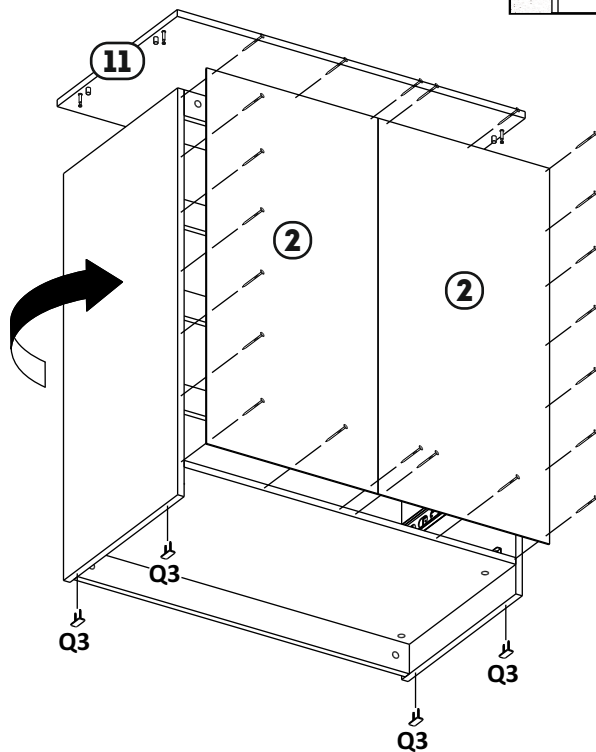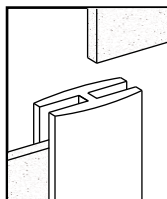

# 6

Confirmat

x8






A1

Cap for confirmat

x8




A2

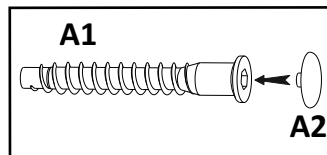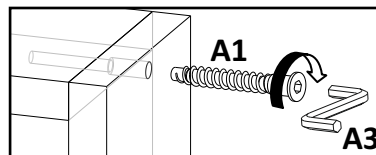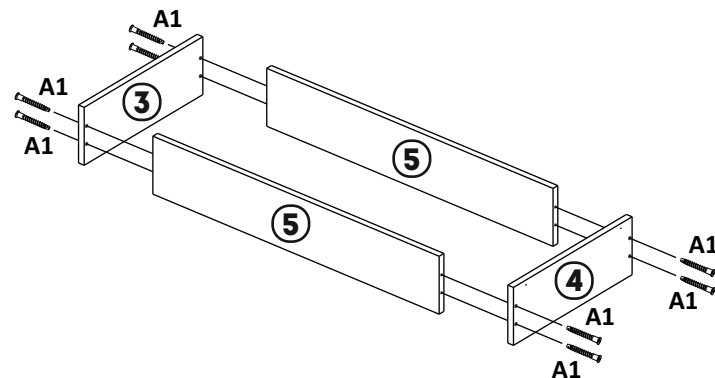

# 7


Screw  
3,5x16



x4



W1

Telescopic Guide  
400 mm

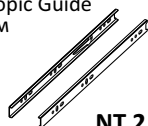


x1

NT 2

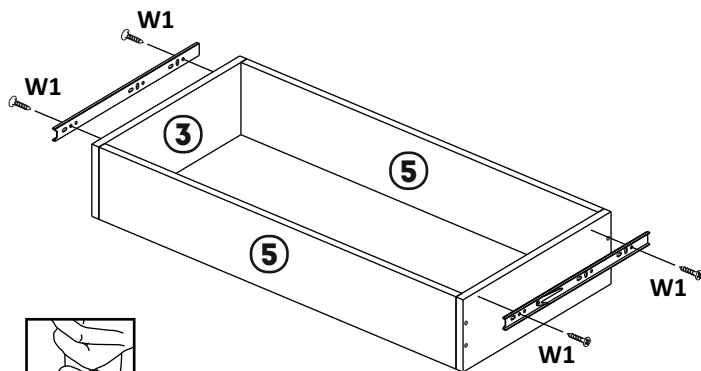

# 8


Dowel



x4



C1

Nail  
1x16




x22

K1

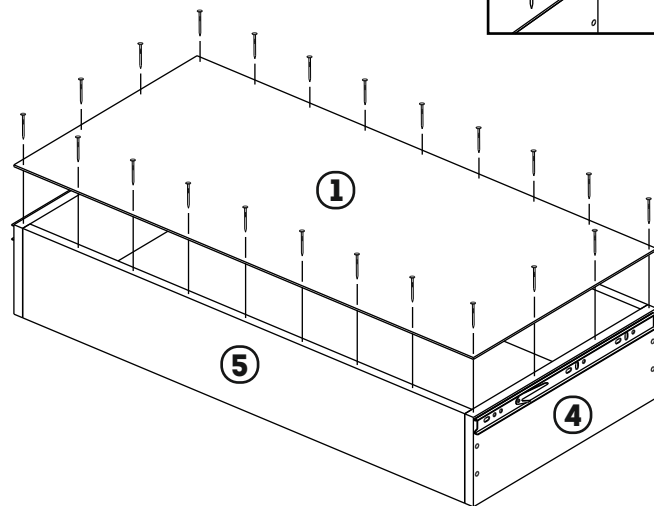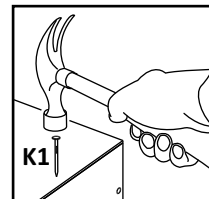

9


Screw  
3,5x30



x4


W3

Dowel



x4

C1

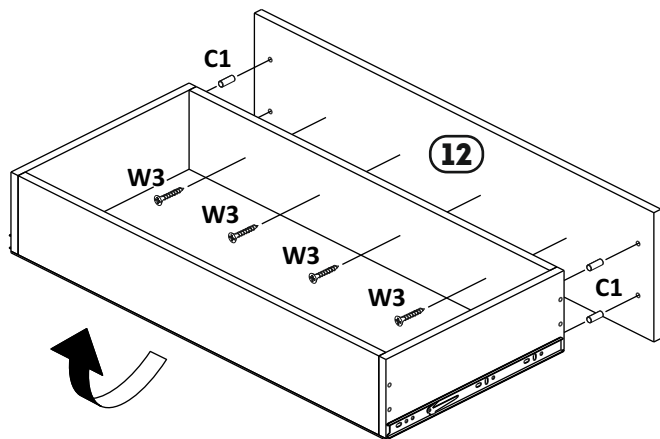

10

