


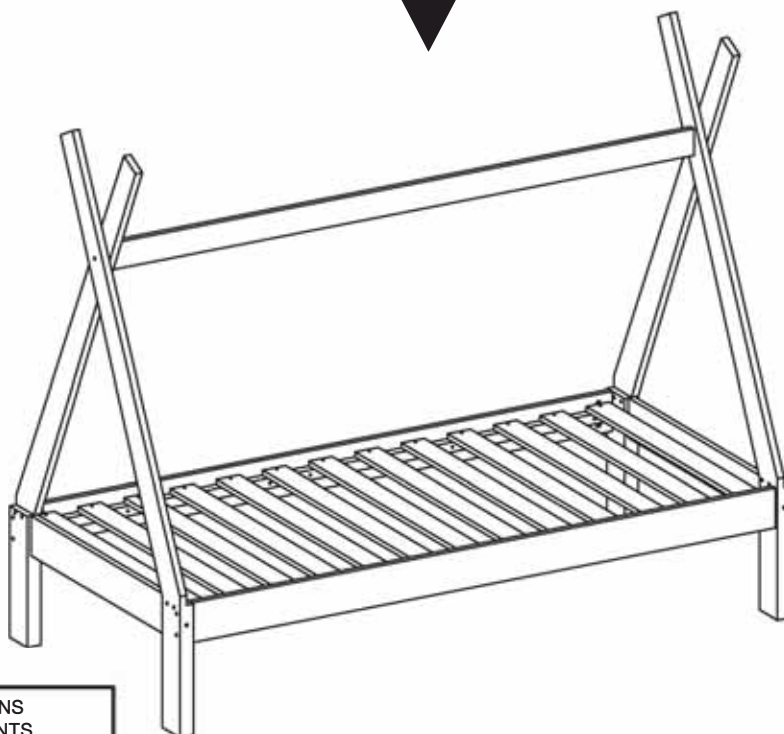






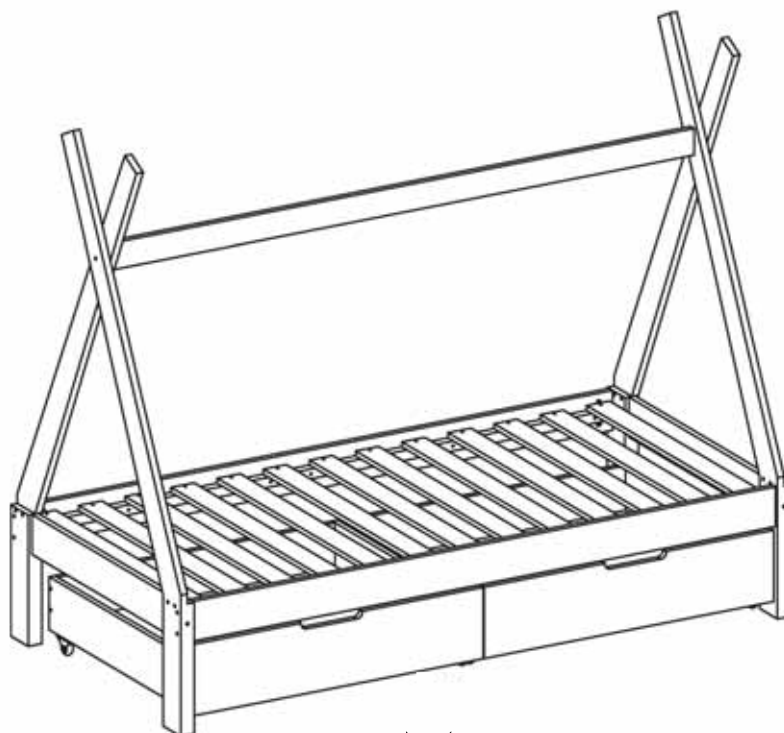


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE

NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

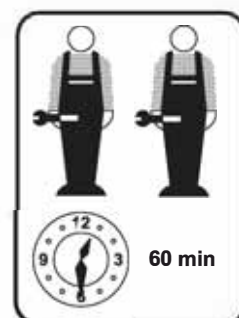

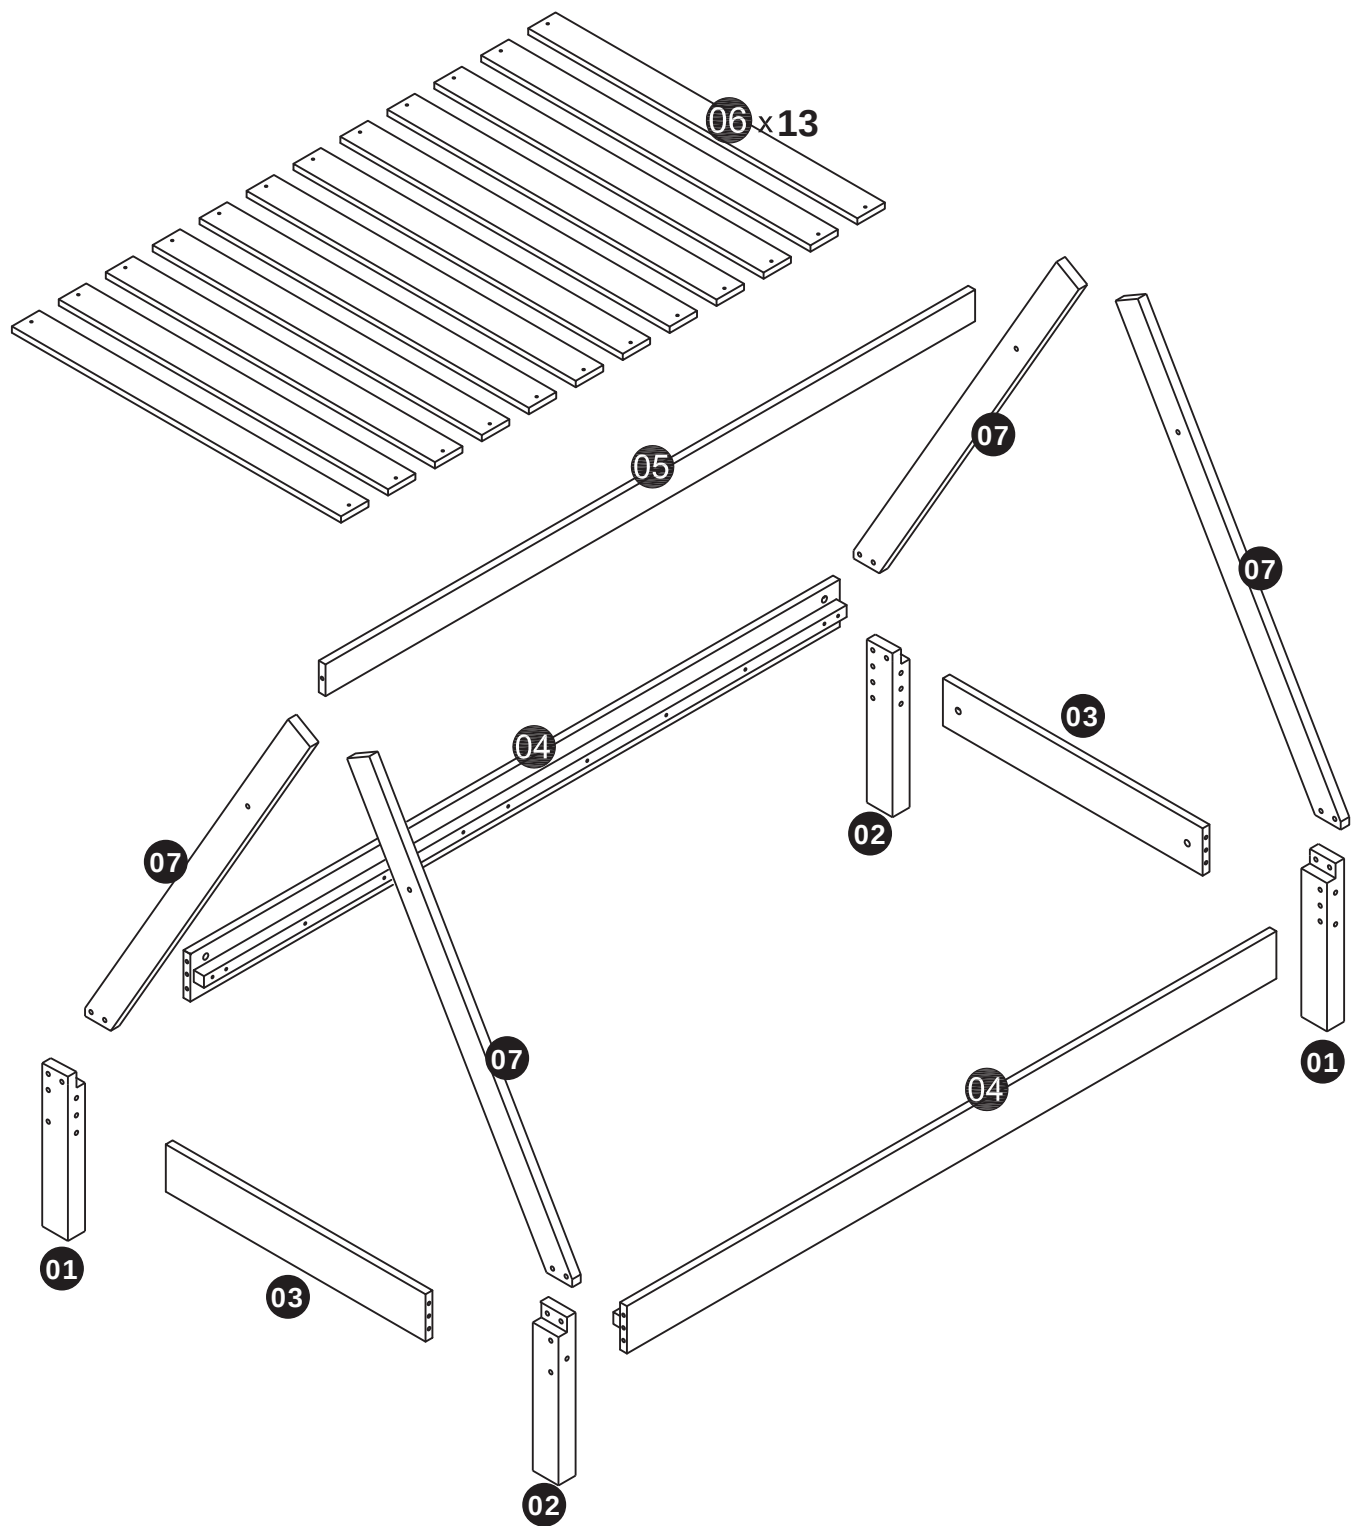

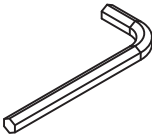A x4  M6 x100mm	B x10  M6 x 90mm	C x14 	D x12 	E x26  Ø4 x30mm
F x1 	G x8  M6 x30mm	H x8 		

01

2 x

F x1




G x8




M6 x30mm

H x8


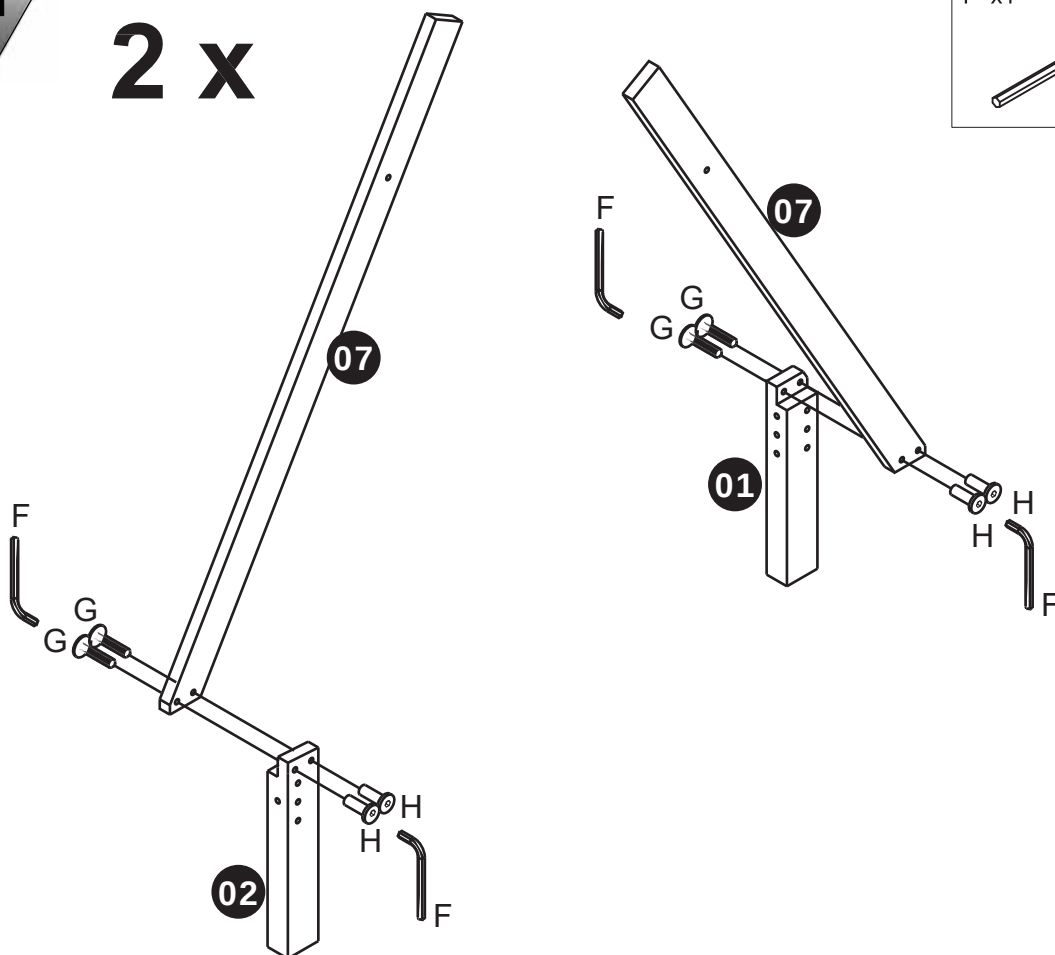


02



D x12

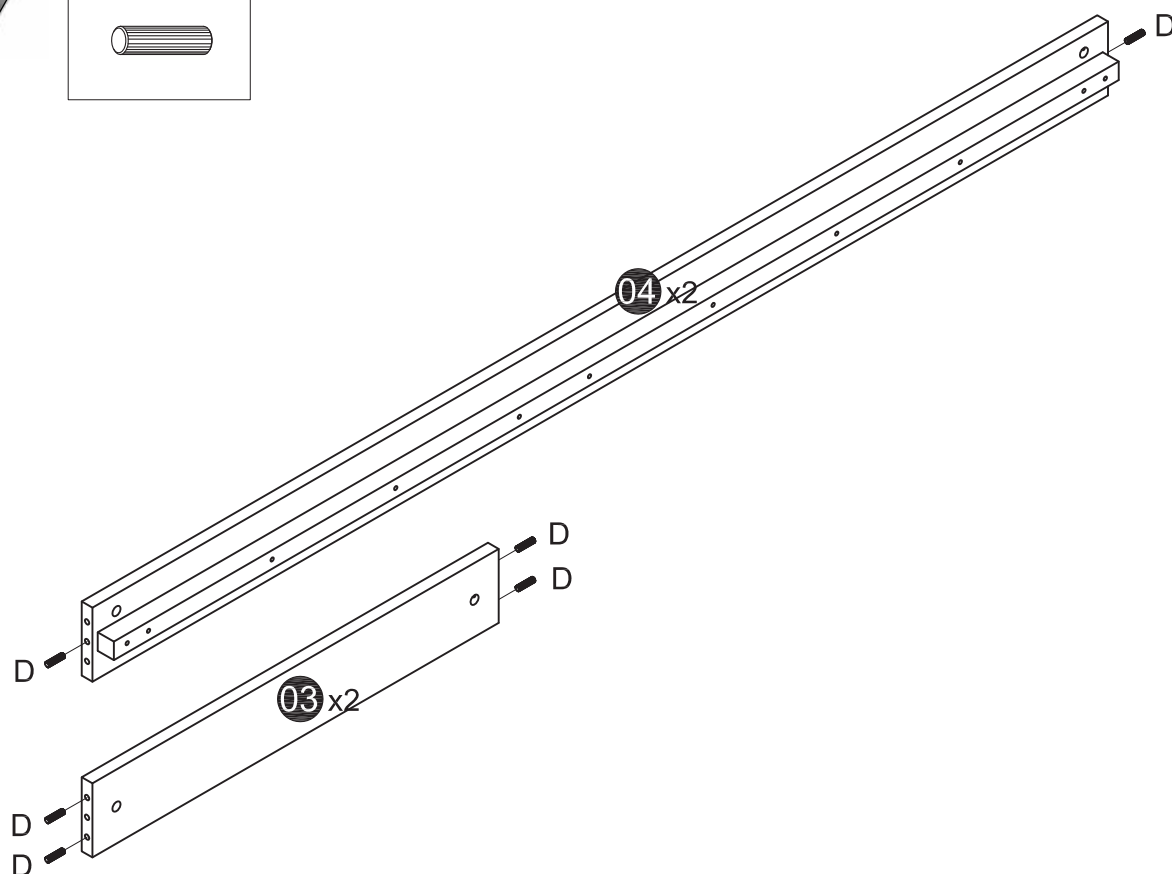

03

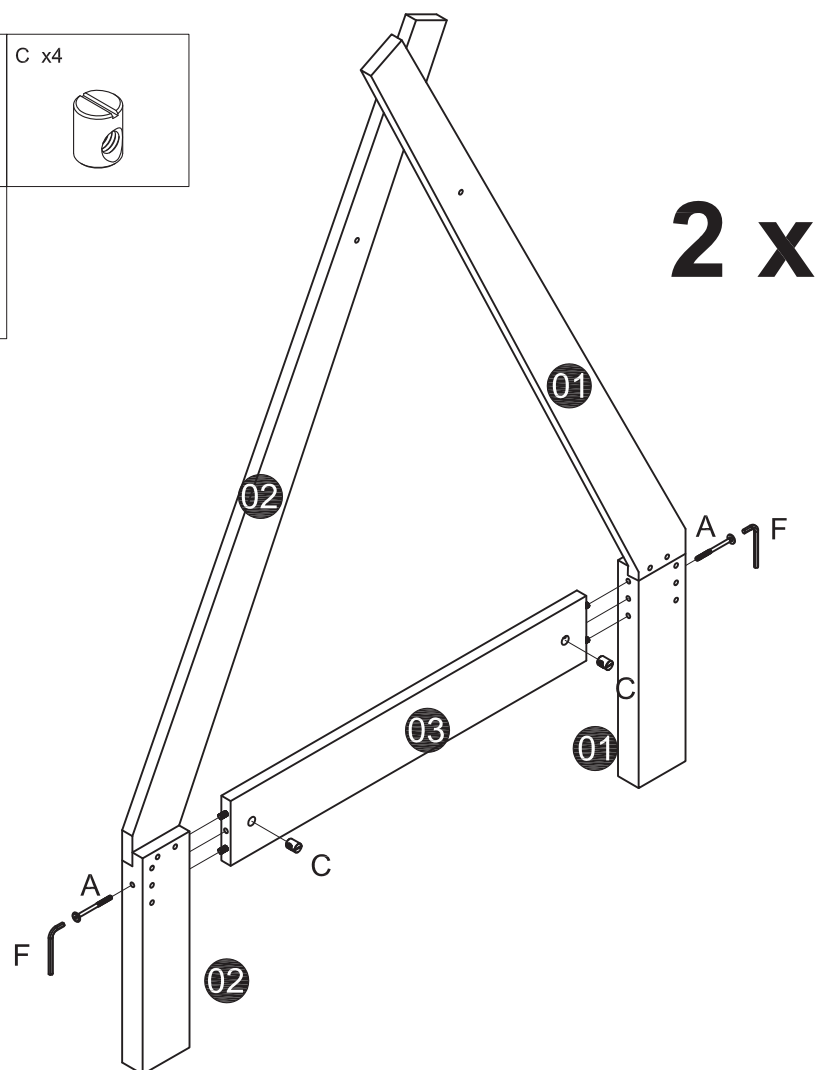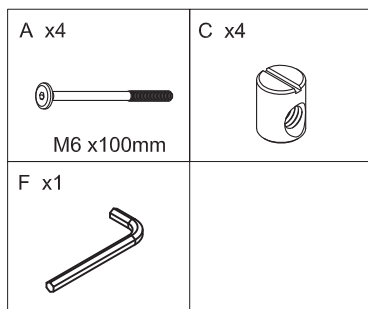

04

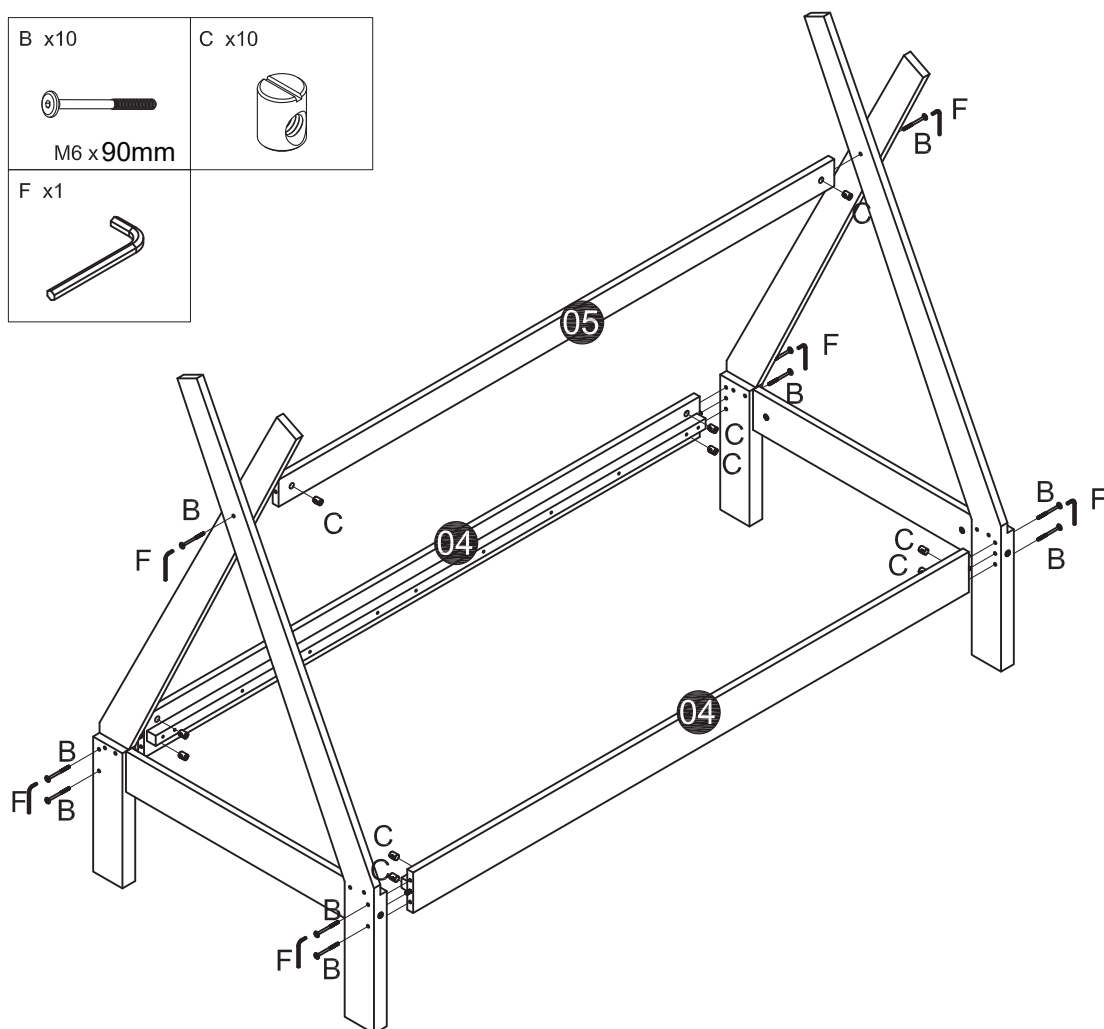
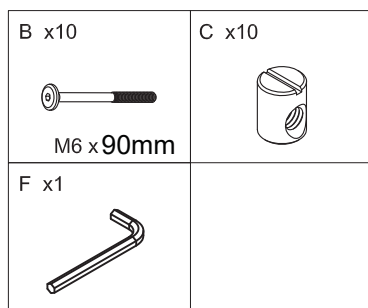


05



E x26




Ø4 x30mm



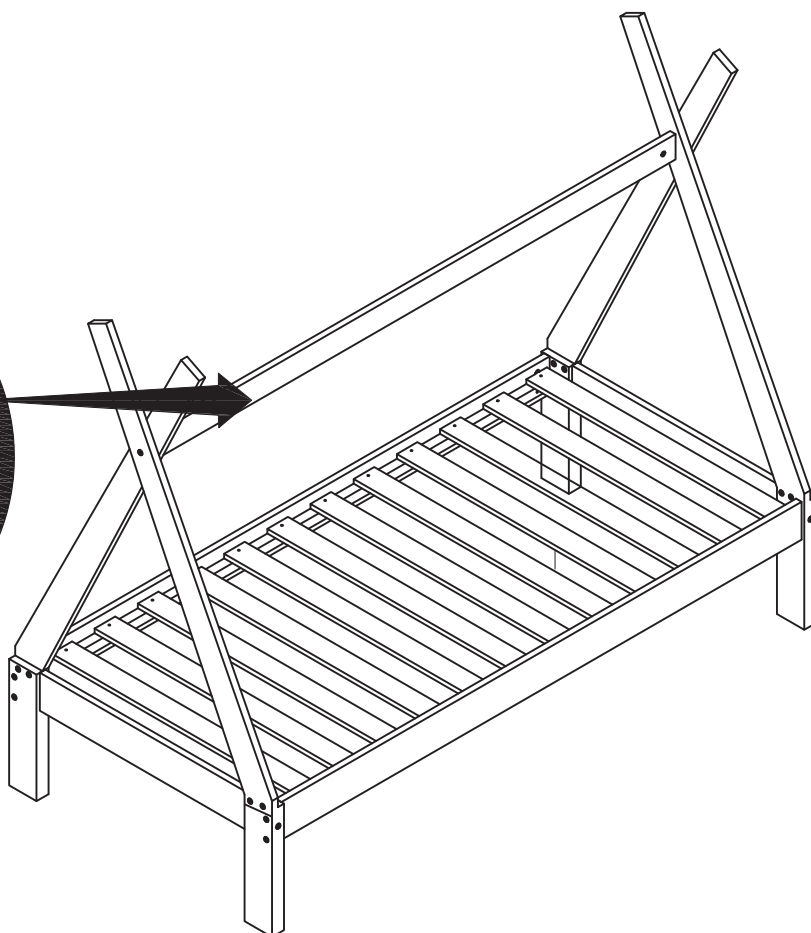
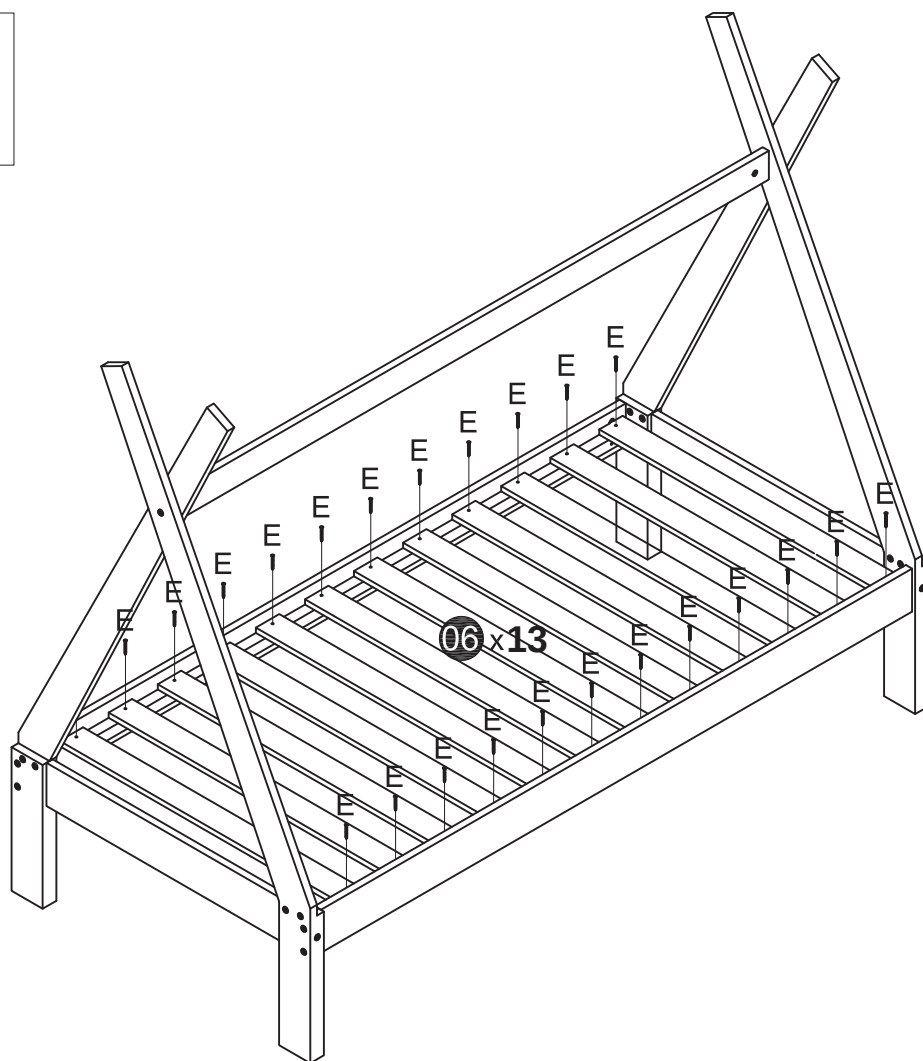


EXPLODED VIEW

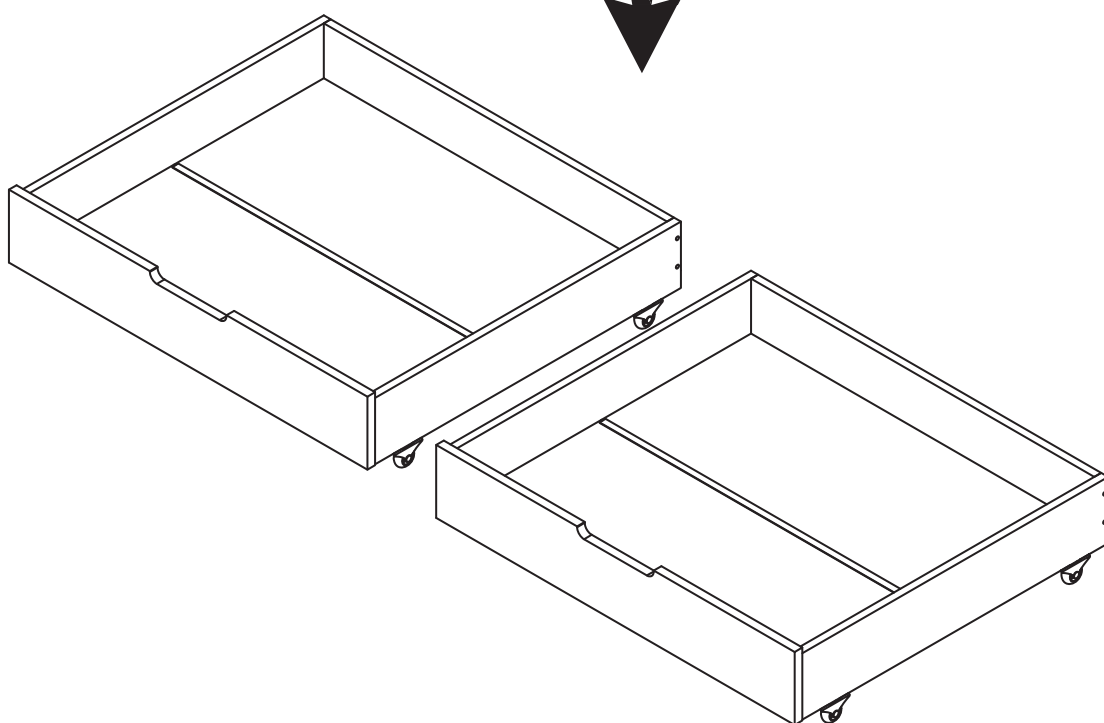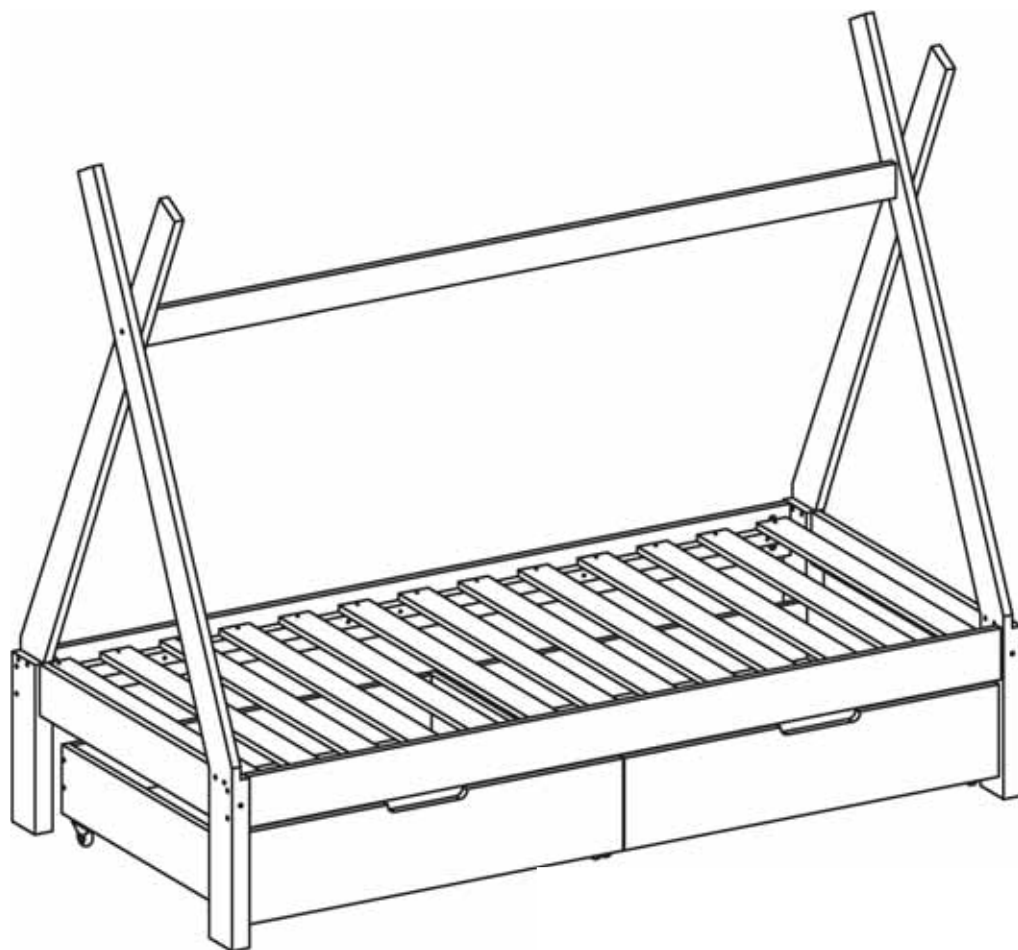

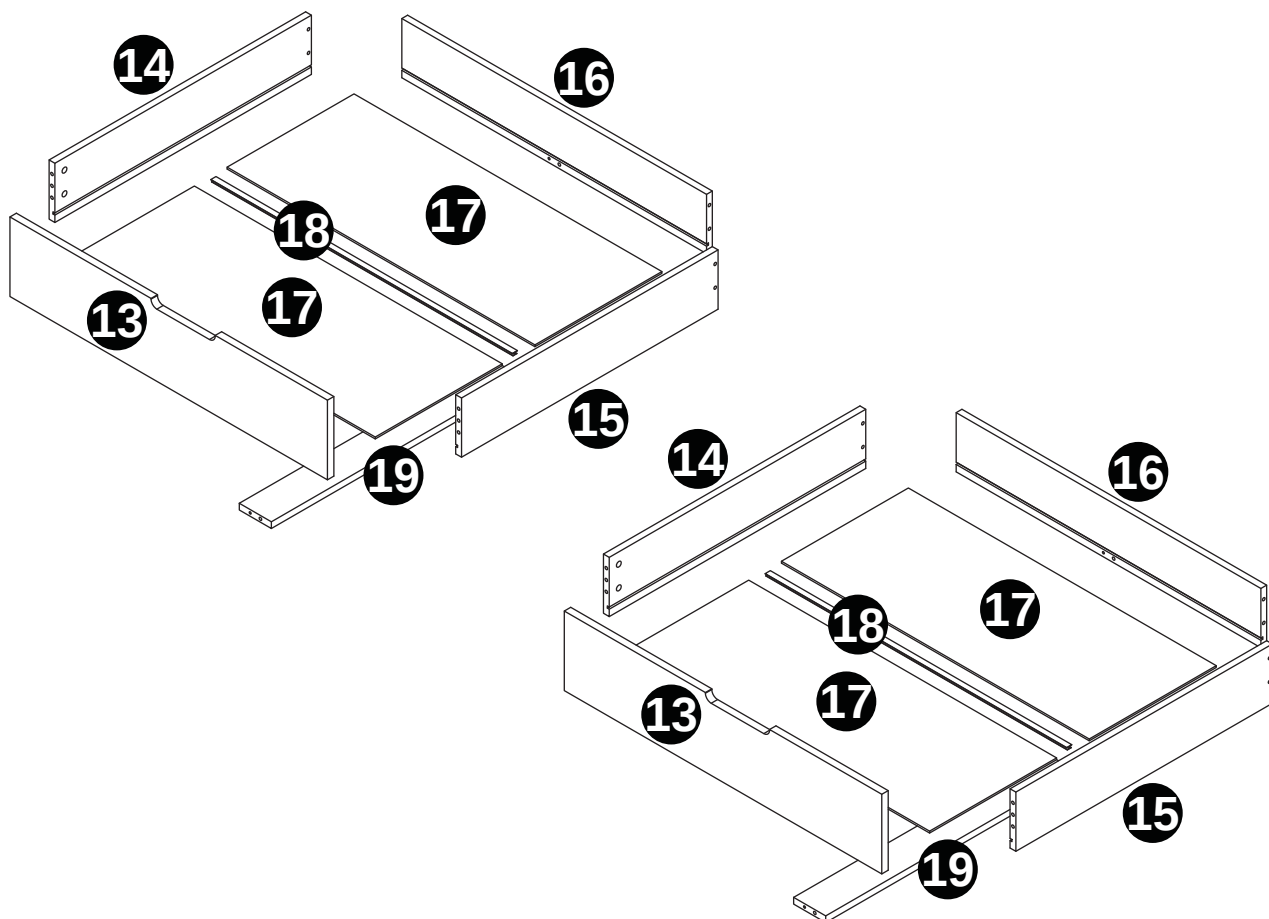

HARDWARE

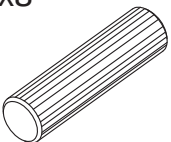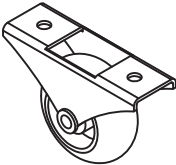D x8  Ø8x30mm	K x12  	L x12  	M x8  	N x16 
P x8  Ø4x40mm				

Ruler - Use this ruler to help correctly identify the screws




06

D x8





Ø8 x30mm

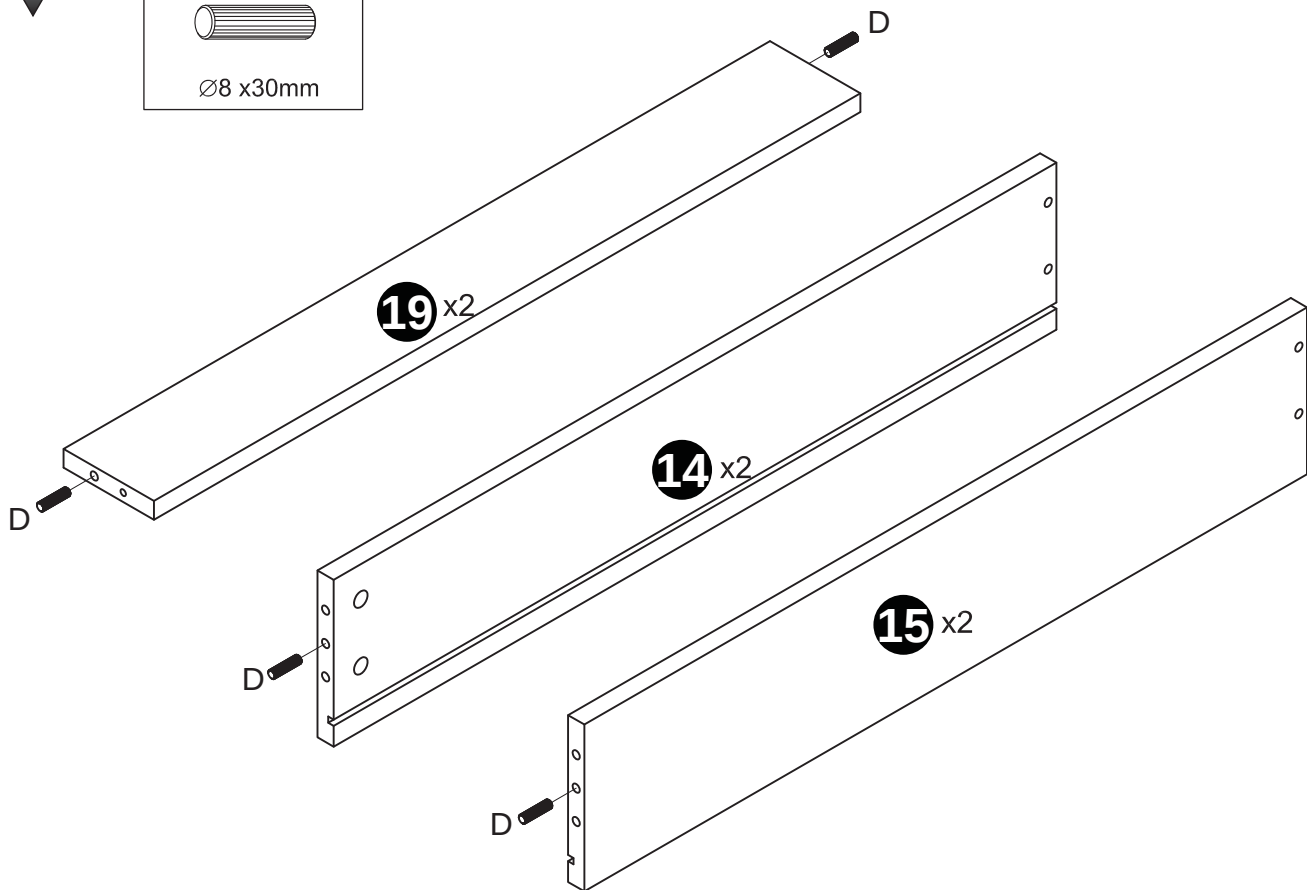

07

K x12

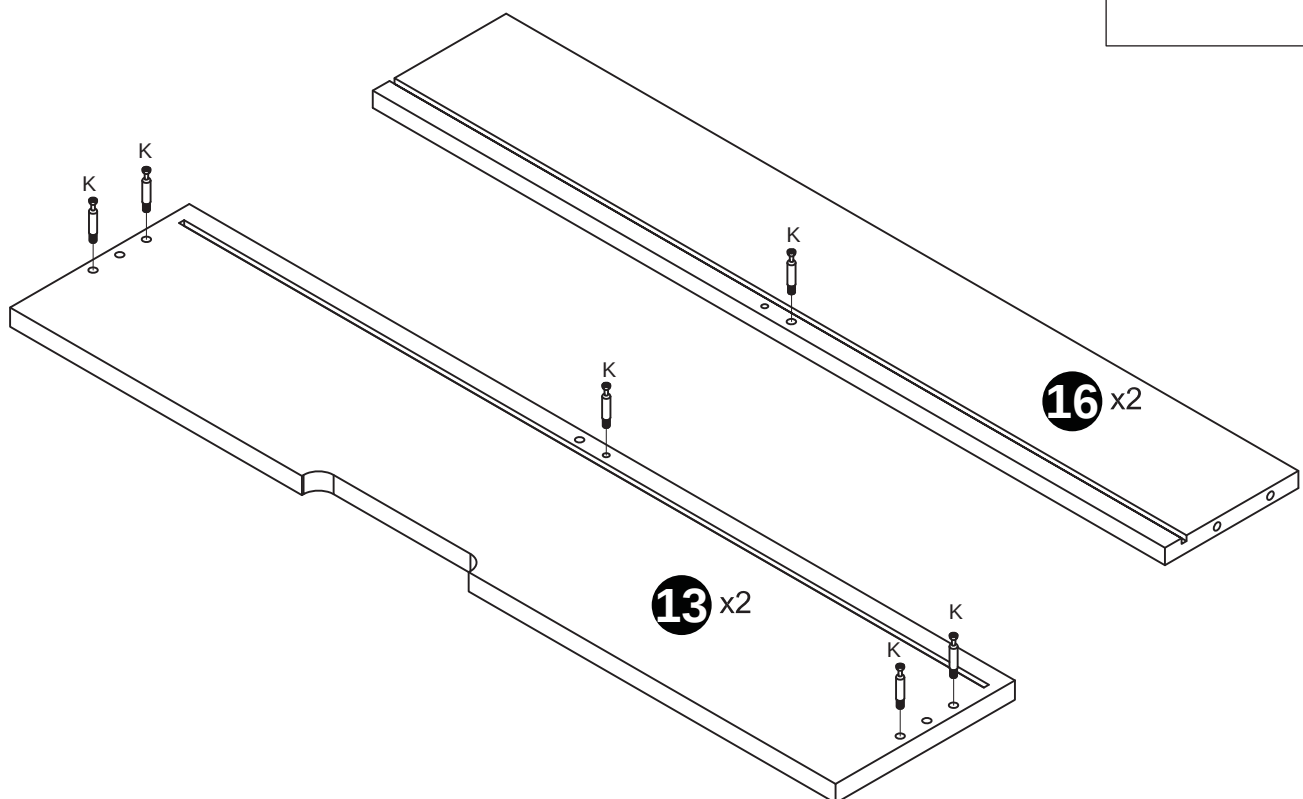


08


P x8



Ø4 x40mm

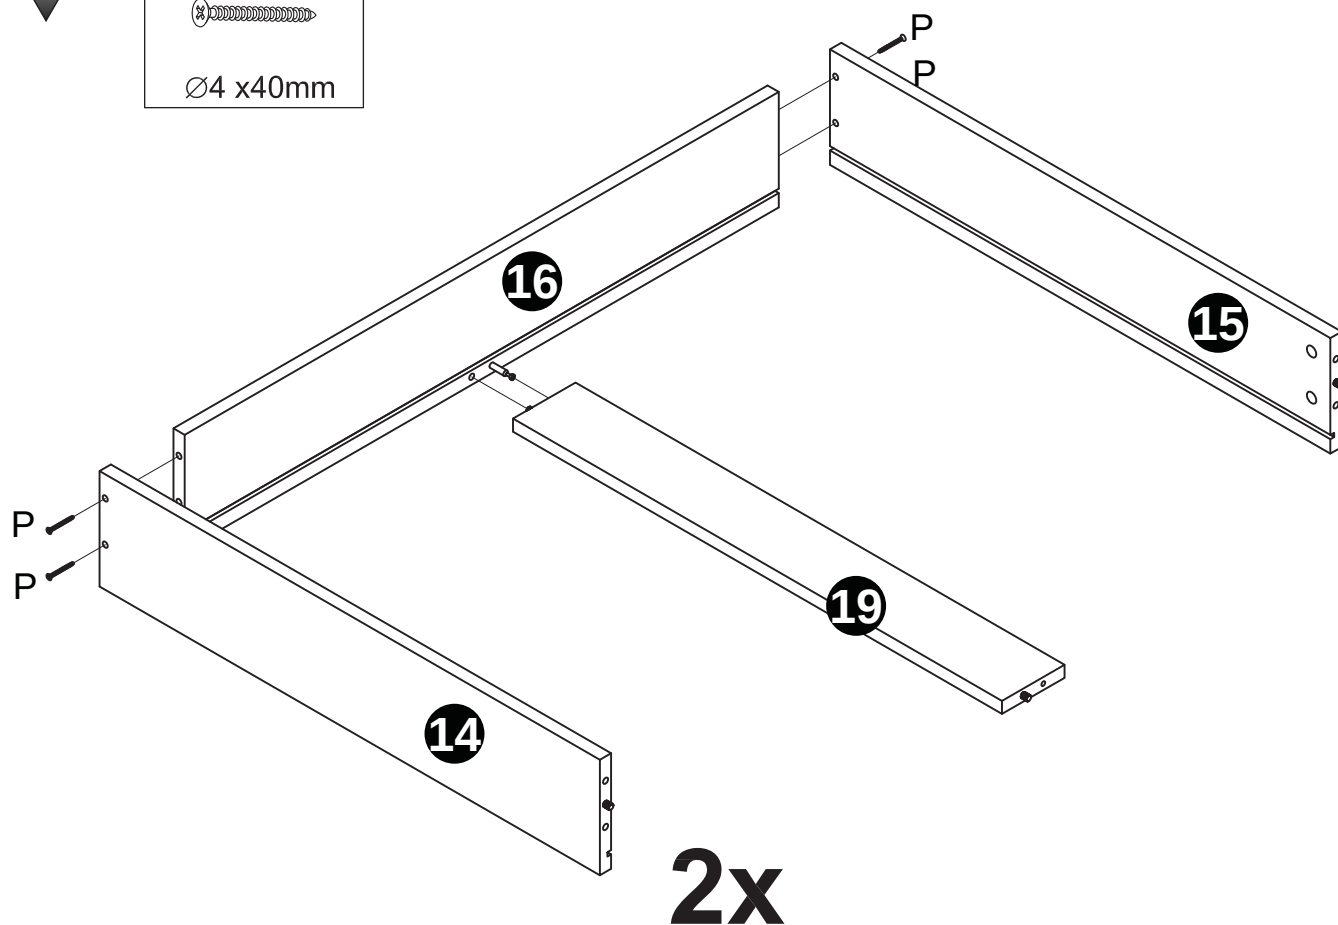


09

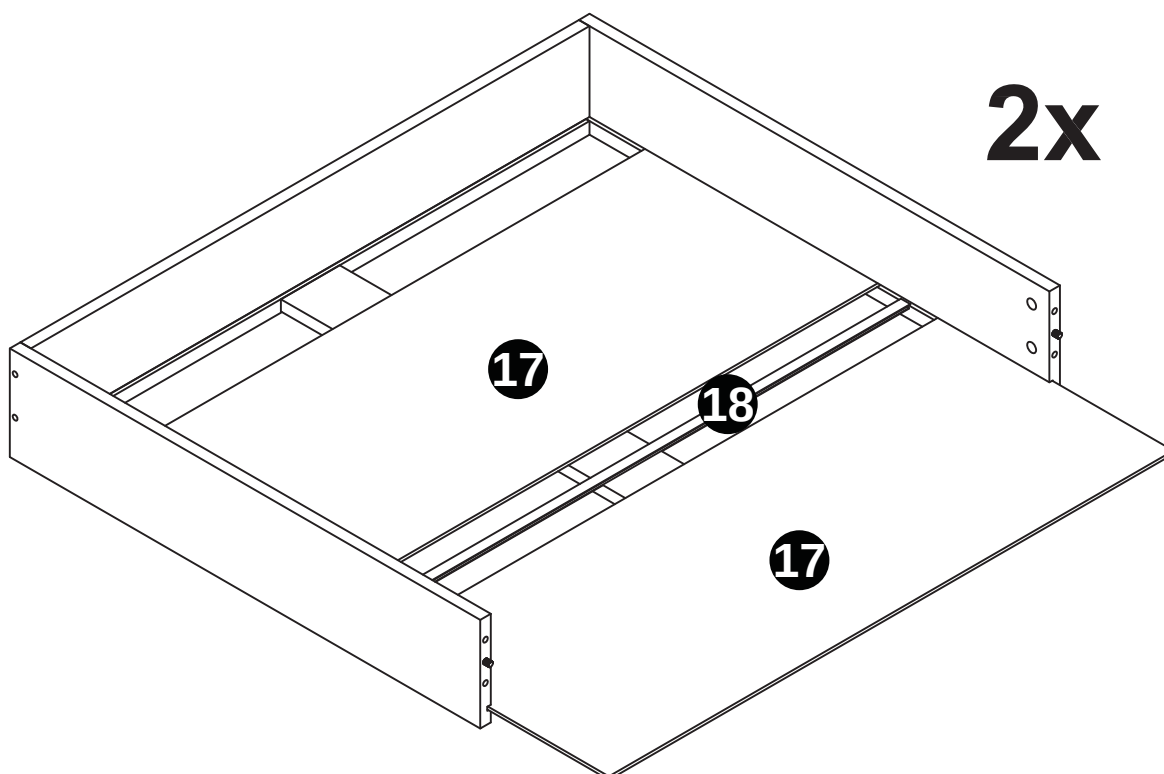


10

L x8

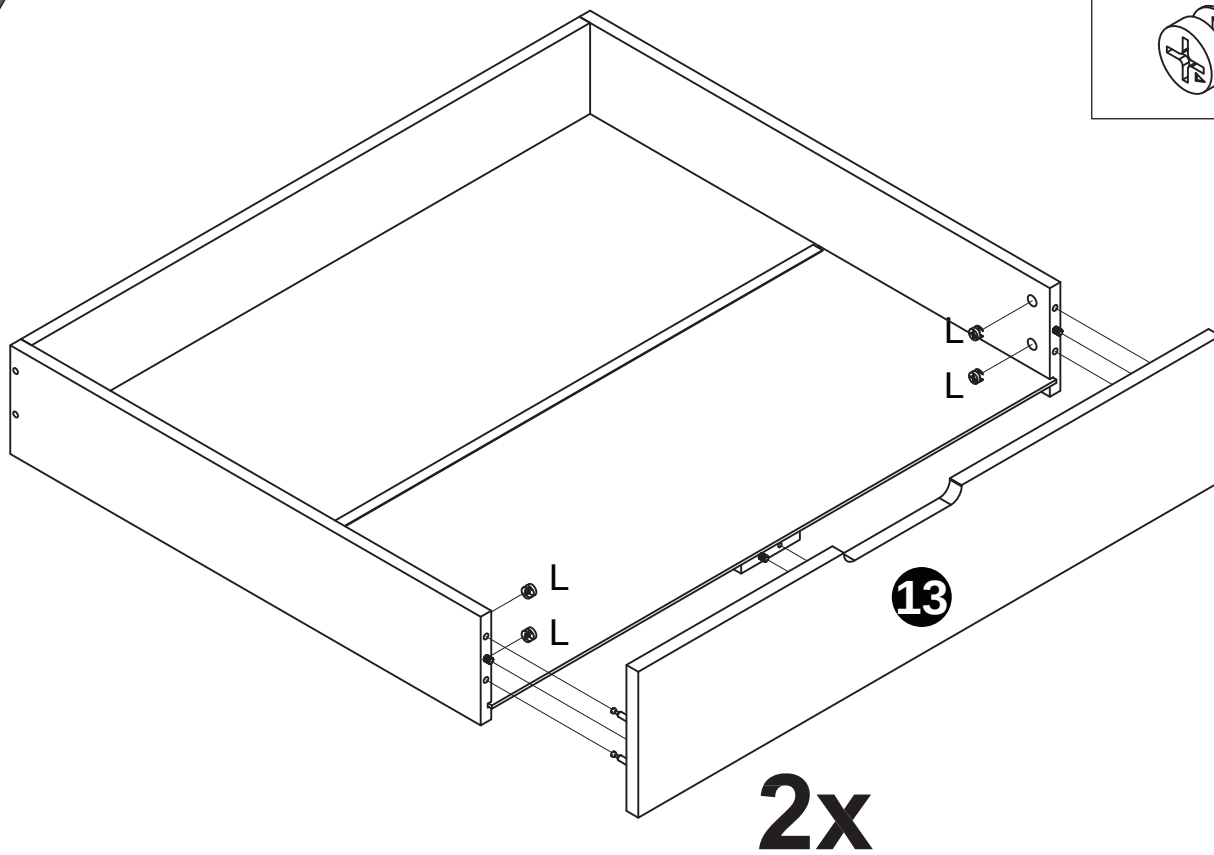

11

M x8



N x16



L x4

