




370-000020

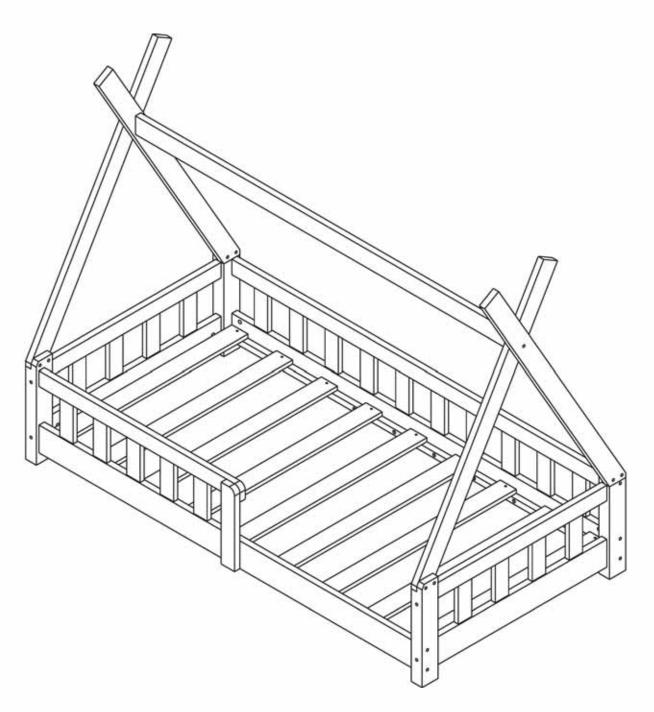

READ THE ASSEMBLY INSTRUCTIONS
CAREFULLY. IDENTIFY THE ELEMENTS
CONSTITUING YOUR PIECE OF FURNITURE
GROUP AND CHECK THE HARDWARE
FITTINGS.GET THE TOOLS NEEDED. CLEAR
SPACE TO WORK. PROCEED TO ASSEMBLE

NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME.KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE.IN THE EVENT OF QUERY.

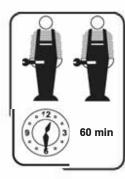

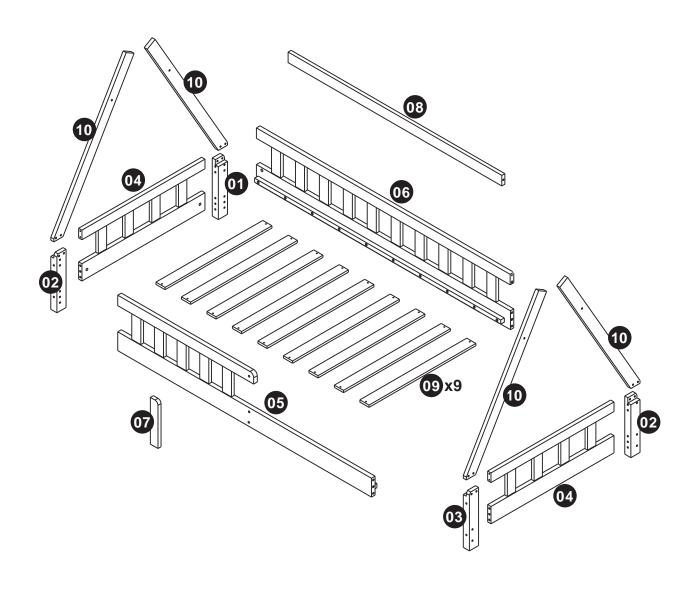

A x4	B x10	C x21	D x14	E x18
M6 x100mm				®‱‱ ∅4 x30mm
F x1	G x3	H x4	I x11	J x8
			9	0
Mary Mary	Ø6 x80mm	Ø6 x100mm	M6 x30mm	

