

ASSEMBLY INSTRUCTIONS












383-000016




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.


HARDWARE LIST			QTY (pcs)
DH8		Door Hinges 5/8	2
DW4		Wood Dowel 6 x 25mm	28
LG1		Leg Pin	4
MF2		Nail	25 (+/-3)
MN2		Mini Fix 15mm	4 Sets
PF2		Single Plastic Cap	8
SC3		Screw M3.5 x 14mm	40
SC18		Screw M4 x 38mm	8
SC25		FH Screw M5 x 40mm	12
SH4		Plastic Shelf Support with Steel Pin	12
SL3		Drawer Metal Slide 250mm	2 Sets

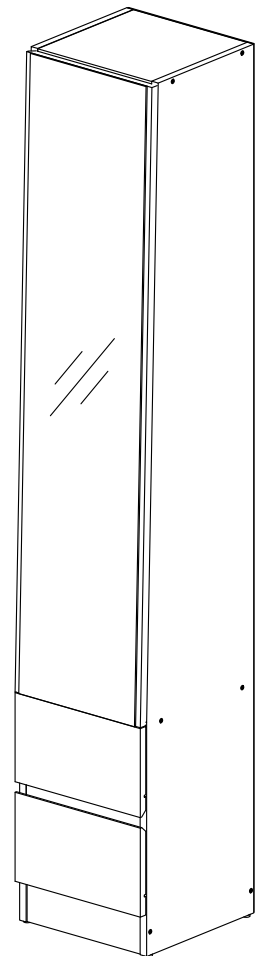

Parts List		QTY
A	Side Panel (L)	1 pc
B	Side Panel (R)	1 pc
C	Door Panel	1 pc
D	Drawer Front Panel (A)	1 pc
E	Drawer Front Panel (B)	1 pc
F	Drawer Side Panel (L)	2 pcs
G	Drawer Side Panel (R)	2 pcs
H	Top Panel	1 pc
I	Free Shelf Panel	3 pcs
J	Big Shelf Panel	1 pc
K	Drawer Back Board	2 pcs
L	Bottom Crossbar	2 pcs
M	Crossbar	1 pc
N	Mirror	1 pc
O	Backboard	1 pc
P	Drawer Bottom Panel	2 pcs

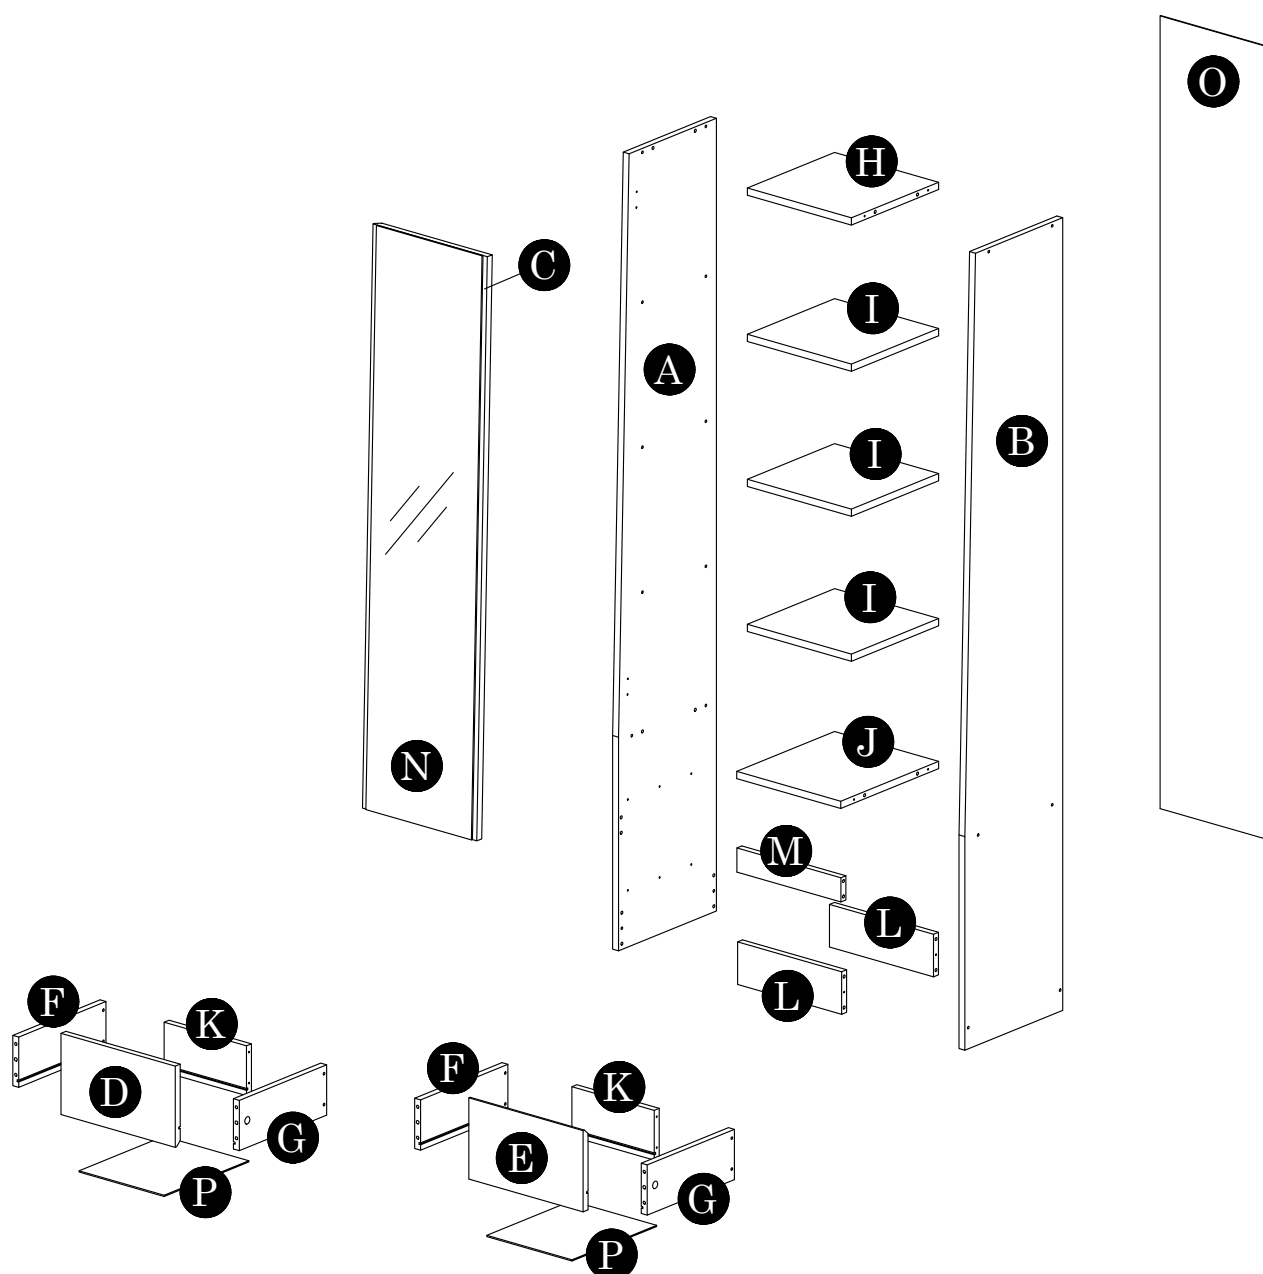


STEP 1

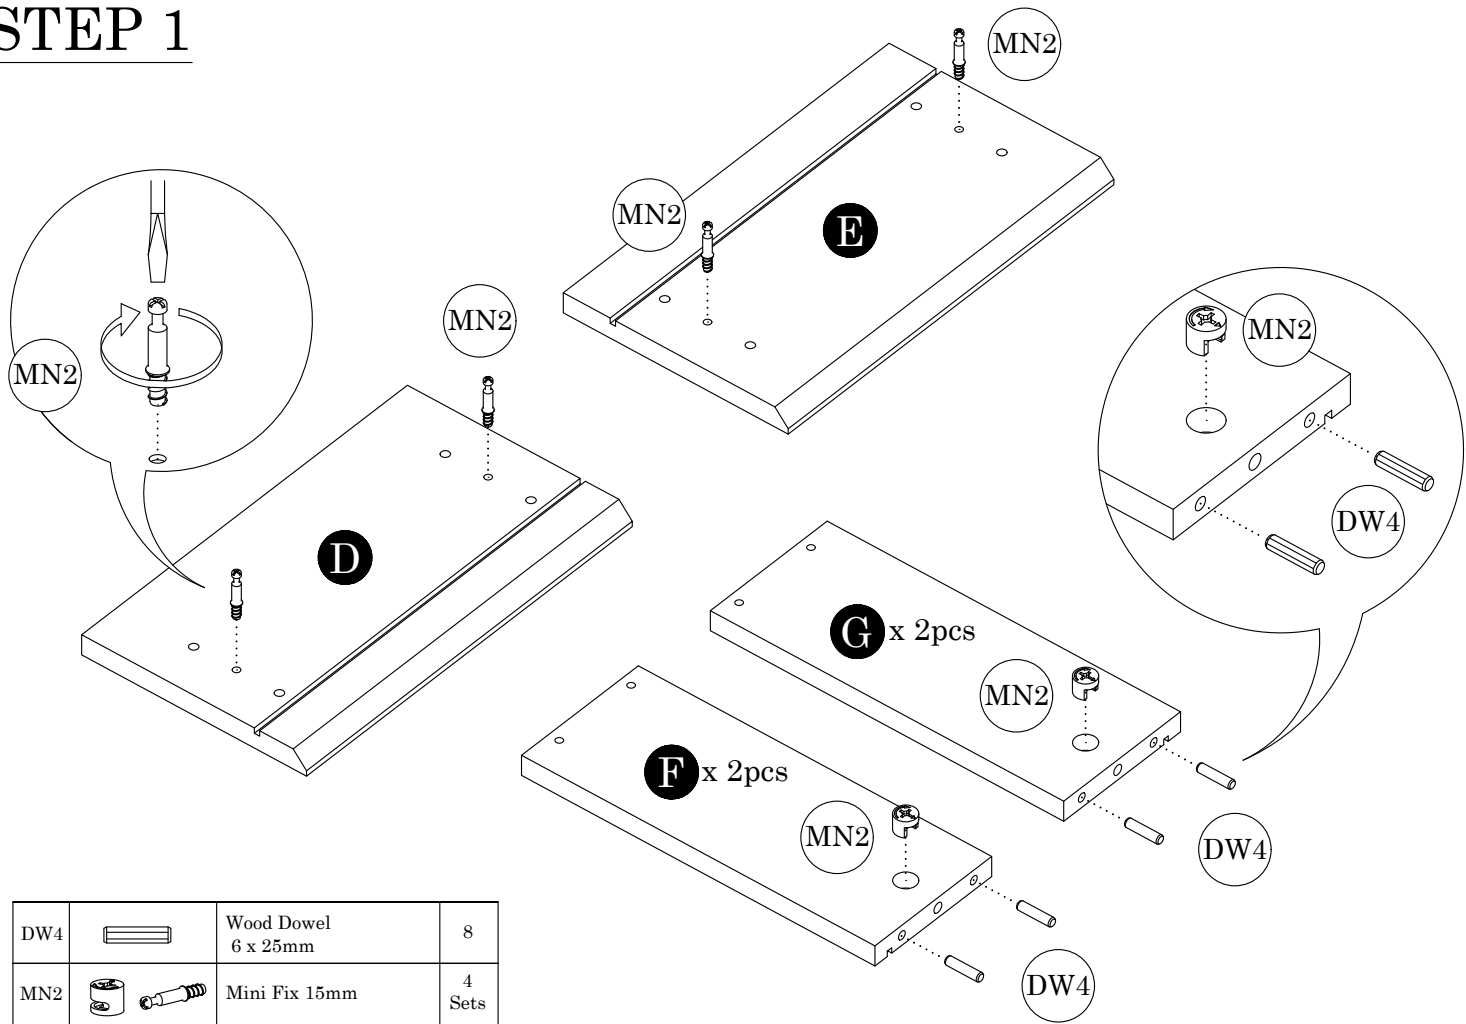


STEP 2


SC18		Screw M4 x 38mm	8
------	--	--------------------	---

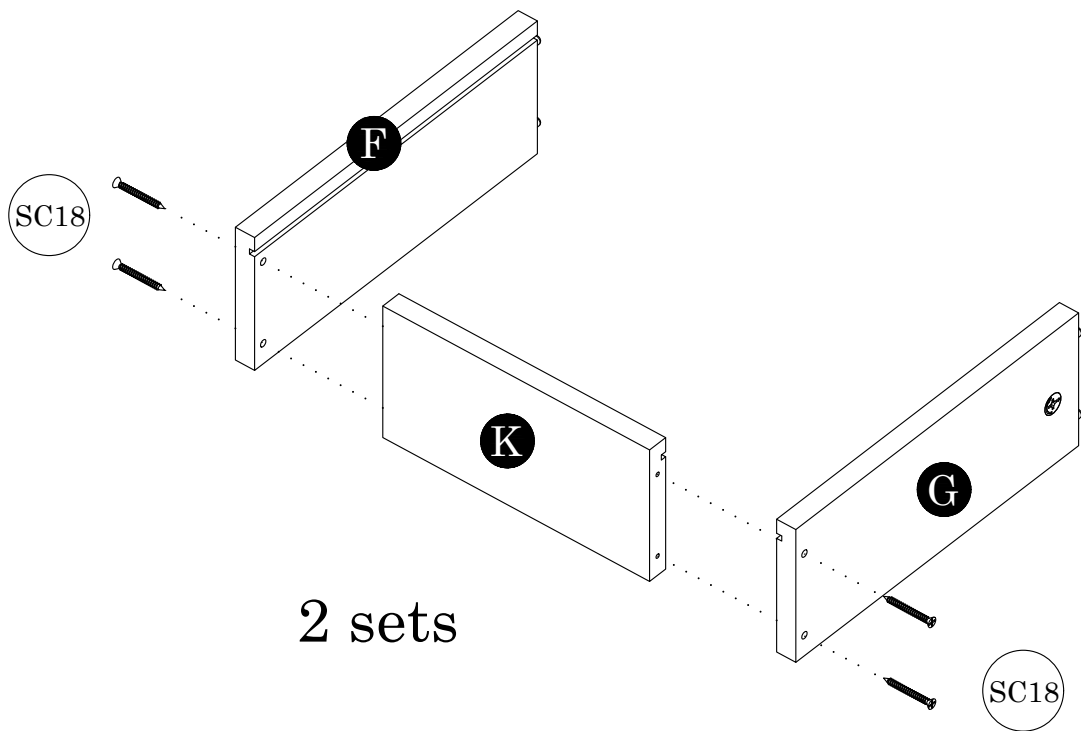




STEP 3

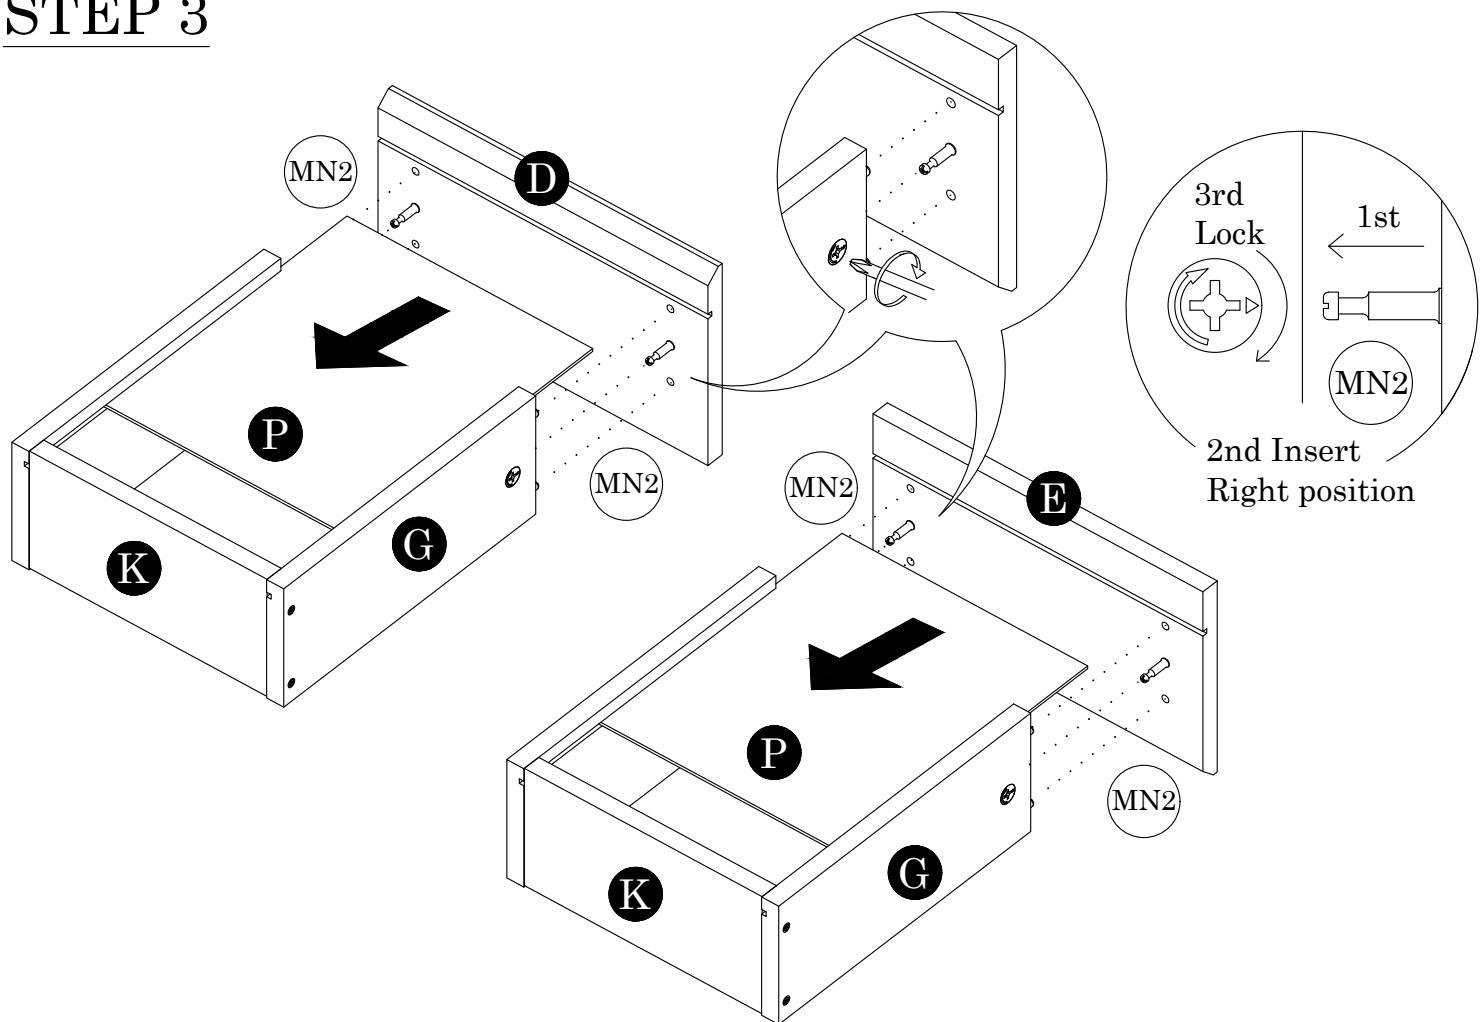

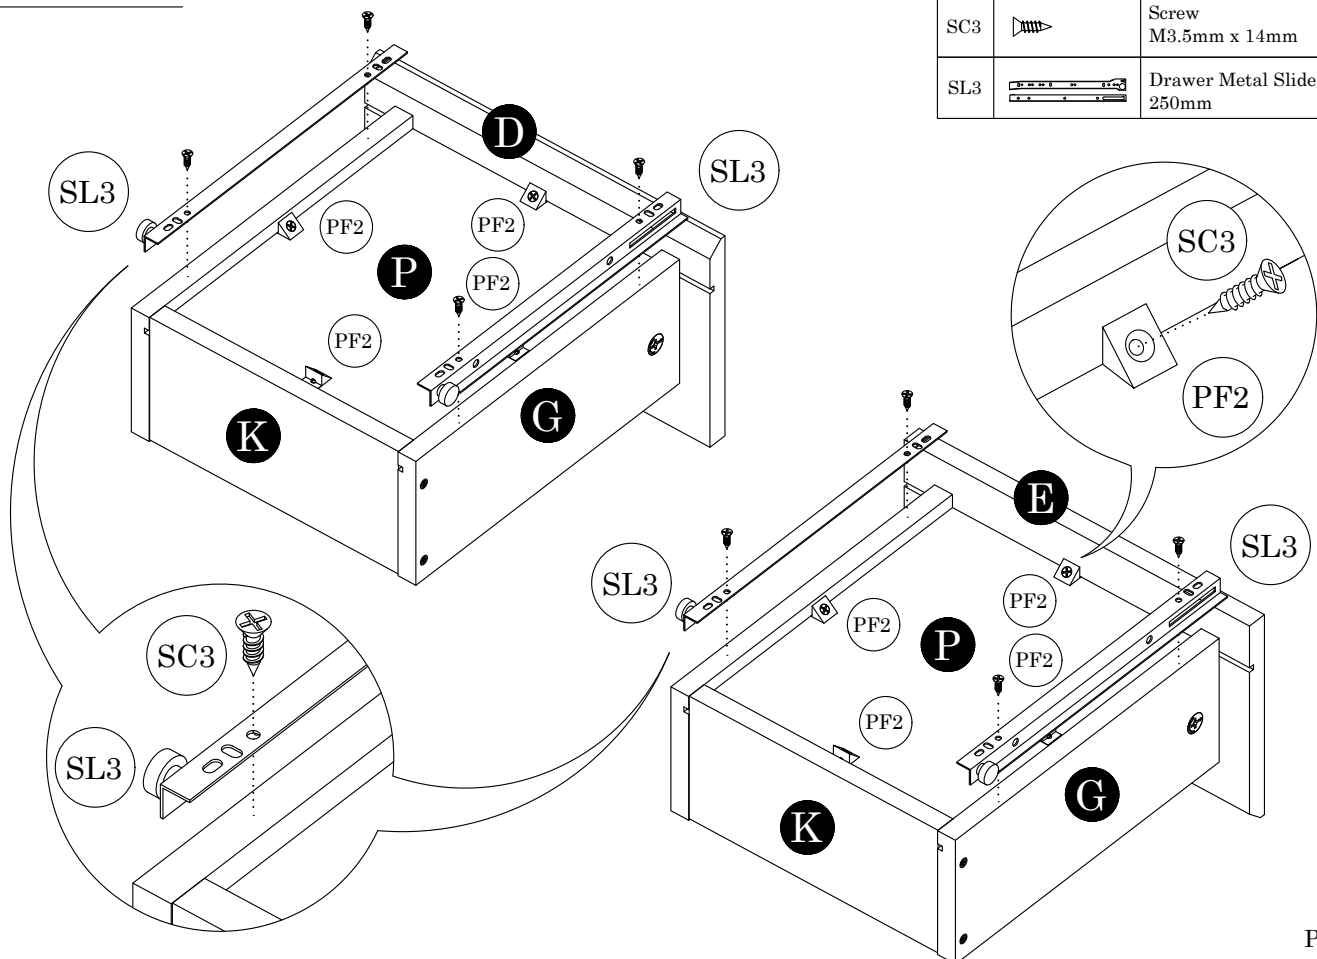



STEP 4






PF2		Single Plastic Cap	8
SC3		Screw M3.5mm x 14mm	16
SL3		Drawer Metal Slide 250mm	2 Sets

STEP 5

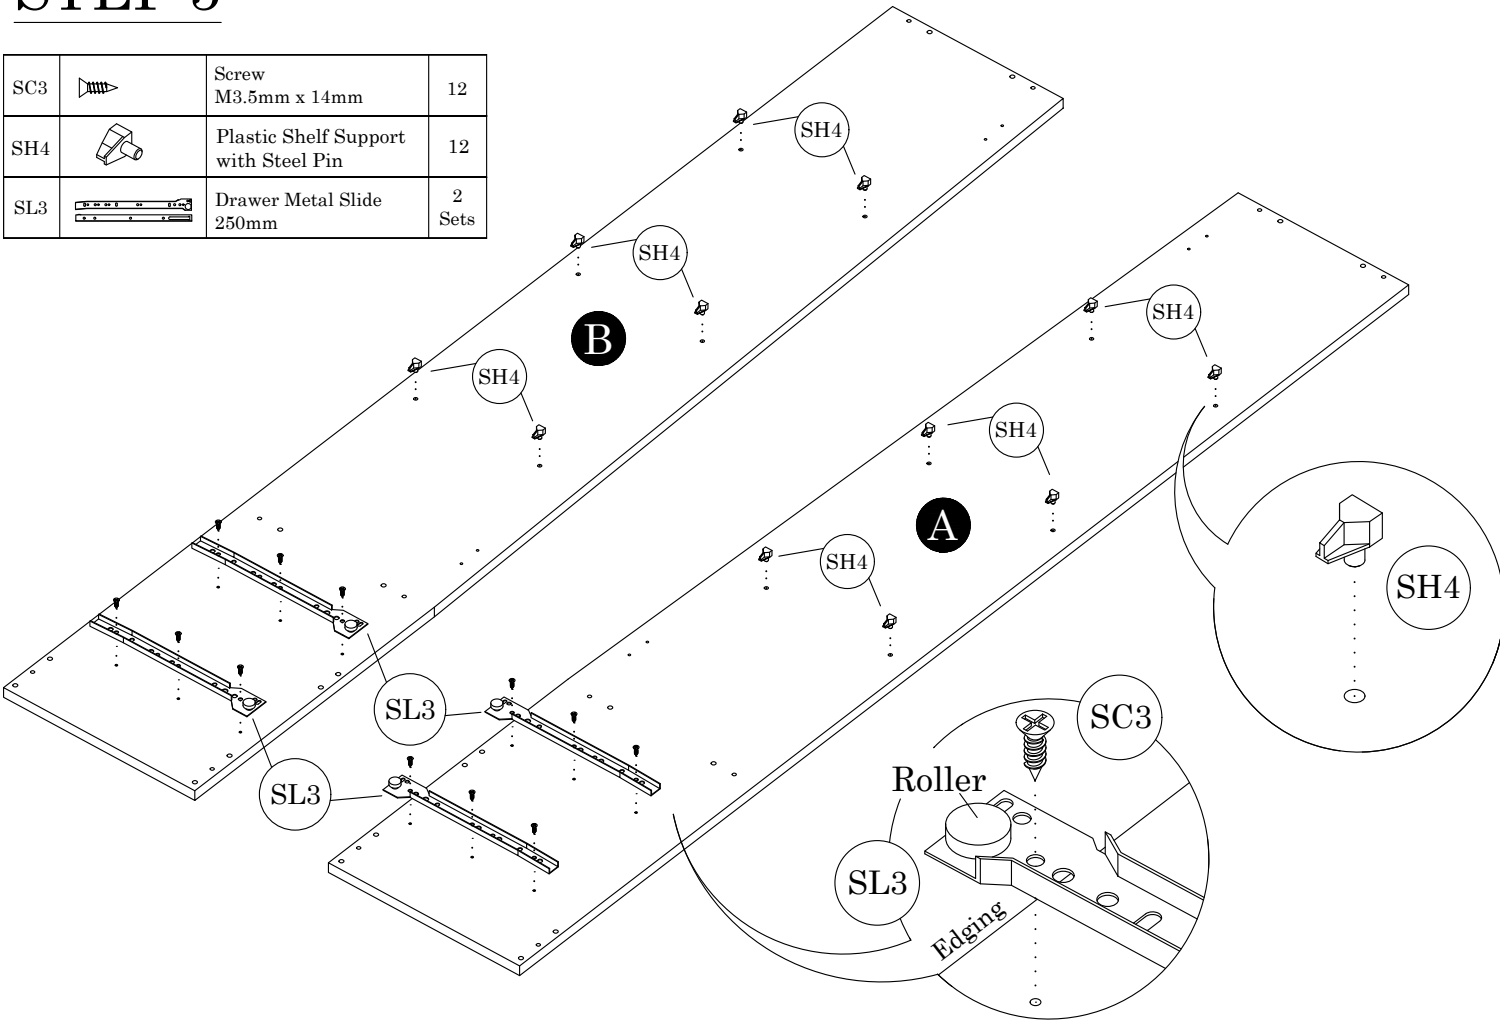
SC3		Screw M3.5mm x 14mm	12
SH4		Plastic Shelf Support with Steel Pin	12
SL3		Drawer Metal Slide 250mm	2 Sets




STEP 6

DW4		Wood Dowel 6 x 25mm	20
DH8		Door Hinges 5/8	2
SC3		Screw M3.5mm x 14mm	4


HANDLE WITH CARE
PANEL WITH MIRROR

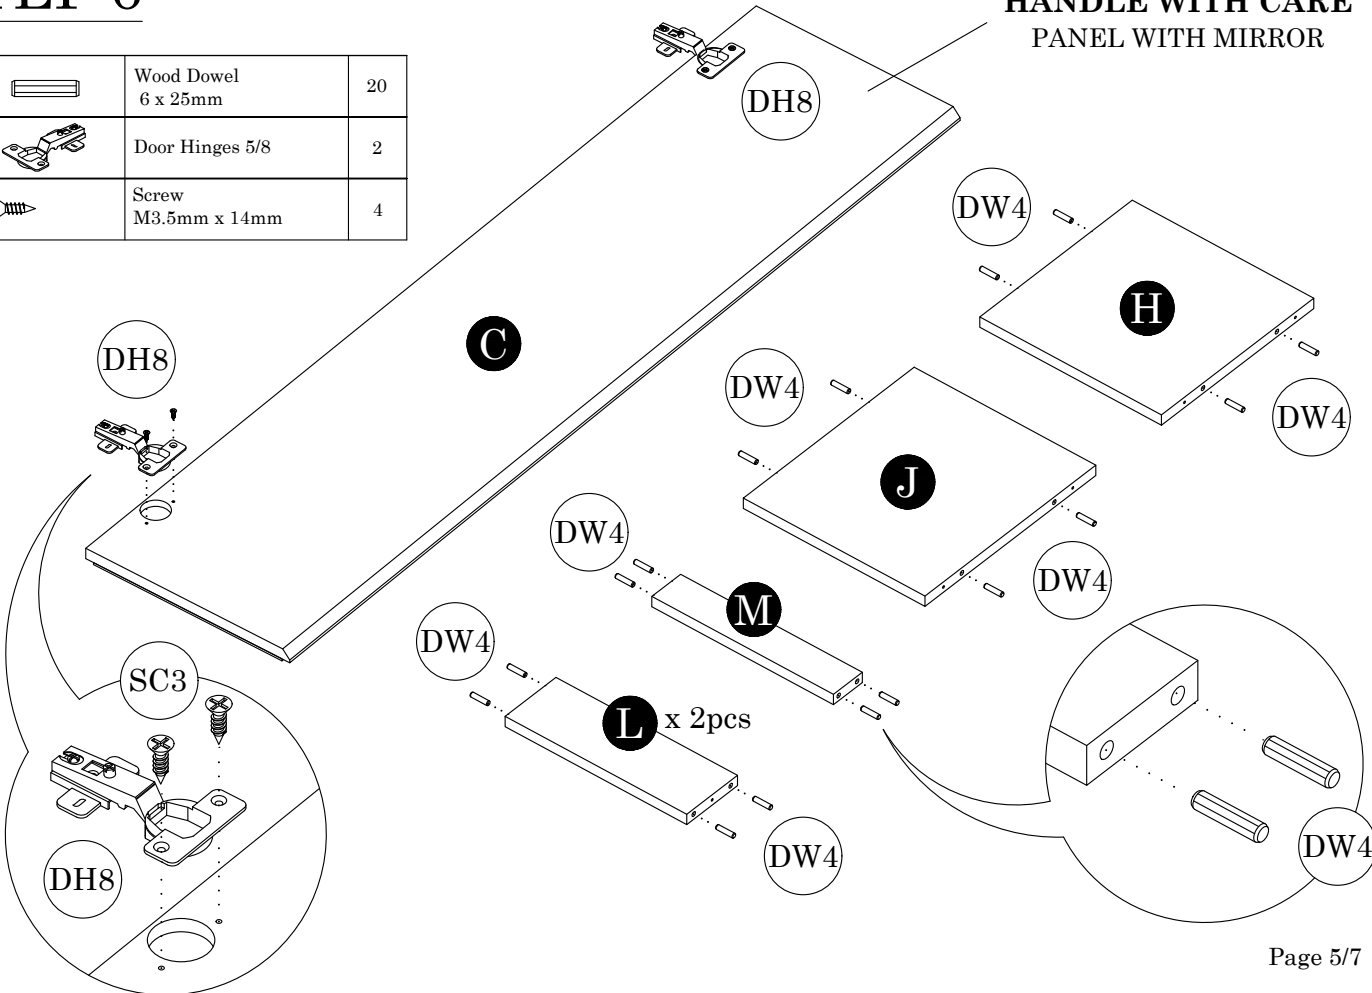

STEP 7

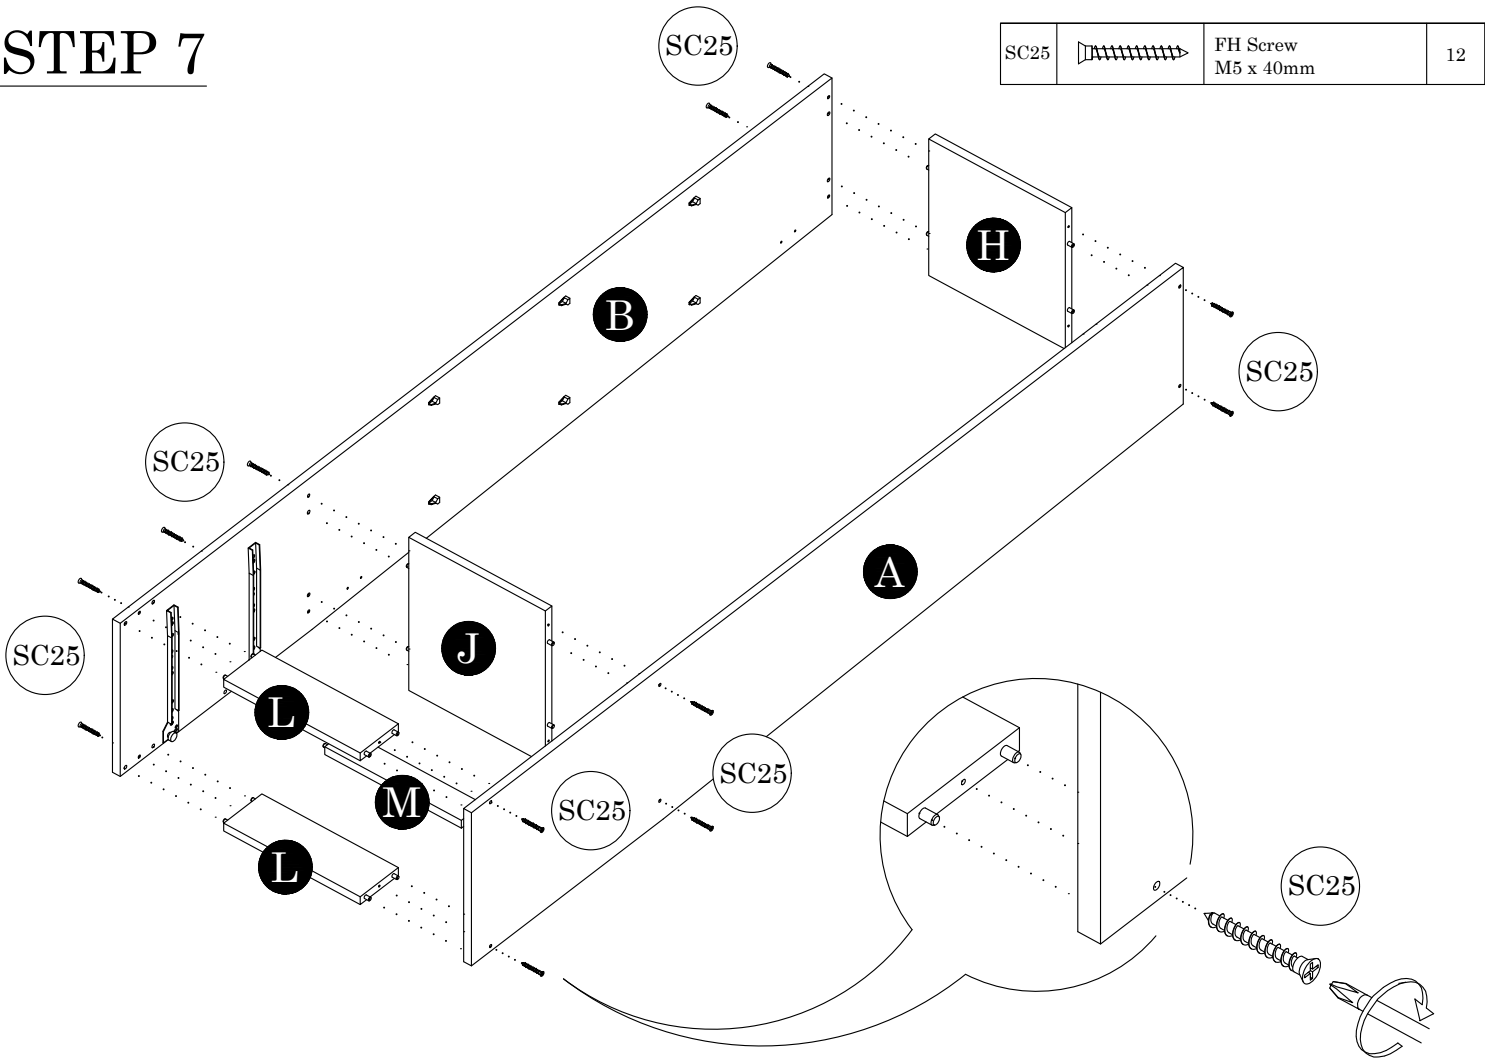


STEP 8

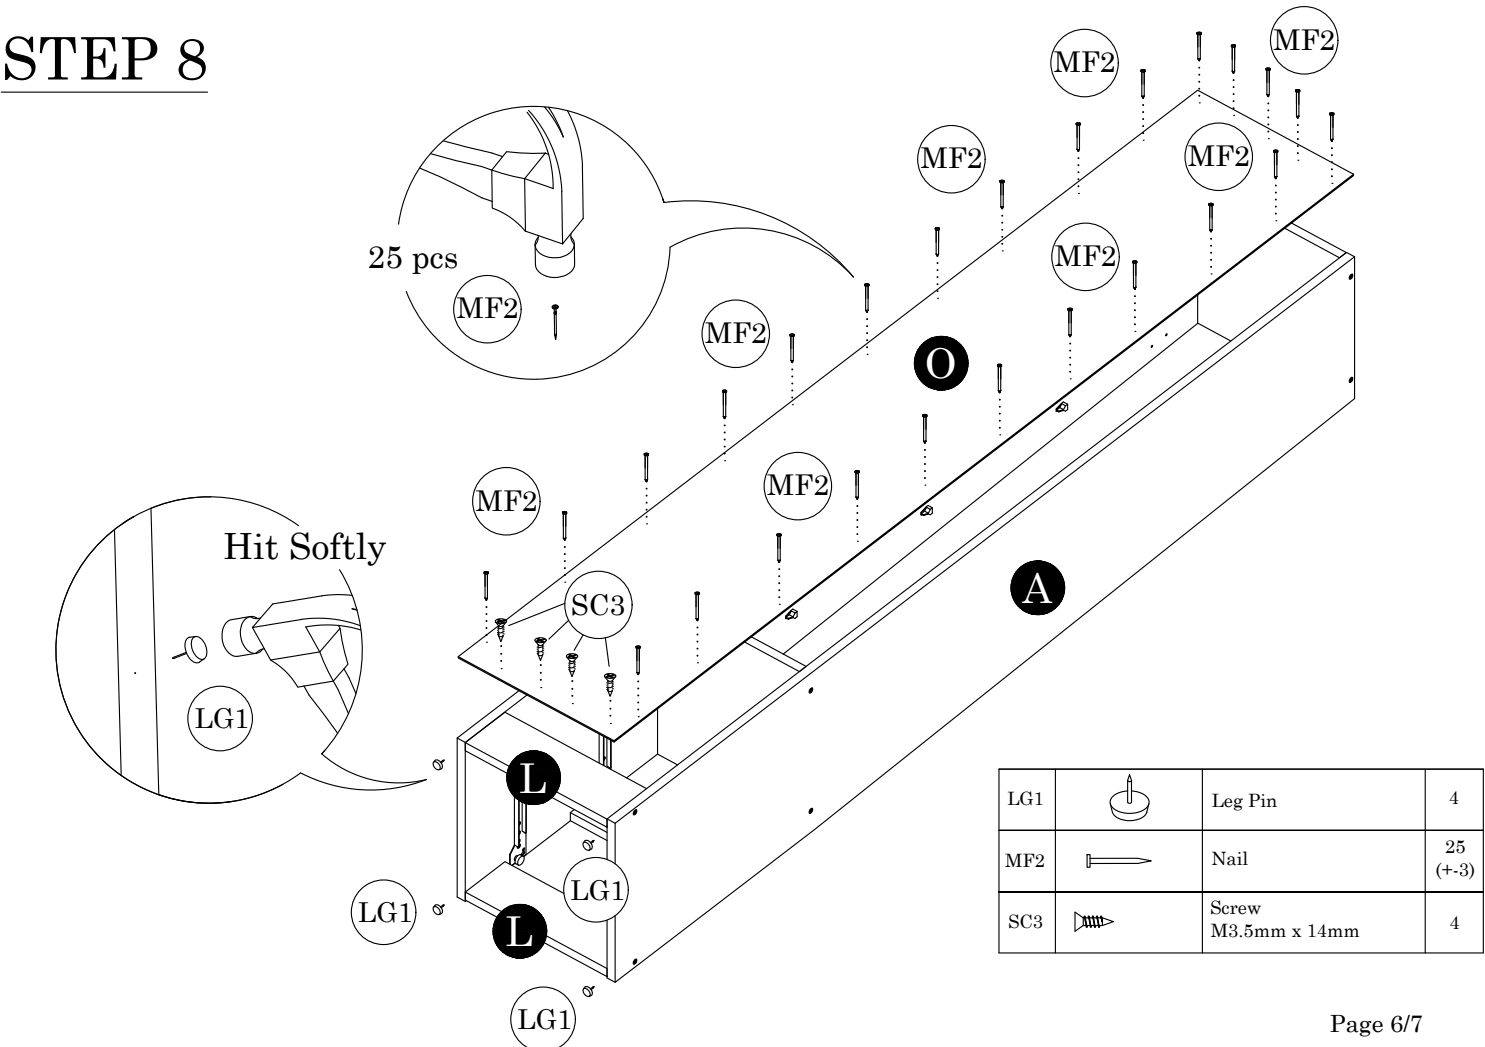


STEP 9

Insert 3pcs
free shelf panels

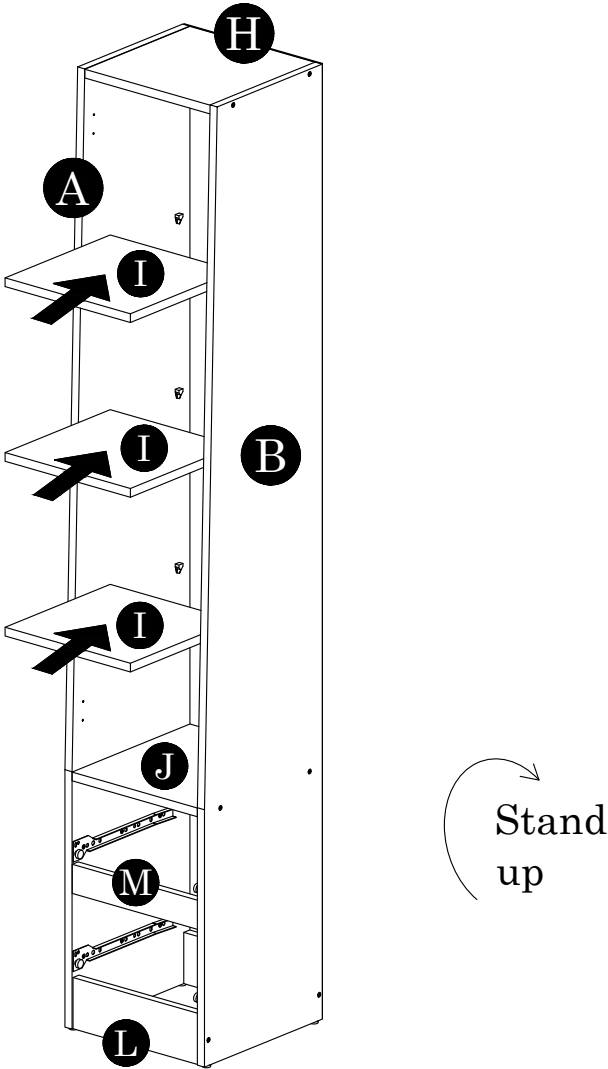

STEP 10

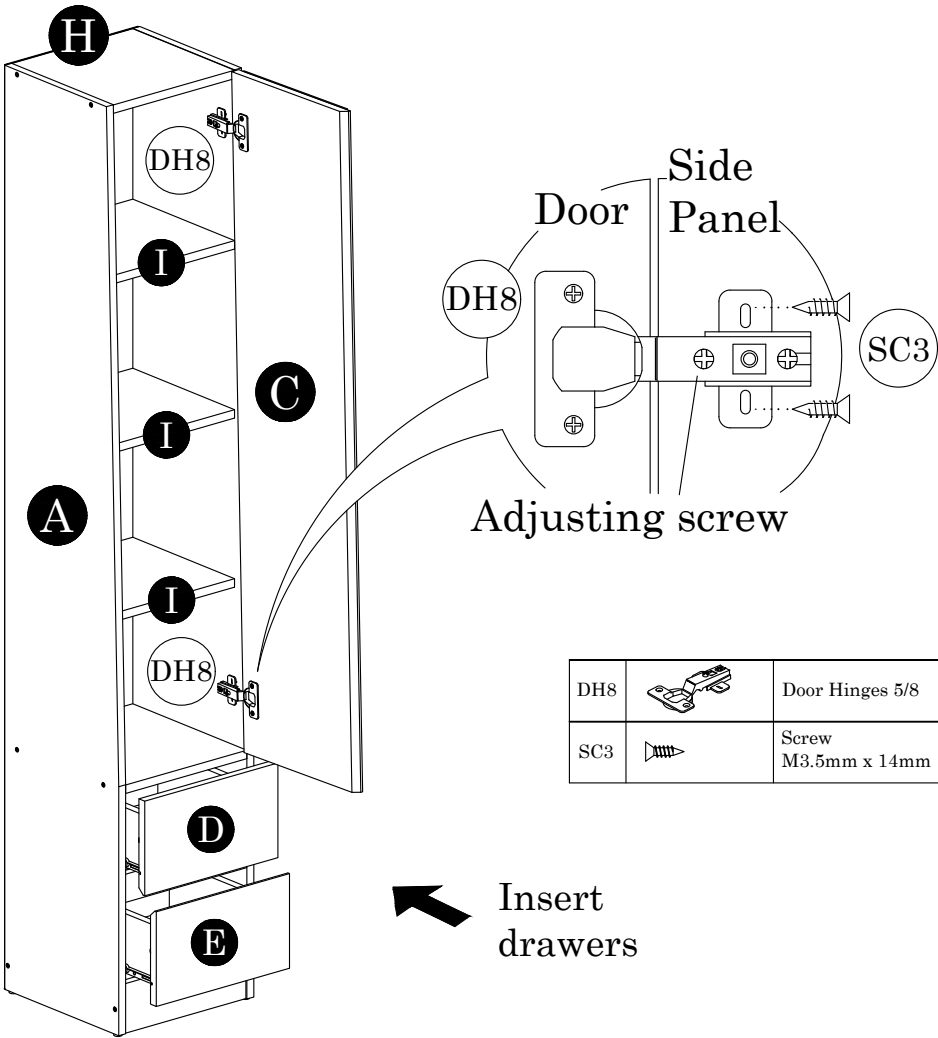

DH8		Door Hinges 5/8	2
SC3		Screw M3.5mm x 14mm	4